



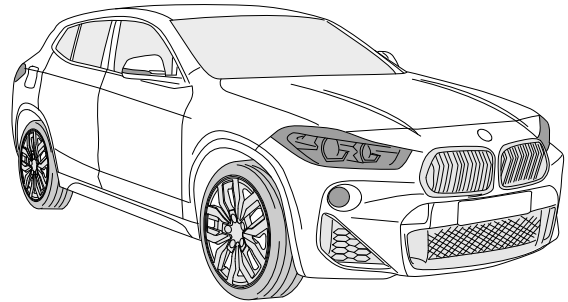

ERICH JAEGER

# Installation instructions

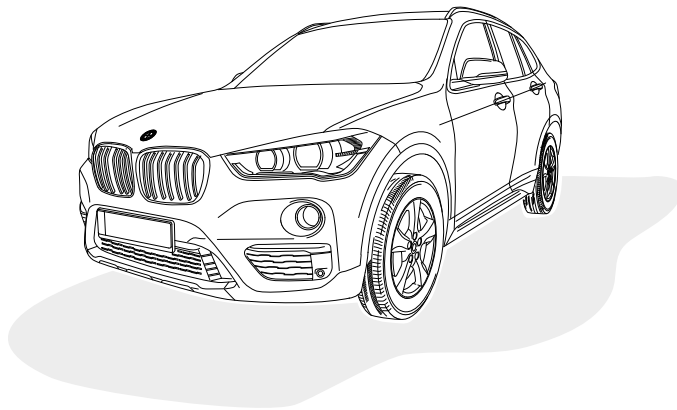

## 750121

**BMW X1 F48**





**10/15 >>**

**BMW X2 F39**

**03/18 >>**




SCAN FOR  
LATEST  
INSTRUCTIONS

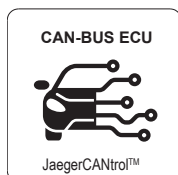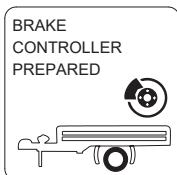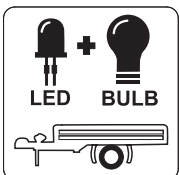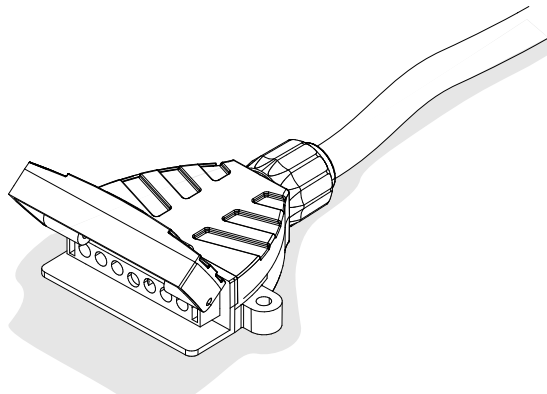


### Reference:

The following information must be reviewed before beginning the assembly:


- The installation instructions are to be thoroughly read.
- The installation should be carried out by qualified personnel with the relevant technical knowledge.
- The vehicle manufacturers' current technical notices and information on retrofitting must be followed.
- The removal and replacement instructions found in the current repair manuals must be followed.
- It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.

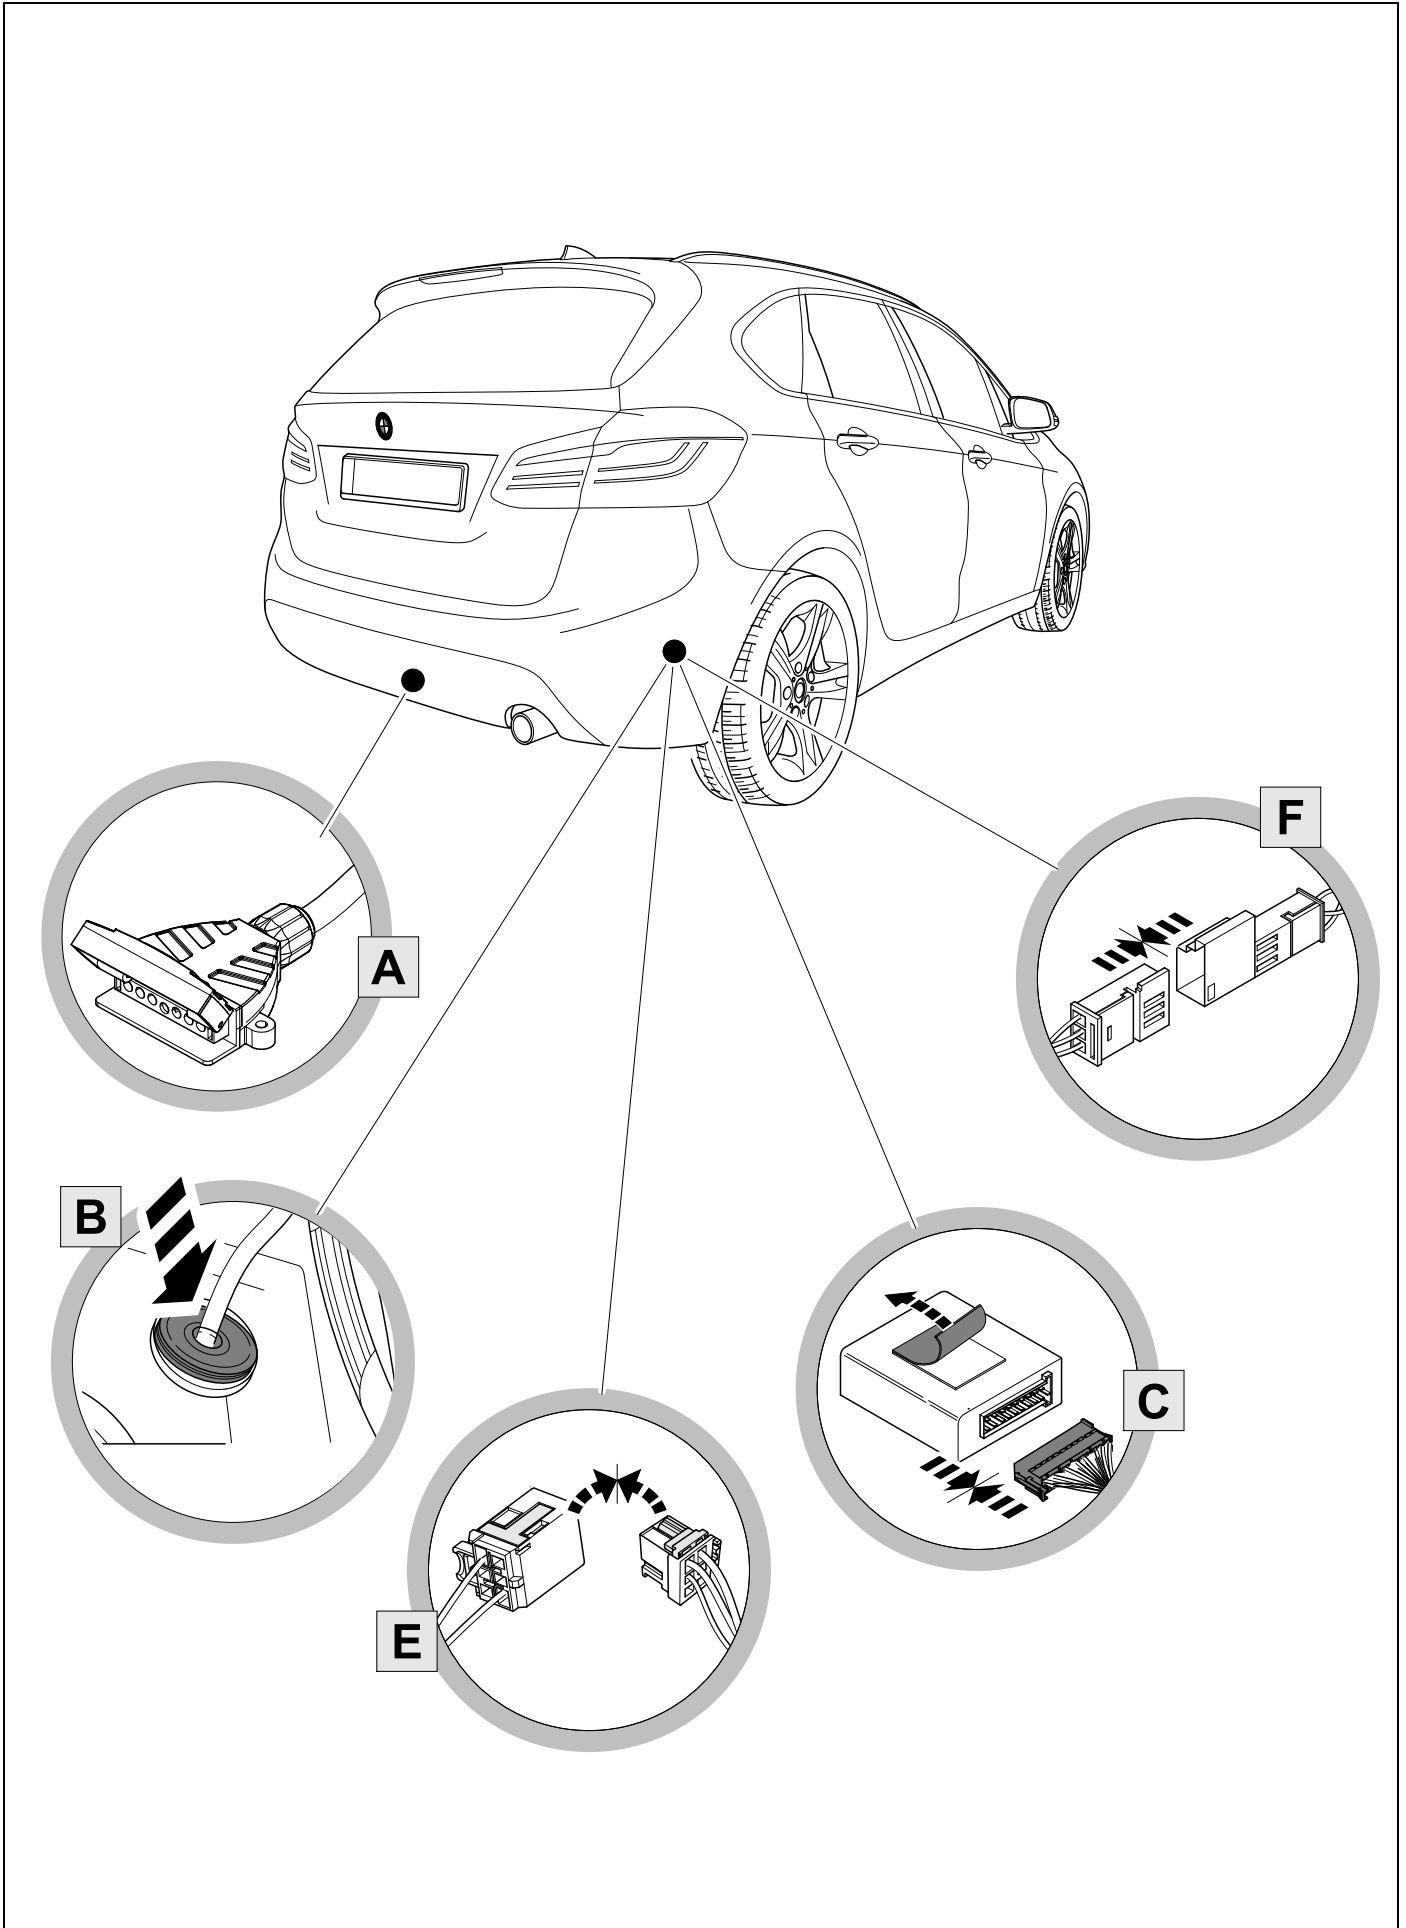


# KIT

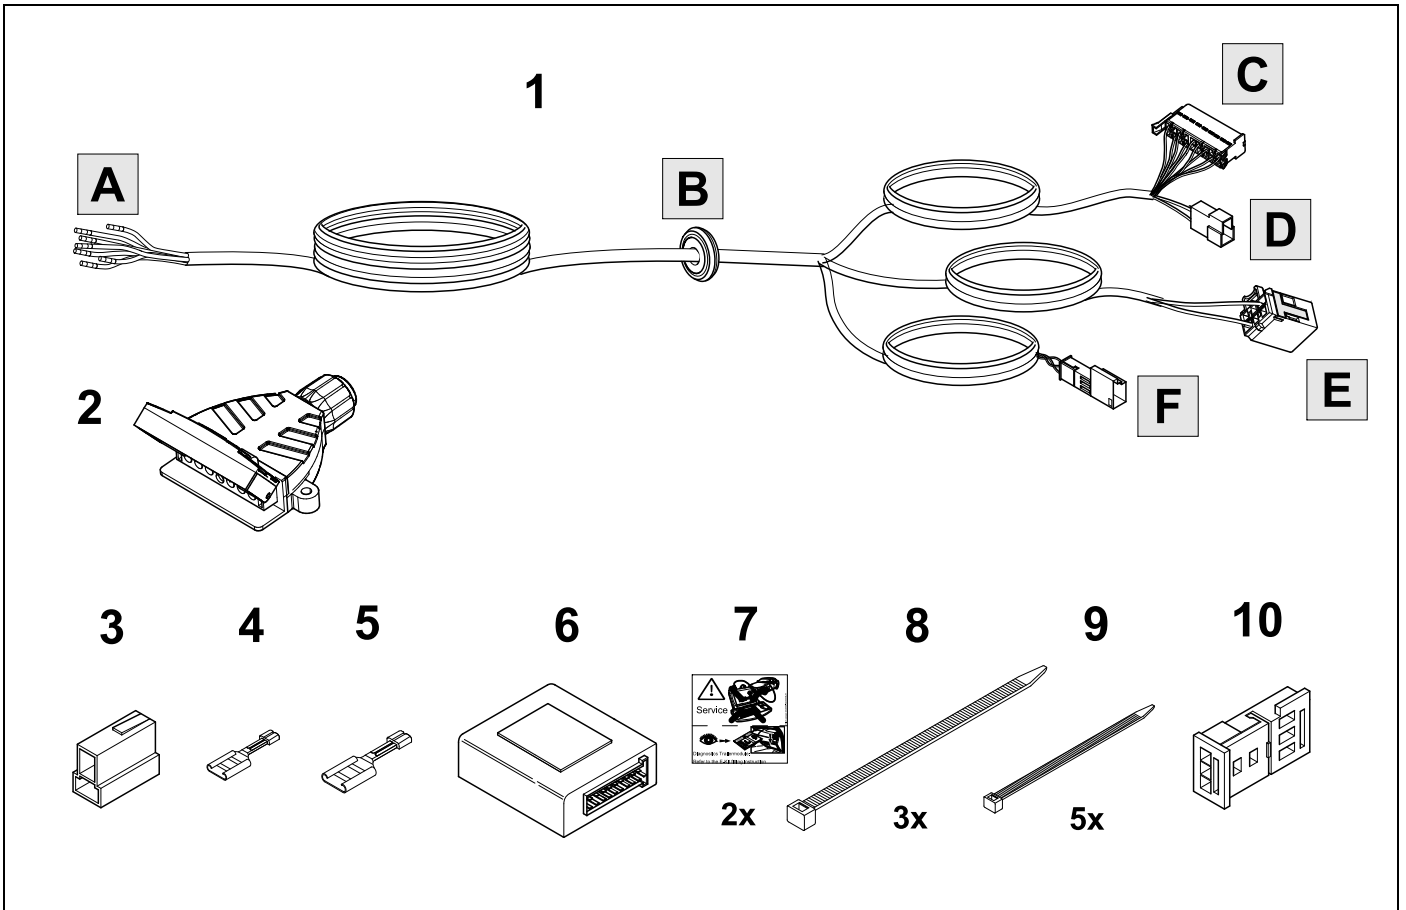


# TOOLS

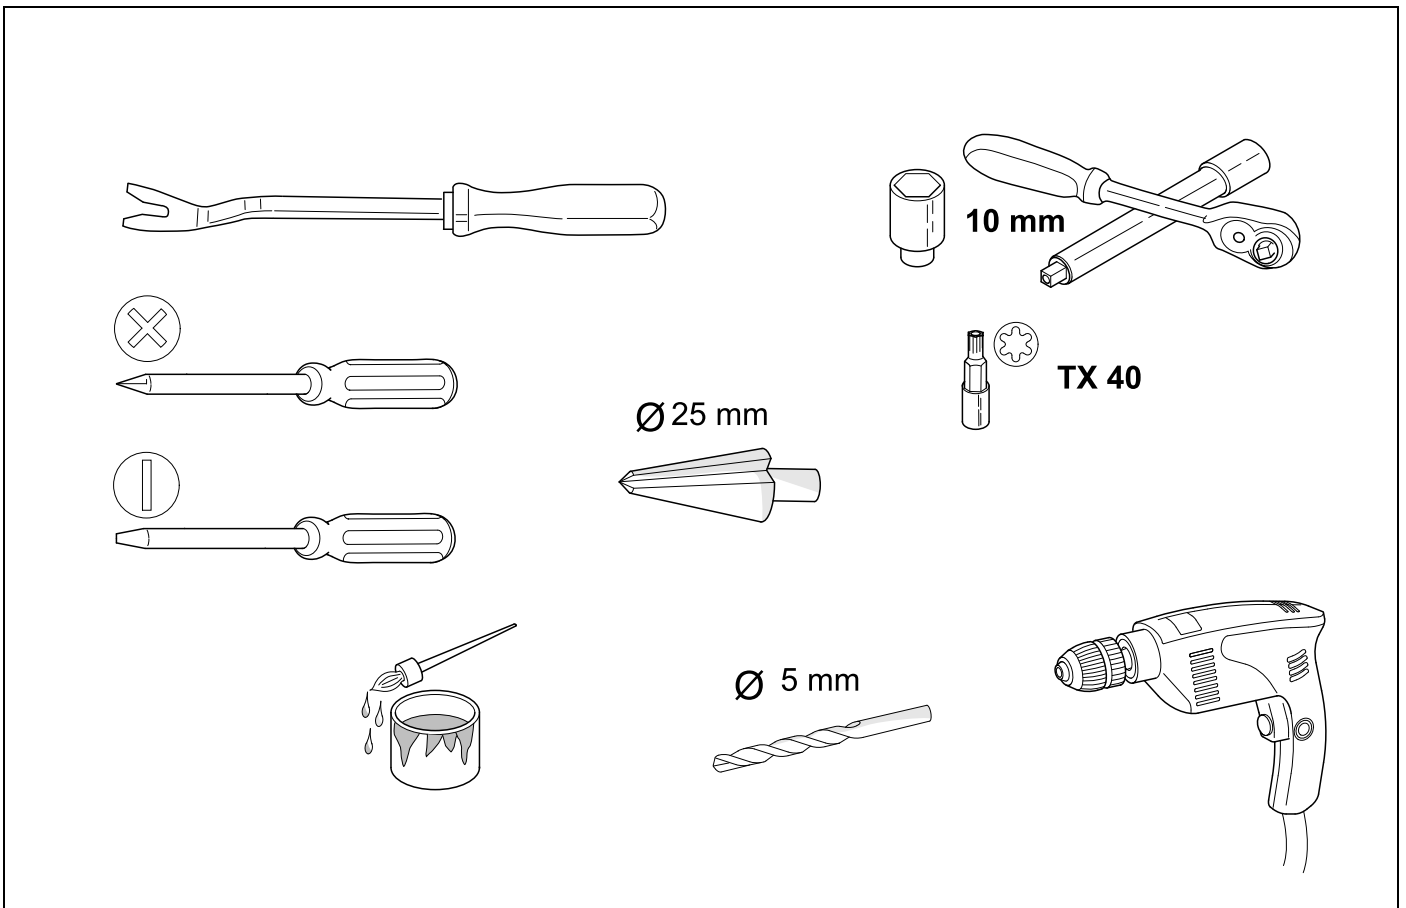


1

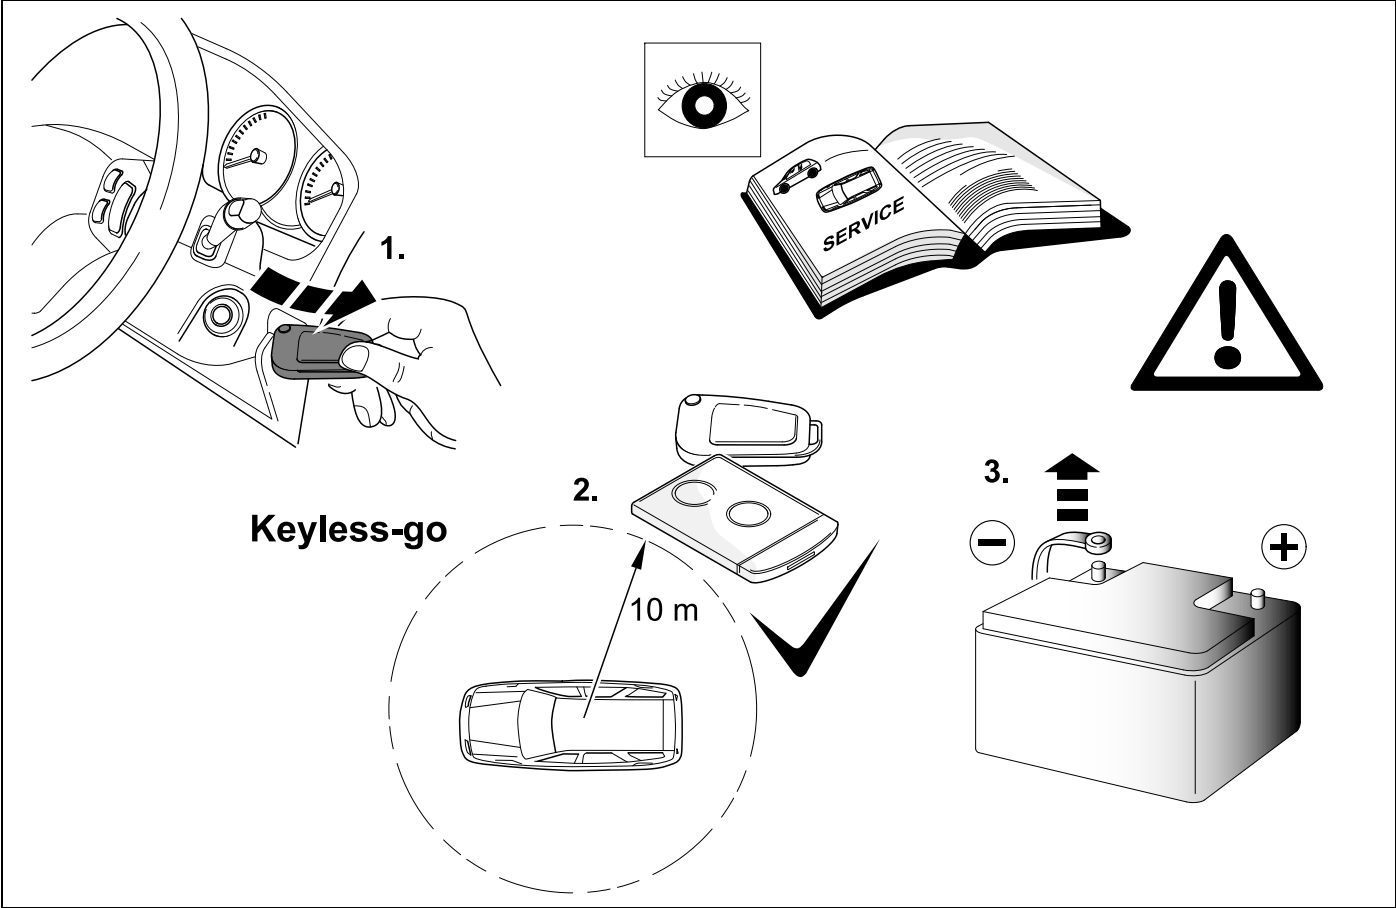

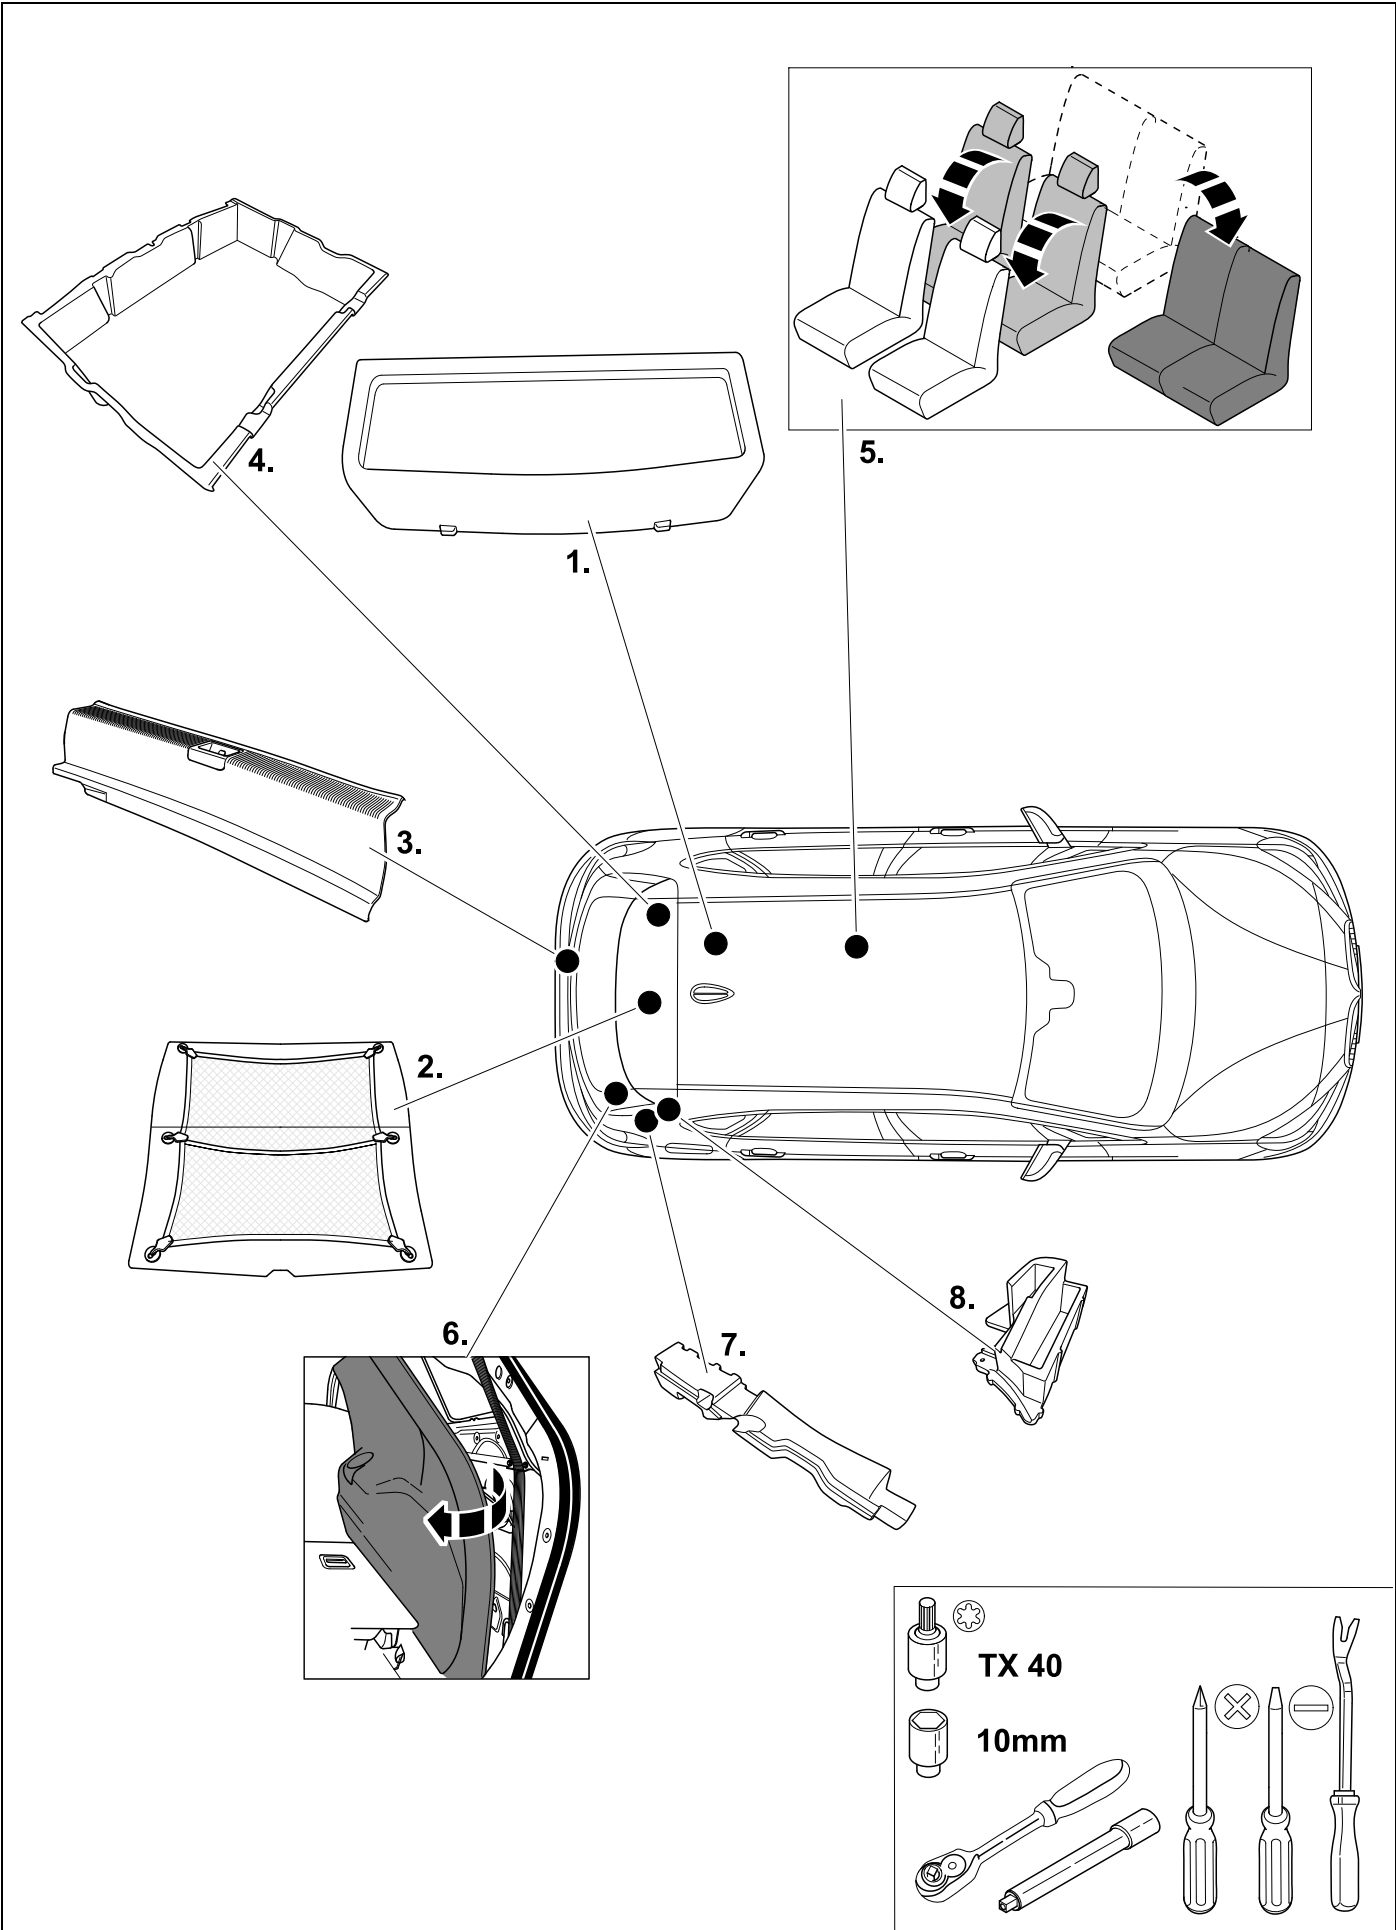


3

# BMW X1

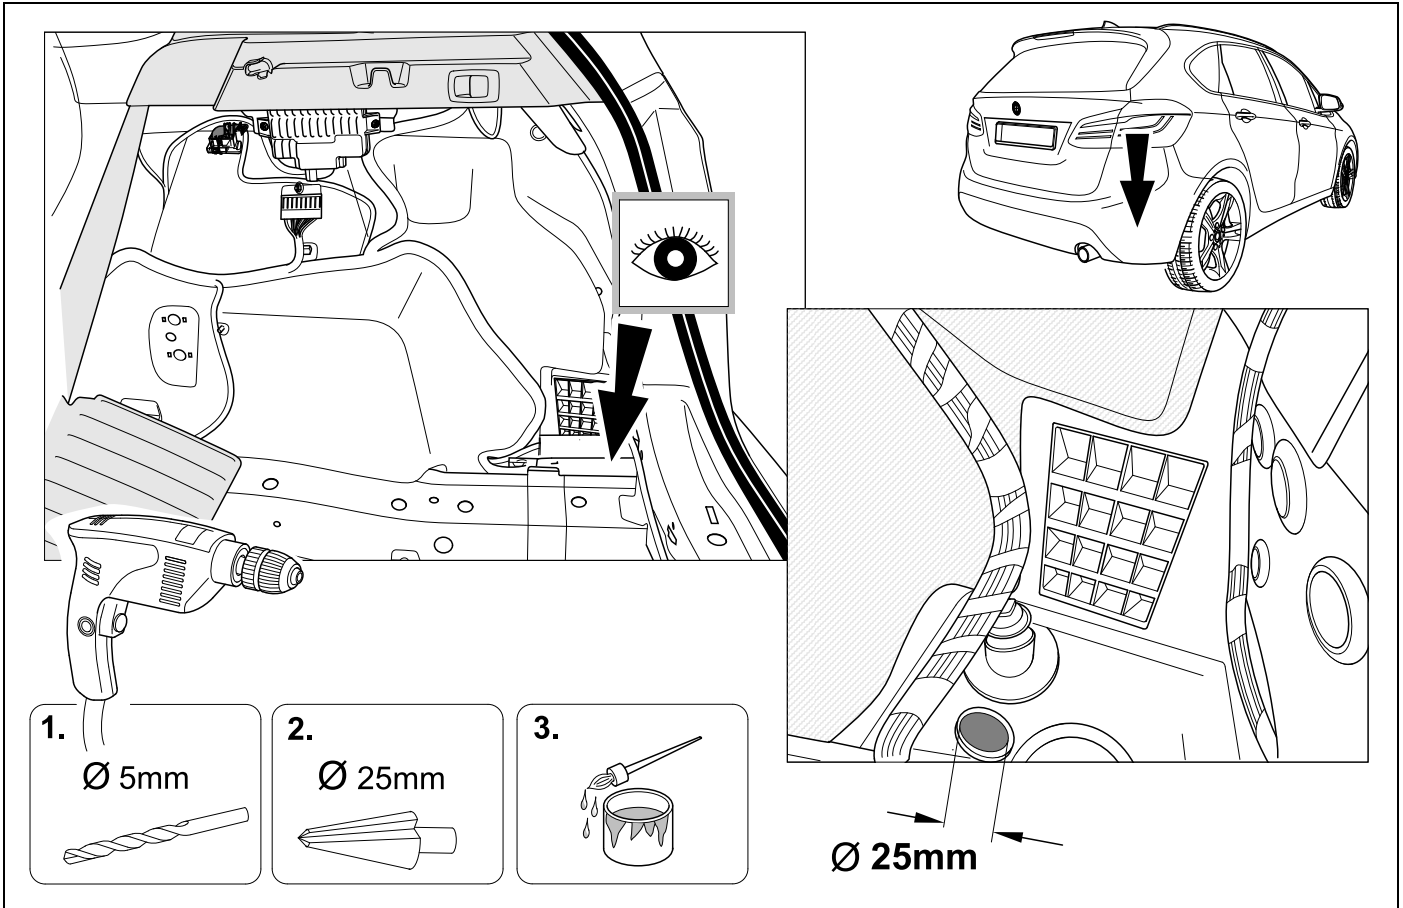


4

# BMW X1

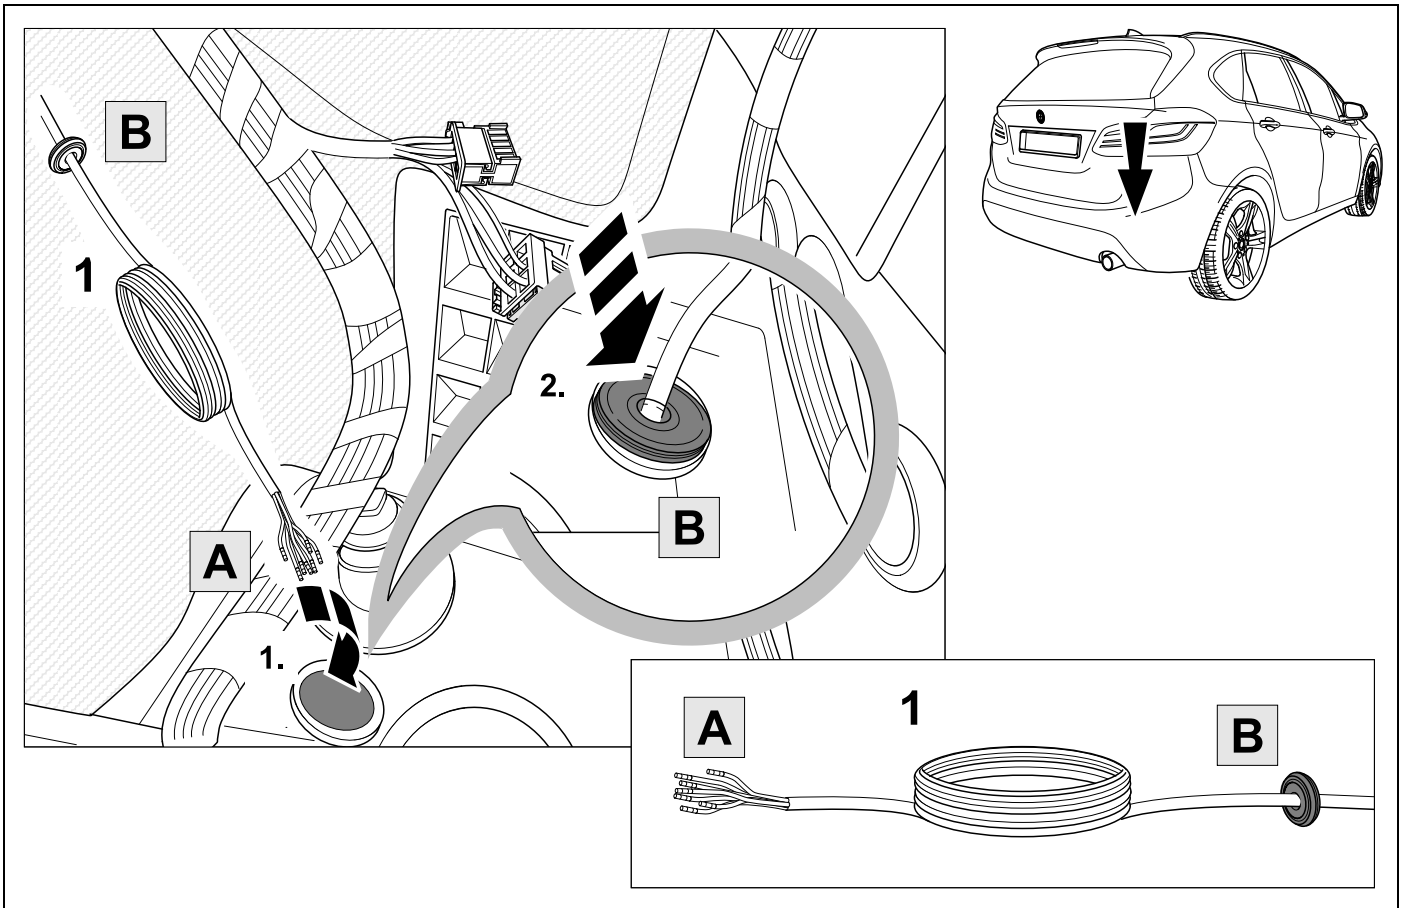



5

# BMW X2

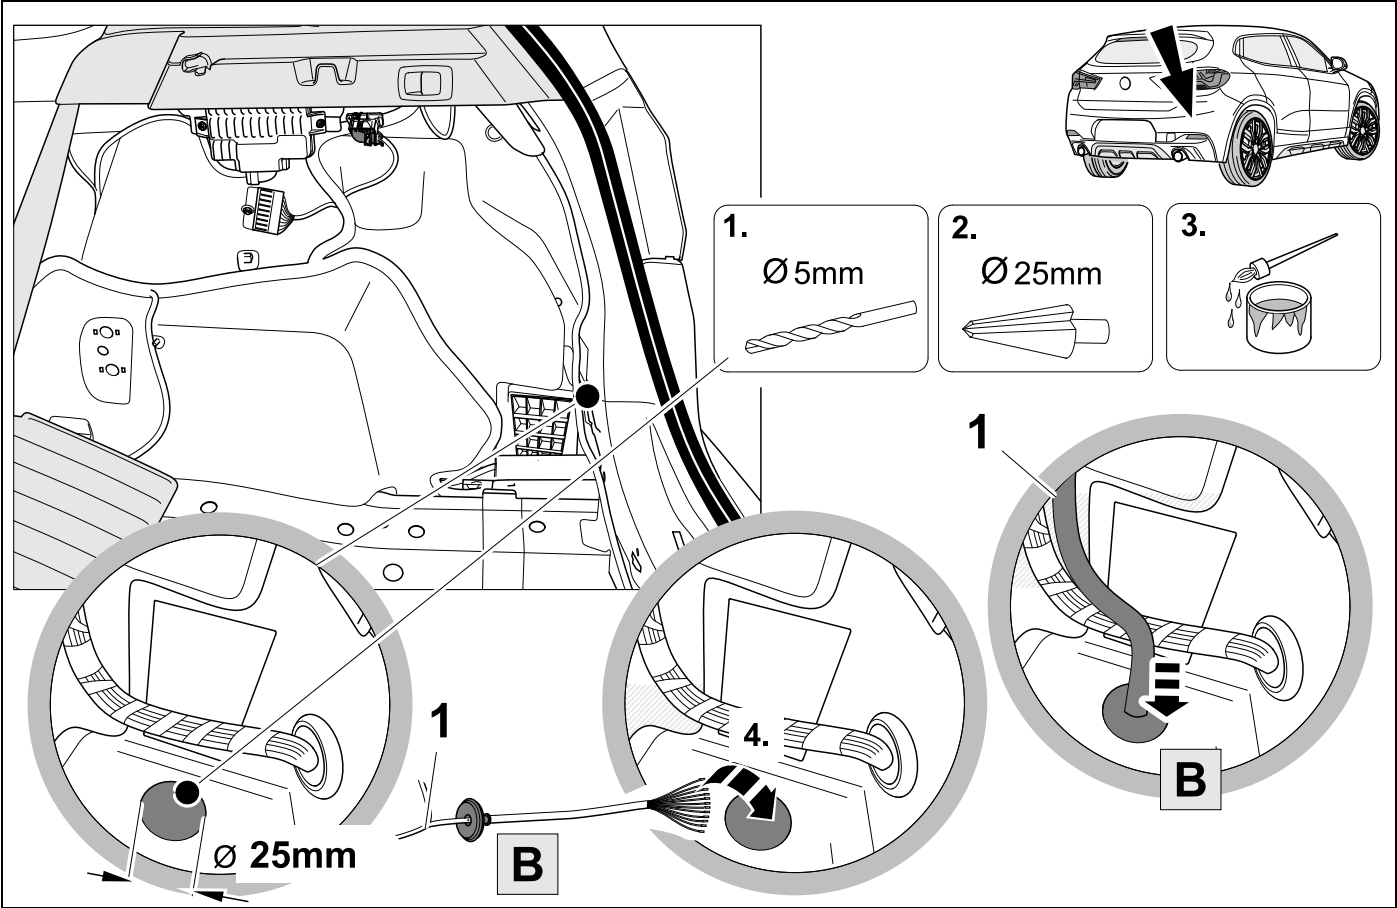


6

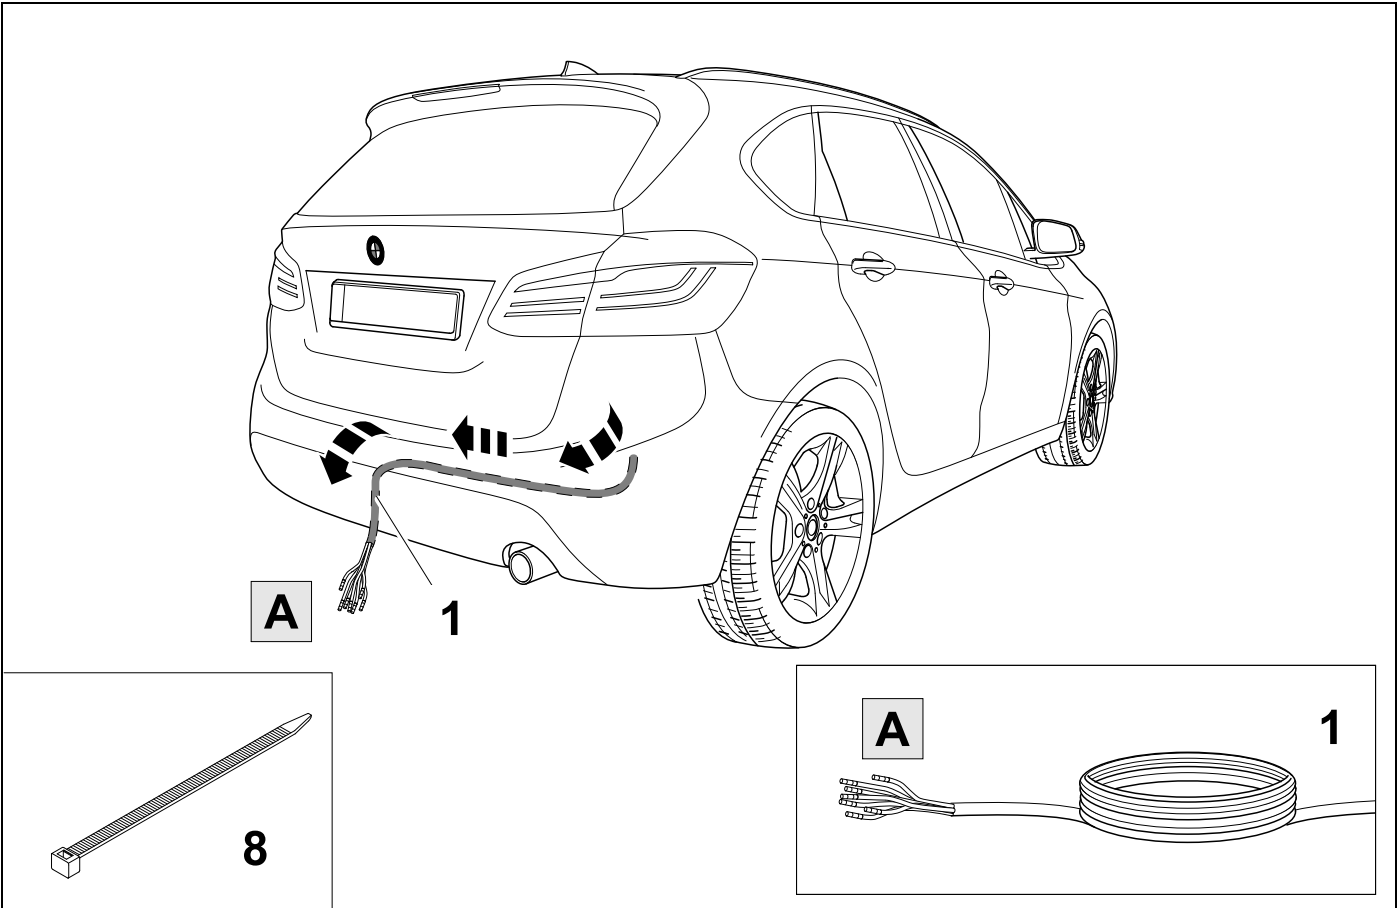

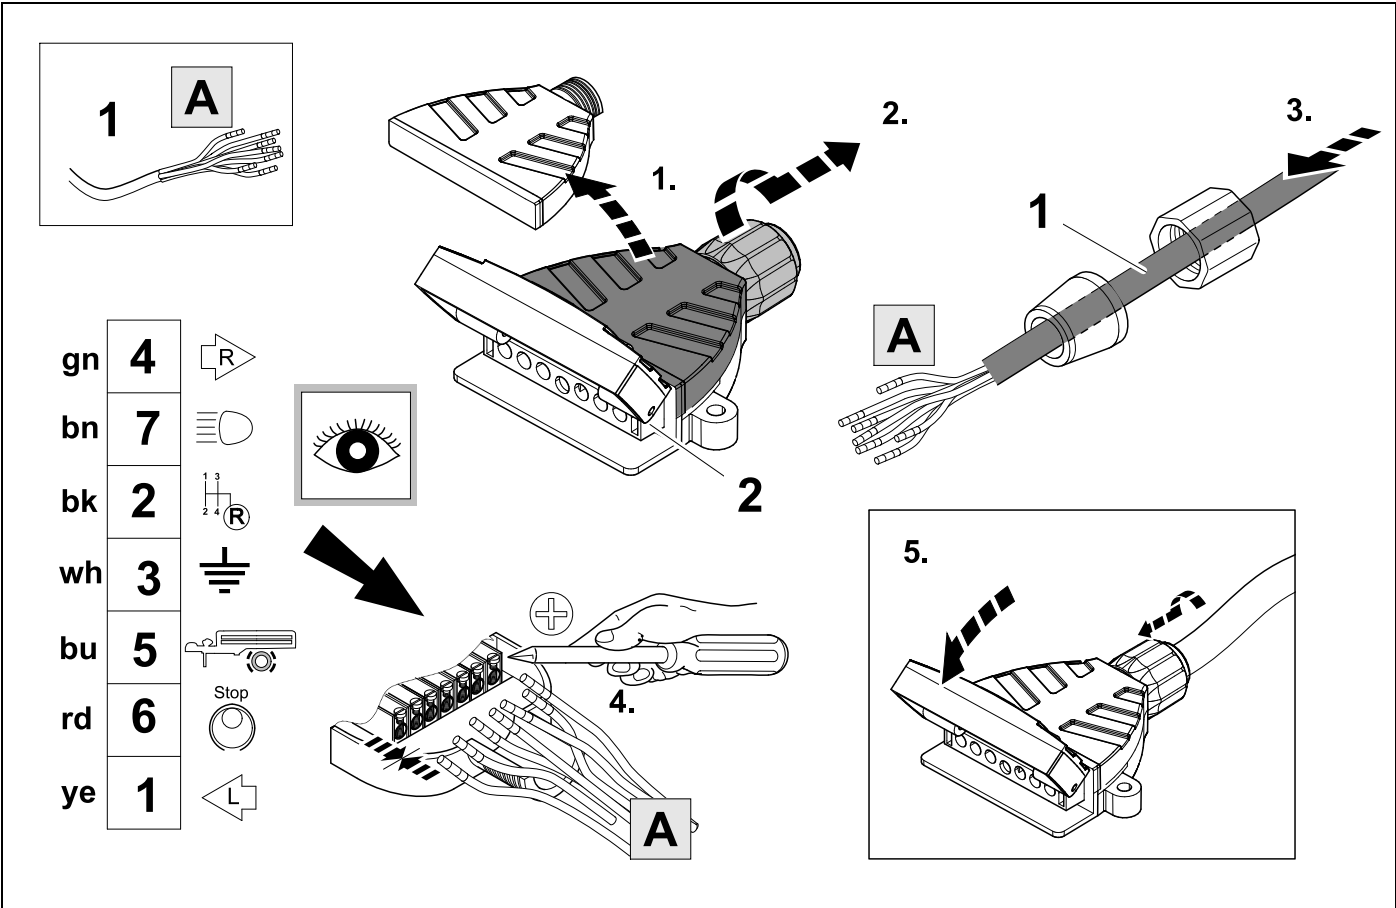



8

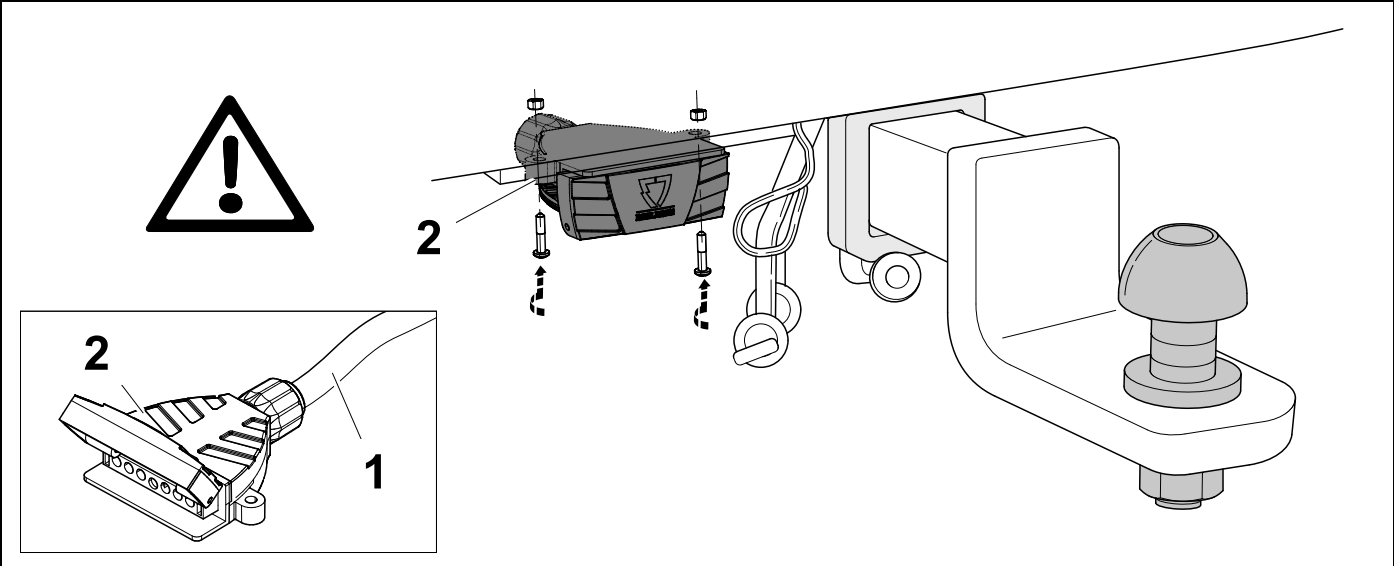

9




1	ye	←
2	bk	1 3 2 4 (R)
3	wh	⏏
4	gn	→
5	bu	⏏
6	rd	Stop ⏏
7	bn	⏏

10	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
----	----	----	----	----	----	----	----	----	----	----	----


(GB)	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied
------	-------	-------	------	-------	-----	------	--------	-------	--------	--------	--------------

11

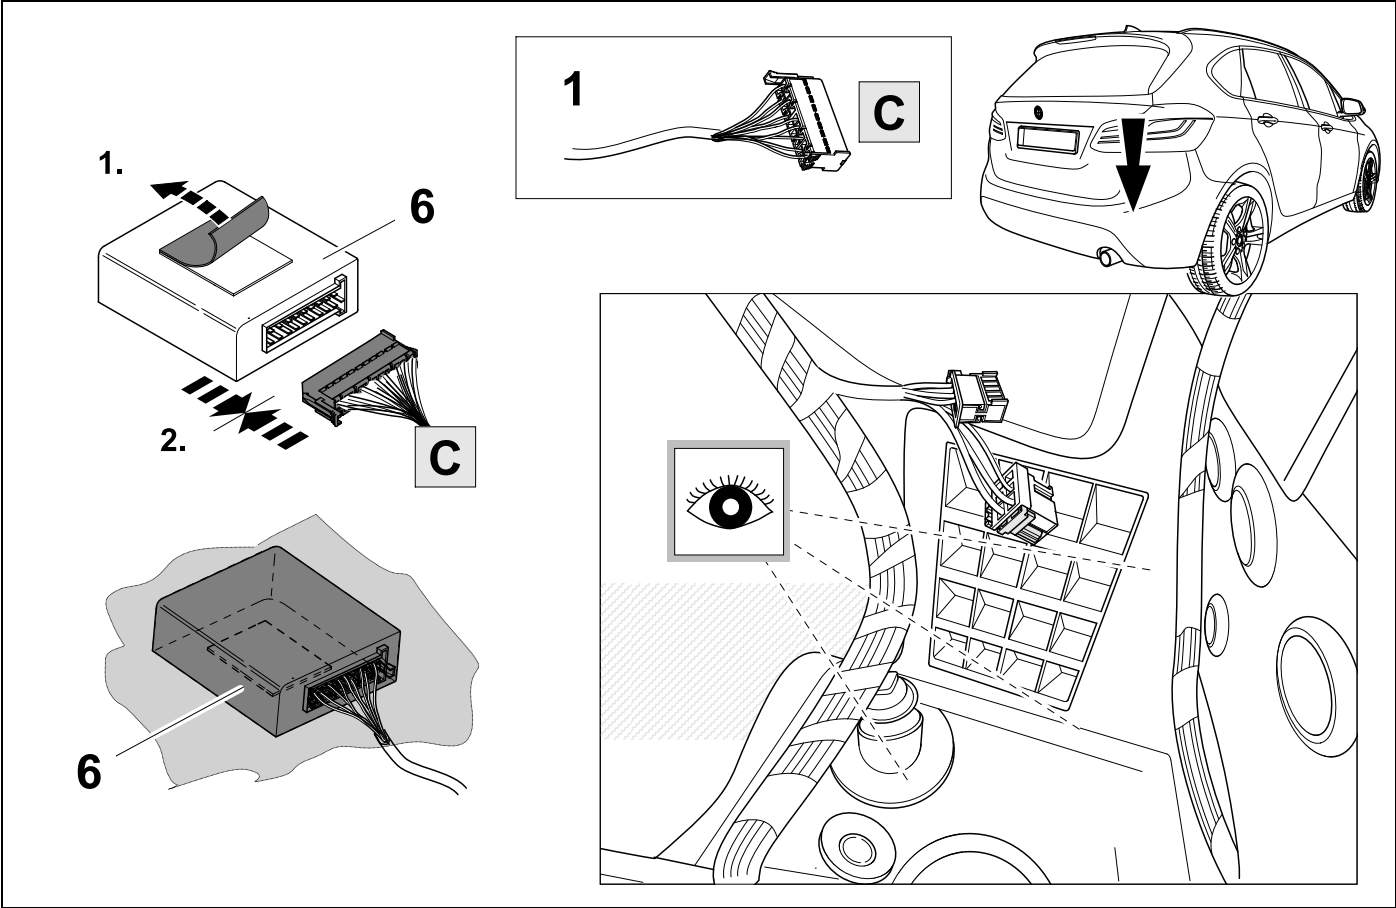

12



👁️ ⇒ 10

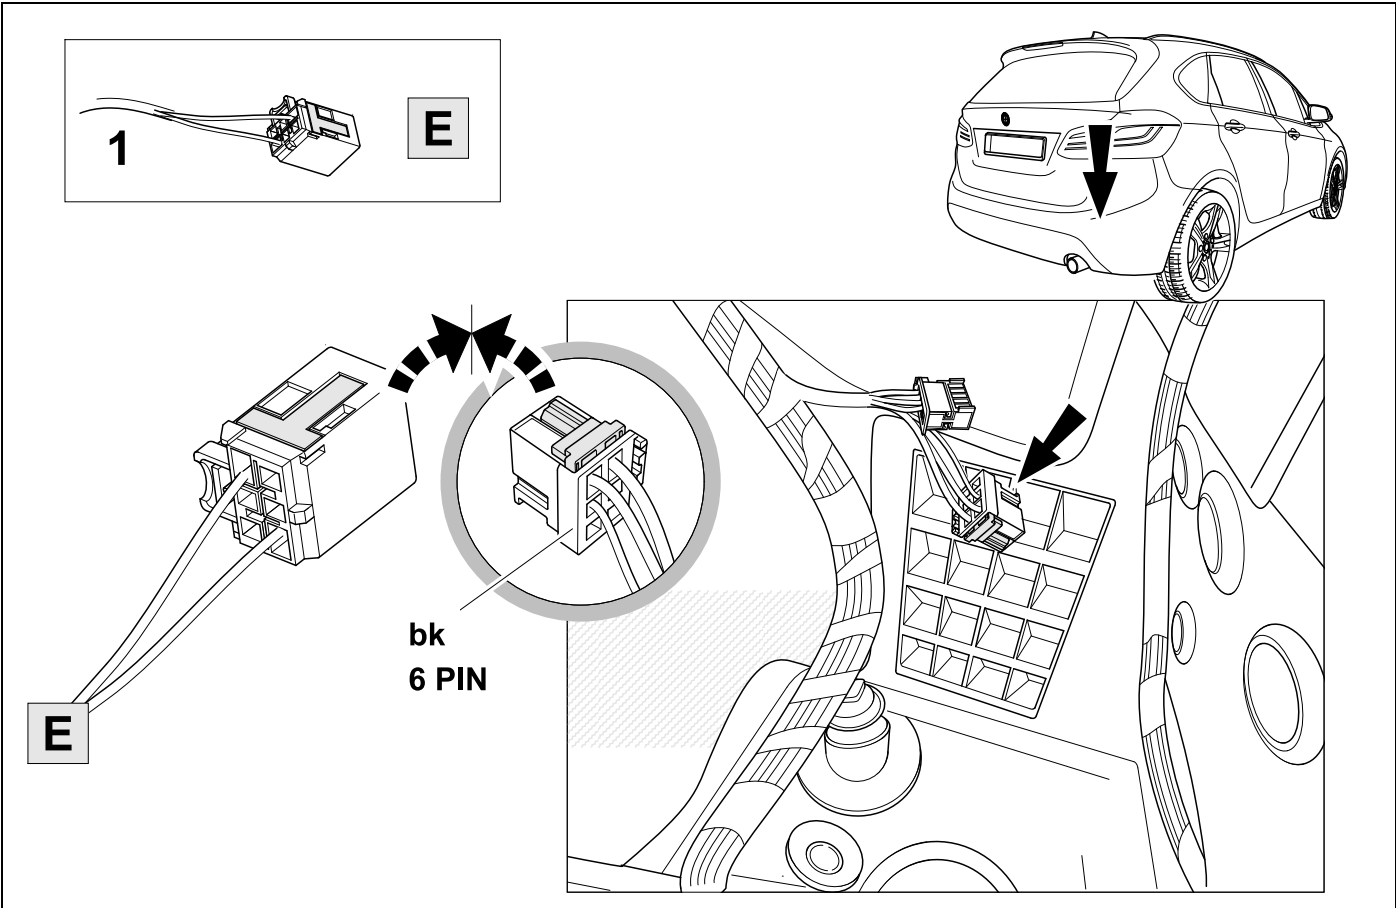



13



10

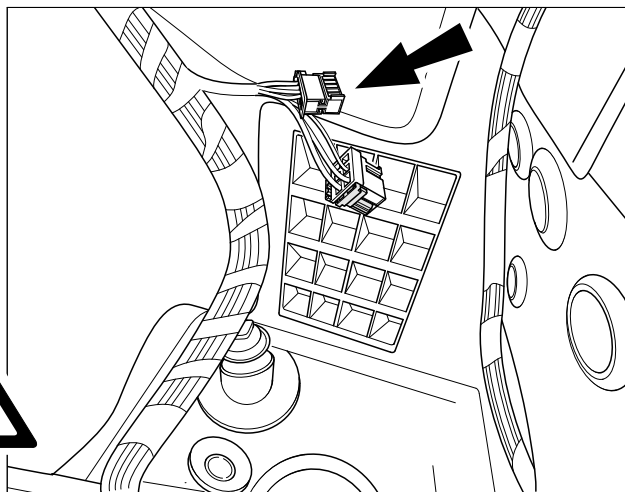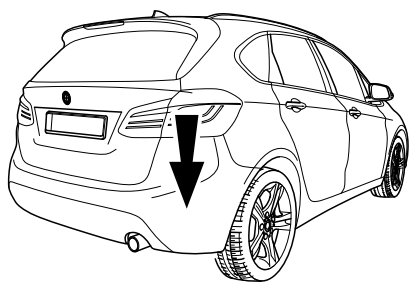

bk  
10 PIN

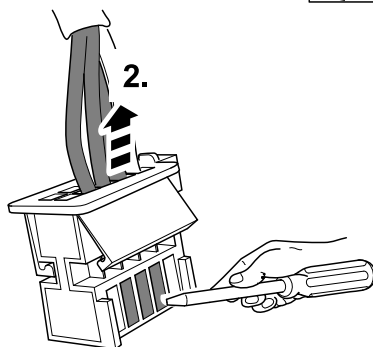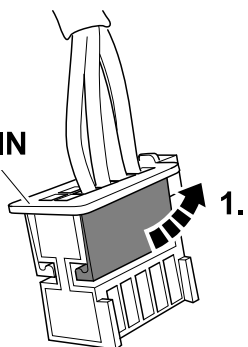


PIN 2	➔	bk-ye
PIN 3	➔	ye-rd
PIN 4	➔	ye-bn

Note that PIN 2 (bk-ye) is an indicator signal connection. Make sure this is the wire being removed and connected.

14



10



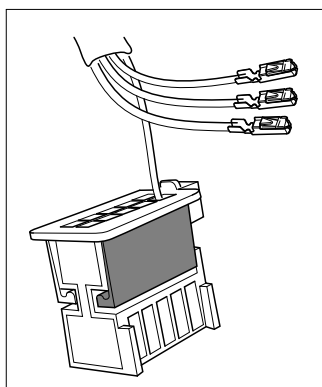


2. 10 (bk)


1 ye-rd

2 bk-ye

3 ye-bn

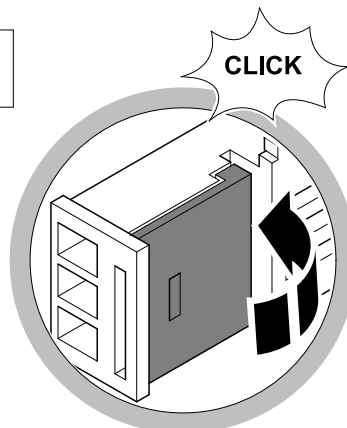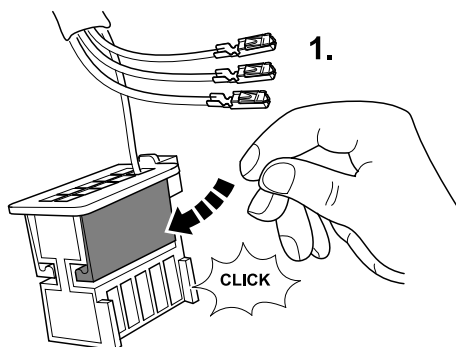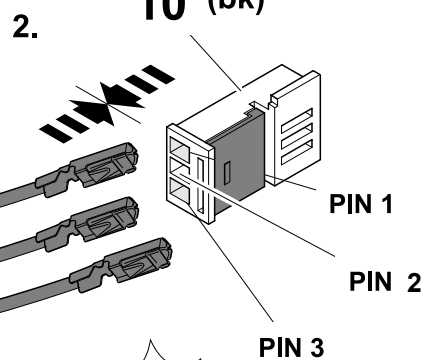

15

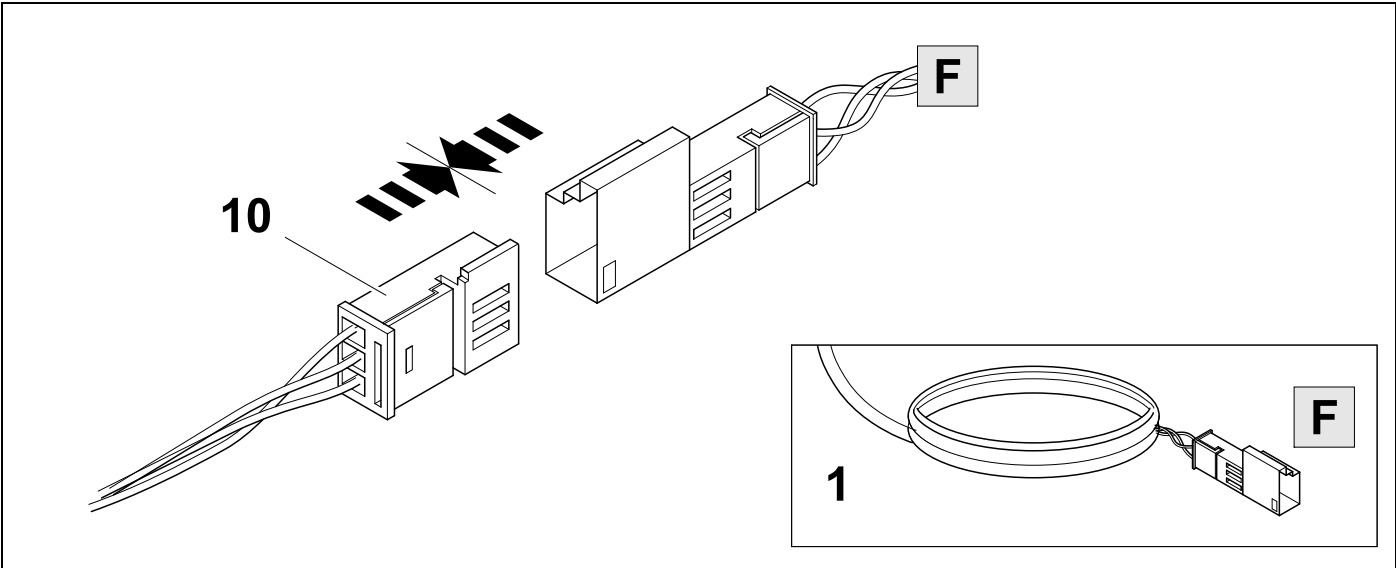


16


OPTIONAL



10

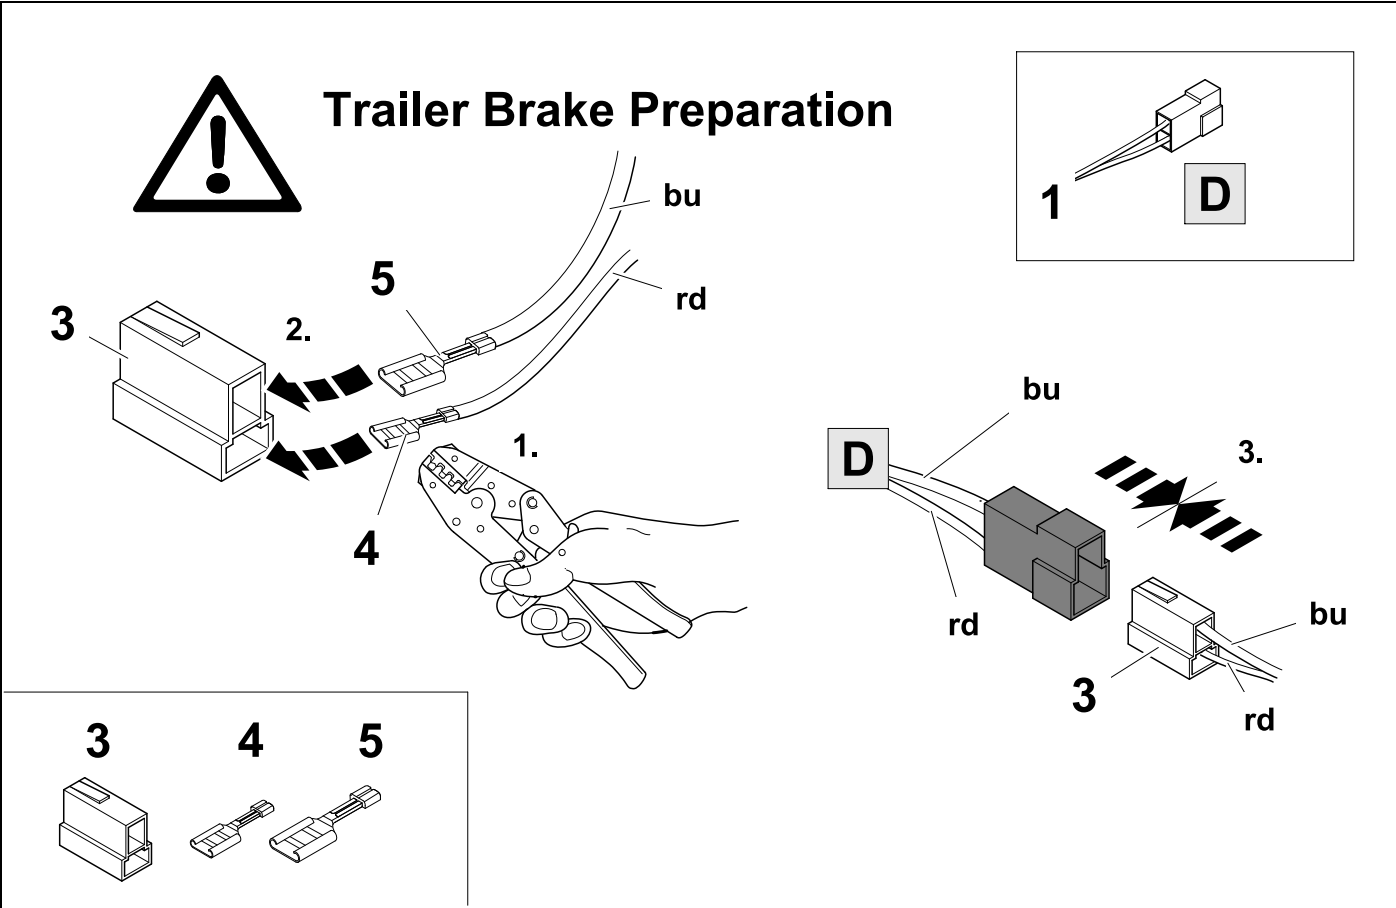


17

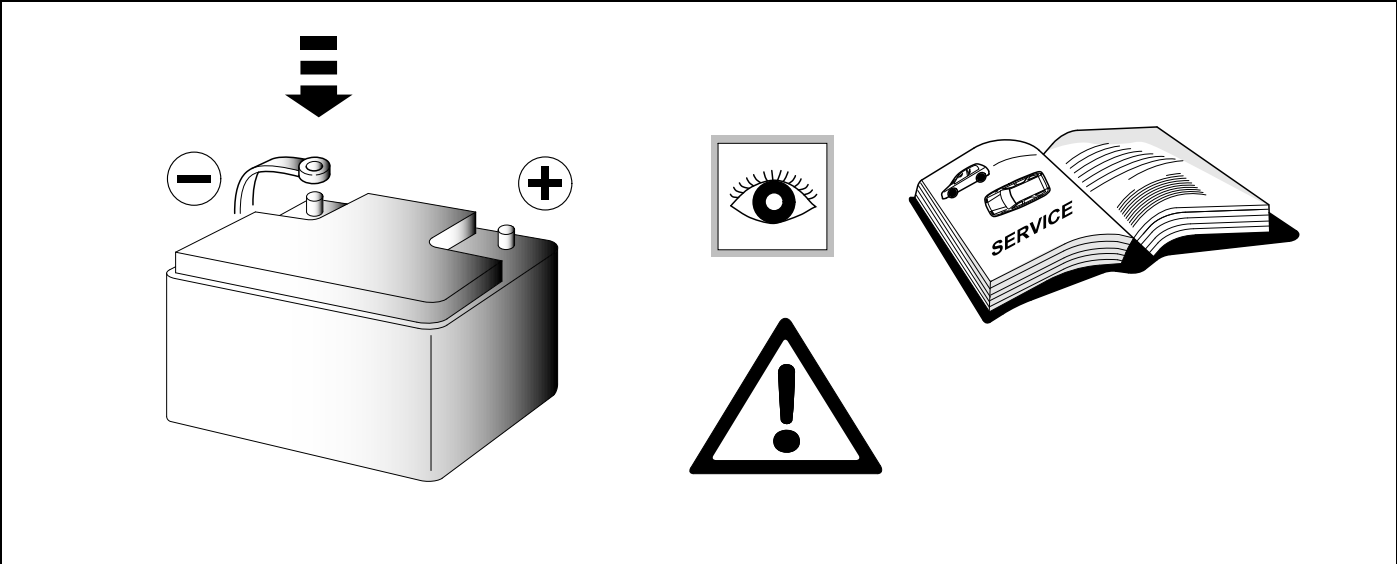


18

### CHECK ALL LIGHTING FUNCTIONS

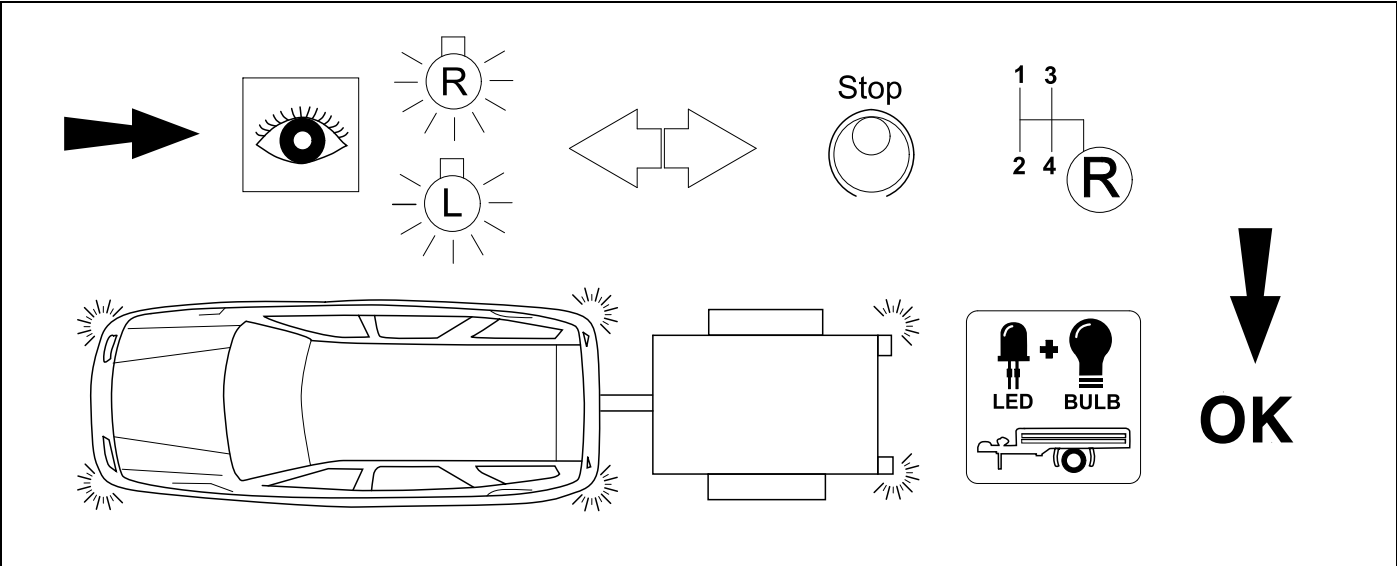





19




### CHECK BULB OUT DETECTION

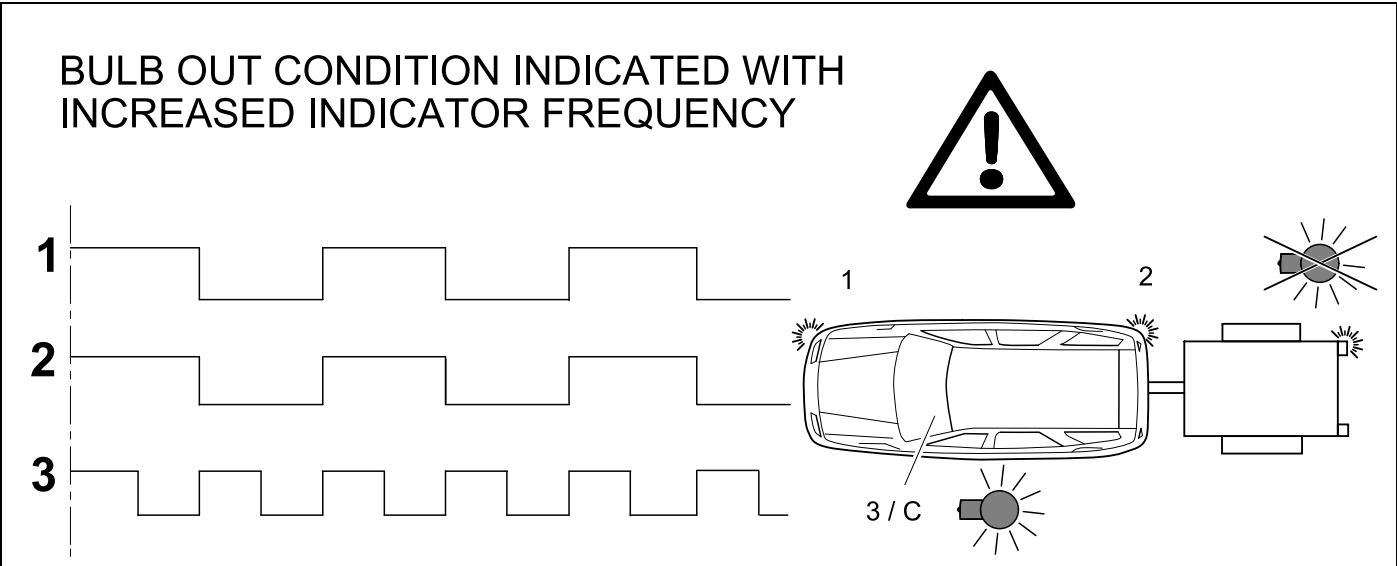





2x 7

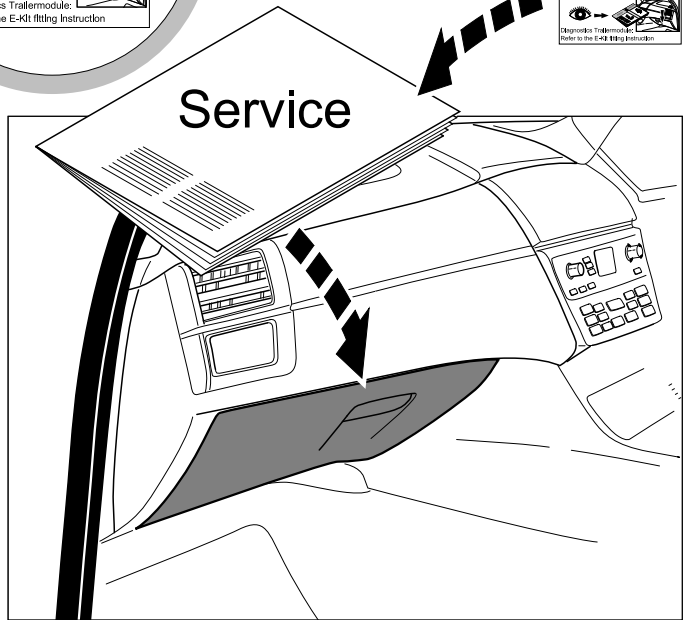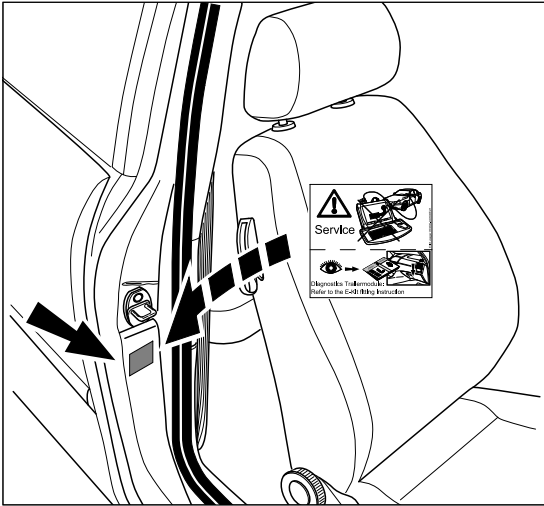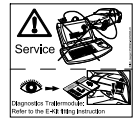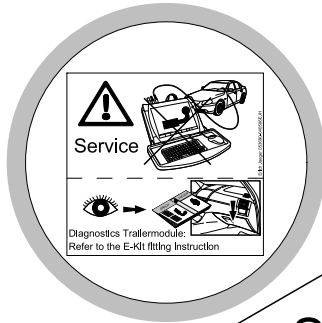


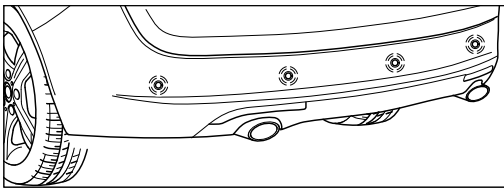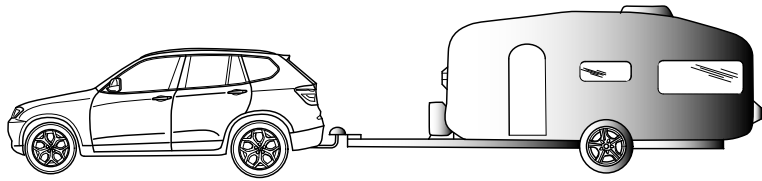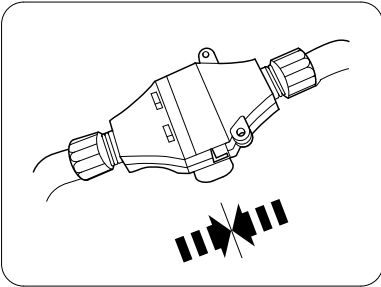


**No Coding**

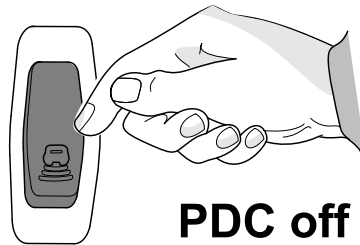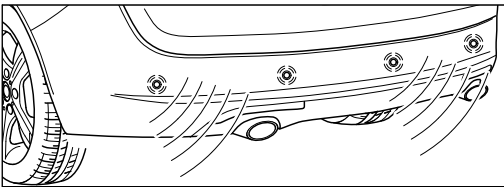


**PDC off**

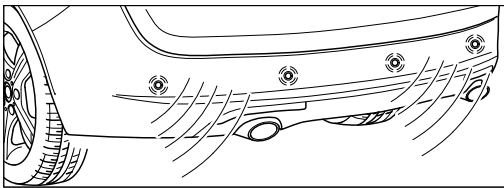

**BMW Service ISTA/P  
Initialize Trailer Module**

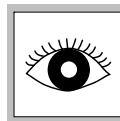

22

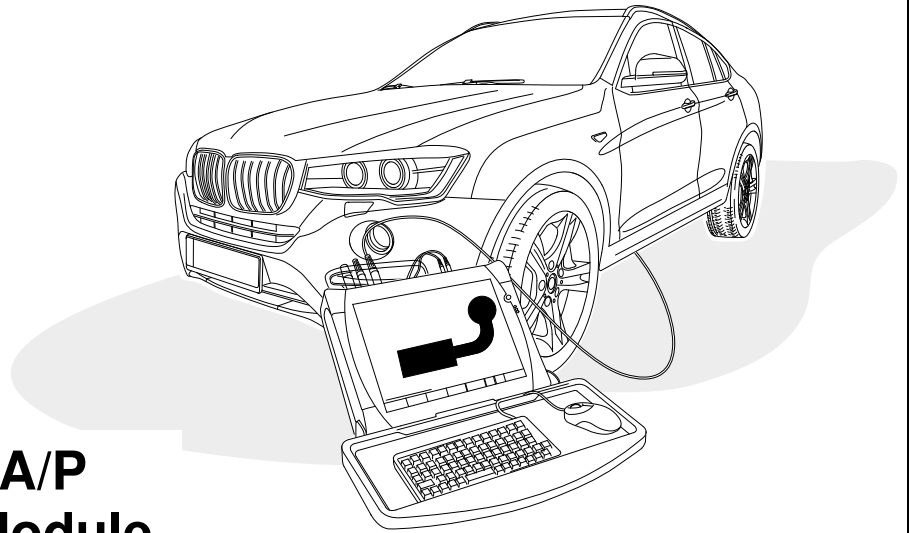

### BMW Service ISTA/P Initialize Trailer Module

**Please effect coding as follows:**





- Connect computer to vehicle
- Start ISTA/P
- Click "Modification / Upgrades"
- Scan Action plan
- Click „Coding (Ethernet)“
- Scan Action program follow-up
- Final report checking

**After the effected connection, the rear park assist system will also automatically be deactivated in trailer operation!**



# Status LED for self-diagnosis

## Operation Support

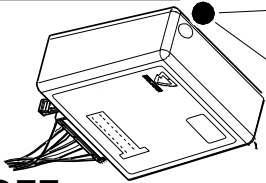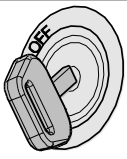






No CAN-Data =





Standby / Sleepmode



   Ignition OFF

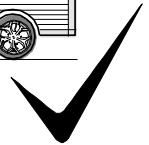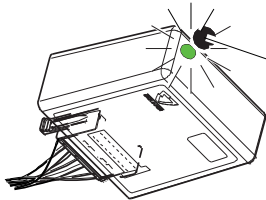

Ignition ON

 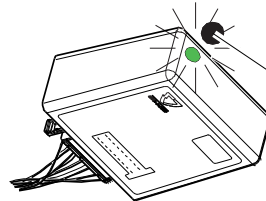





Ignition ON

## Failure Support

 CAN-Data Wire




1x max. 5 min.

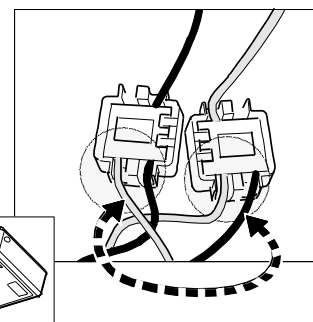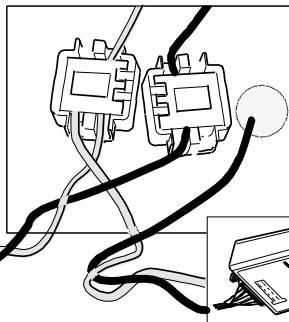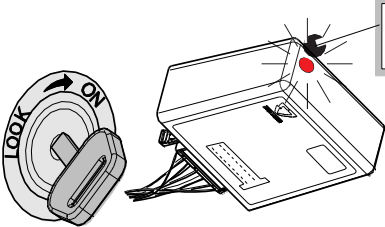


Ignition ON





 
Failure indicated by the module LED glowing red for a maximum of 5 minutes. If trailer connected the tail lights will also glow indicating failure of CAN signal.



Ignition ON

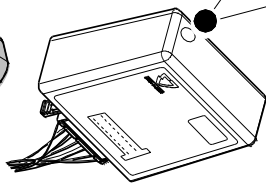


or

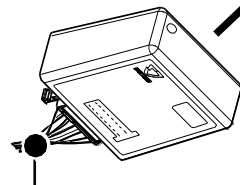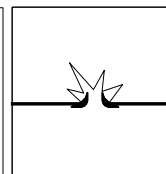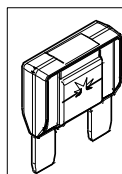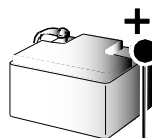 





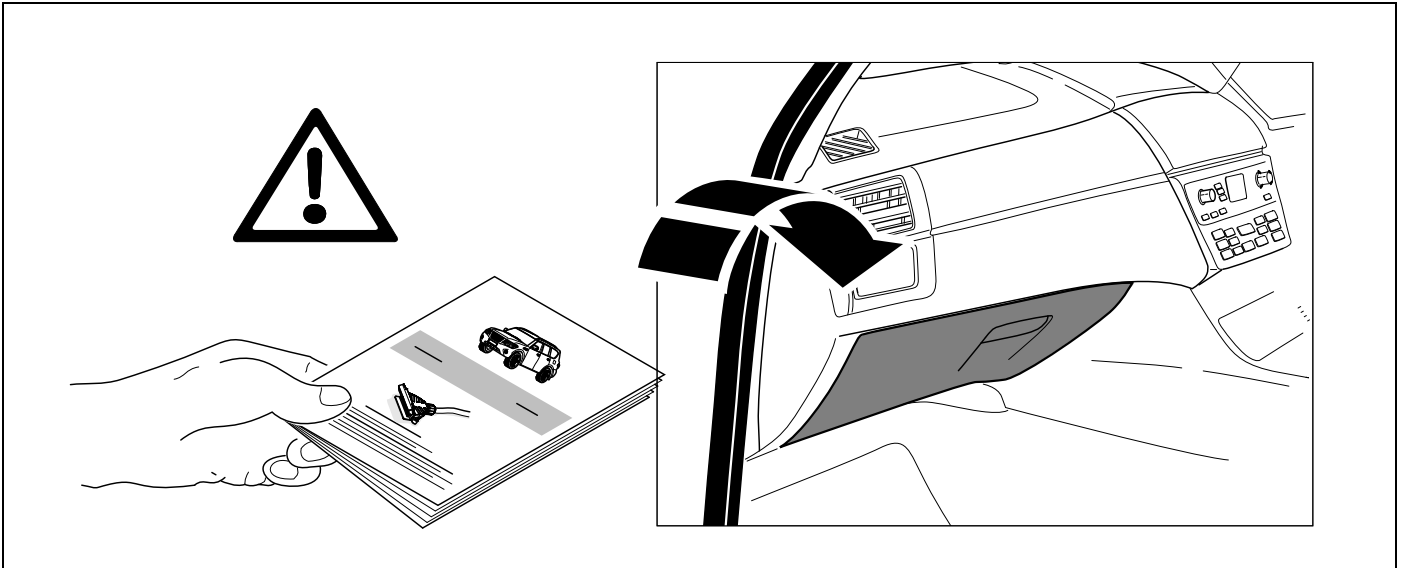

Subject to change in terms of construction, equipment and colour, and may contain errors.  
The information and illustrations are non-binding.