


VEHICLE: MG S5 EV Apr 2025 - On
PART NUMBER: 118154

TOWRITE
TOWBARS AUSTRALIA

TOWBAR FITTING INSTRUCTIONS

PROFESSIONAL INSTALLATION RECOMMENDED
- BUMPER CUT REQUIRED

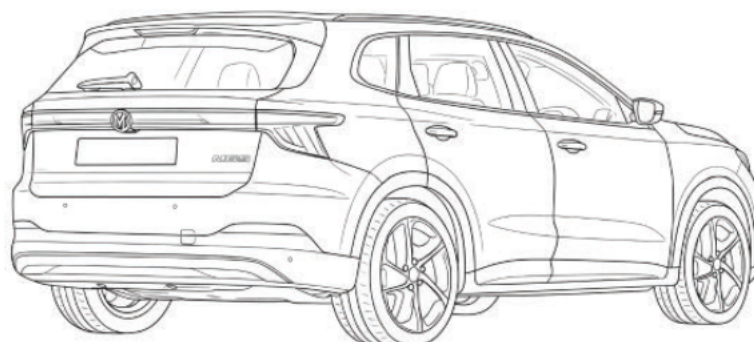

For Trailer Towing Only

Approximate Installation Time: 1.5 hrs
Maximum Towing Capacity Braked: 750 kg
Maximum Down Ball Weight: 75 kg

Vehicle towing capacity may vary. Refer to owner's handbook.

TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748

WARNING



ELECTRIC, HYBRID AND PHEV VEHICLES



- Fitting of an EV electric car or HV hybrid vehicle must only be done by qualified personnel.
- The required qualifications may vary depending on the region. Please observe the local legislation and legal directives relating to service to electric vehicles.
- Disregarding these instructions may lead to serious injuries or death.

WARNING

- This product is designed solely for towing and must be loaded exactly as outlined in your vehicle's Owner's Manual.
- If used with a bike carrier there is a 25% reduction in the towbar or vehicle ball weight capacity whichever is lowest.
- Do NOT drill, cut, weld, or modify this towbar under any circumstances.
- You might need to drill into the vehicle to install the parts. Before you drill, take a quick look behind the chassis rail and body panels to make sure nothing is in the way.
- The stated load ratings apply only where the trailer is equipped with an appropriately rated and functioning braking system.
- If installed in any position other than what is shown in these instructions, the towball mount may interfere with or obstruct certain vehicle features (such as tailgate operation or chassis clearance).

GENERAL


- Before installing this towbar, read the fitting instructions thoroughly and ensure all installation hardware is correct.
- Confirm the towbar is compatible with your vehicle, and consider any modifications or accessories (tray, canopy, suspension, etc.) that may affect installation.
- After drilling, clear away all metal filings, remove burrs, and apply a rust inhibitor to any exposed metal surfaces.
- The supplied high-tensile fasteners are essential to achieving the specified rating. If replacements are needed, ensure they are of the same grade (refer parts table on Page 3) and quality.
- Routinely check towball is tight before towing.
- Check all fasteners routinely and regularly.
- Be aware of changes in vehicle shape and bumper designs as well as any accessories that may alter the installation of this product.
- Bumper cut instructions are a guide only, ensure correct area is marked out prior to cutting.
- TowRite advises the removal of the ball mount when not in use to provide a clear view of the vehicle's registration plate if obscured.
- These instructions are provided as a guide only. TowRite accepts no responsibility for any changes to vehicle or fitment.
- Check the towball is securely tightened before towing.
- The towbar comes with 2 x compliance labels - one goes on the towbar and one in the driver's side door well.
- A two-person lift is recommended for installation.
- It is recommended that installation is carried out by a trained professional.

Ensure that all lights and systems are functioning properly. Check the vehicle dash for any warning lights and visually inspect the vehicle for any damage before commencing work.

Torque Settings 8.8 Grade High Tensile Bolts

Bolt Size	Torque
M8	22 Nm $\pm$ 10%
M10	46 Nm $\pm$ 10%
M12	77 Nm $\pm$ 10%
M14	146 Nm $\pm$ 10%
M16	190 Nm $\pm$ 10%
Tow Ball	350 Nm $\pm$ 10%

CONTENTS

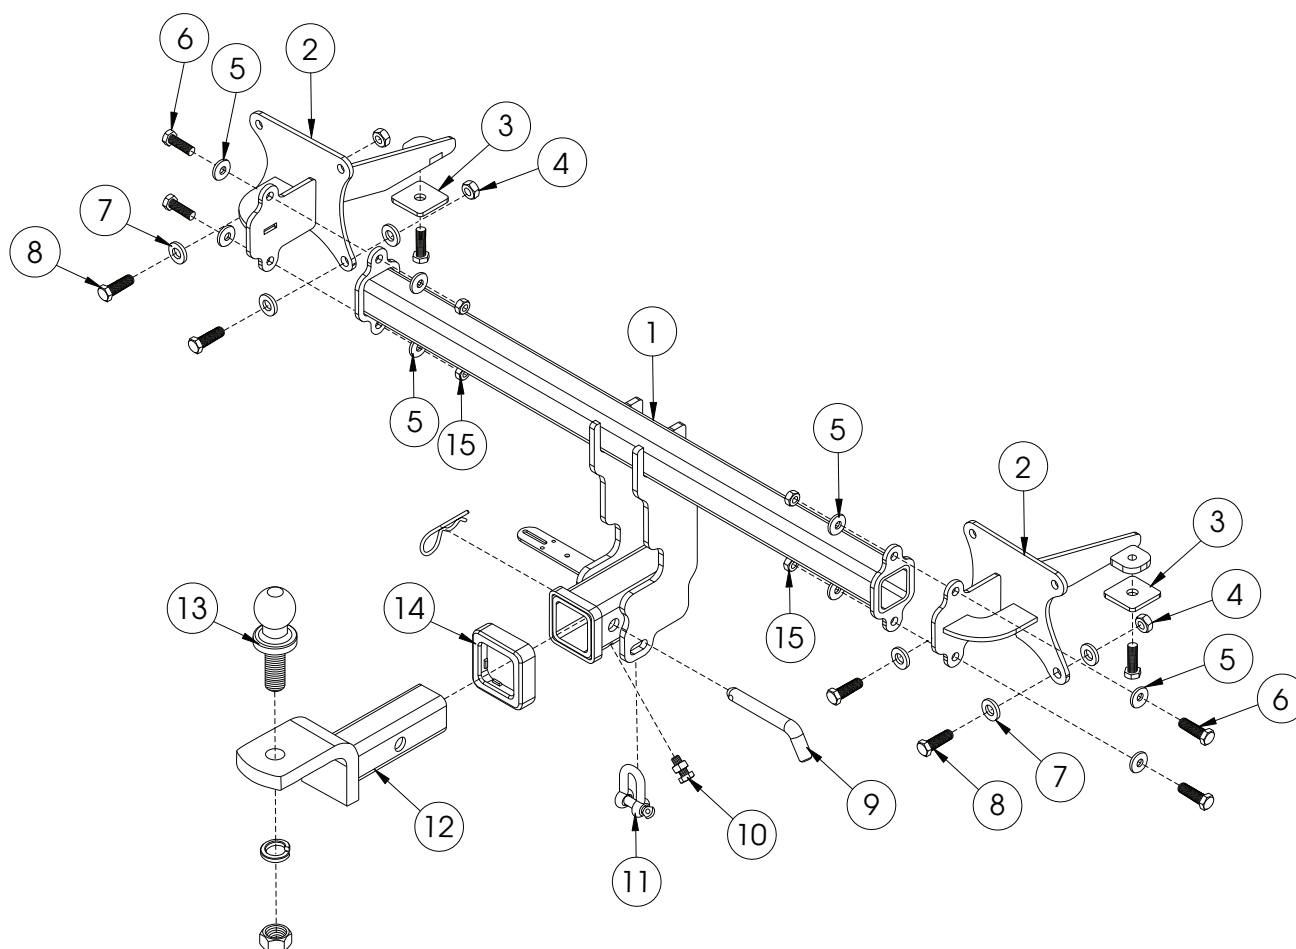

ITEM NO.	PART DESCRIPTION	QTY
1	TOWBAR ASSEMBLY	1
2	SIDE PLATE ASSEMBLY	2
3	50 X 50 PLATE	2
4	M12 X 1.75 NYLOC NUT	4
5	M10 WASHER	8
6	M10 X 1.5 X 35 mm BOLT	4
7	M12 WASHER	8
8	M12 X 1.75 x 35 mm BOLT	6
9	HITCH PIN & CLIP	1
10	ANTI RATTLE BOLT WITH LOCKING NUT	1
11	D SHACKLE	1
12	TB01 BALLMOUNT	1
13	50 mm TOWBALL	1
14	PLASTIC SHROUD	1
15	M10 X 1.5 NUT	4

TOWBAR INSTALLATION

1

Carefully unclip wheel arch flare to expose clips. Remove screws that hold wheel arch flares in place, on both sides of vehicle. Unscrew all screws under the rear bumper.

2

Remove 1 x rear light cover & boot bumper to expose screws. Remove all 3 x screws on each side. Taillights will be able to be pulled out now screws are removed.

3

Gently pull down bumper away from the metal body. Disconnect the harnesses from the reverse sensors and any other light connections, then set bumper aside for later refit.


4

Fit the side plate assemblies ② to the vehicle's chassis and loosely secure 2 x M12 bolts ⑧ with 2 x washers ⑦ and 2 x M12 nuts ④ to the bottom holes of the side plate assemblies. Use existing vehicle fasteners to the top holes of the side plate assemblies.


Repeat for the other side.

Loosely secure 1 x 50 x 50 plate ③ and 1 x M12 bolt ⑧ underneath the chassis on both sides.

LHS

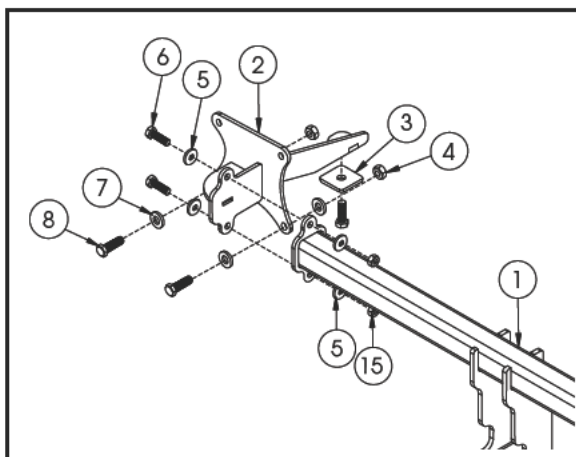

RHS

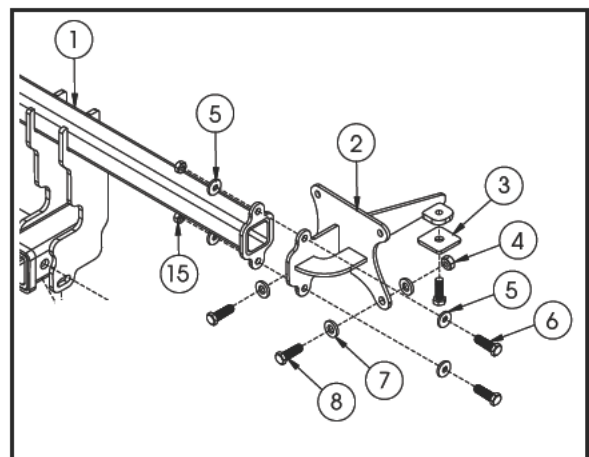

5

Raise the towbar assembly ① and fit in between the side plate assemblies ②. Loosely attach 2 x M10 bolts ⑥, 4 x washers ⑤ and 4 x M10 nuts ⑮ to each side.

6


Ensure all fasteners are tightened according to the torque settings on Page 3.

BUMPER CUT INFORMATION

7

Bumper Cut - This is a guideline only

Bumper cut on both the bumper and the underneath aero panel.
Cut the aero panel the same with and run the height of the first rib.
Cut bumper 55 mm high x 90 mm wide.
Be careful of the foot swipe sensor of the bumper bar.

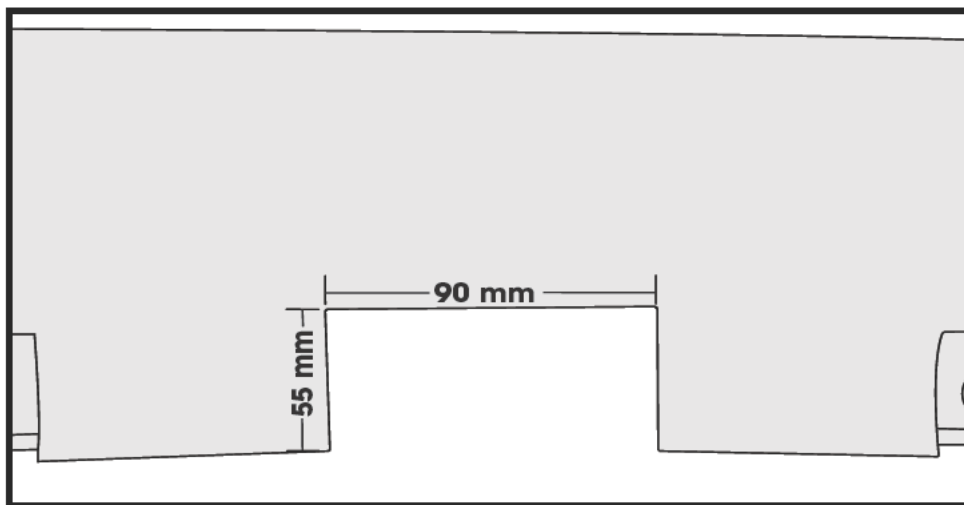

8

Reinstall the bumper by following the removal steps in reverse order.

BALLMOUNT INSTALLATION

9


Fit the plastic shroud (11) and ballmount (9) into the receiver.

Fasten with hitch pin & clip (8).

Attach the anti rattle bolt with locking nut (6) and D shackles (7).

NOTE: This bolt is only to be tightened when not towing.

Fit the towball (10) to the ballmount (9).

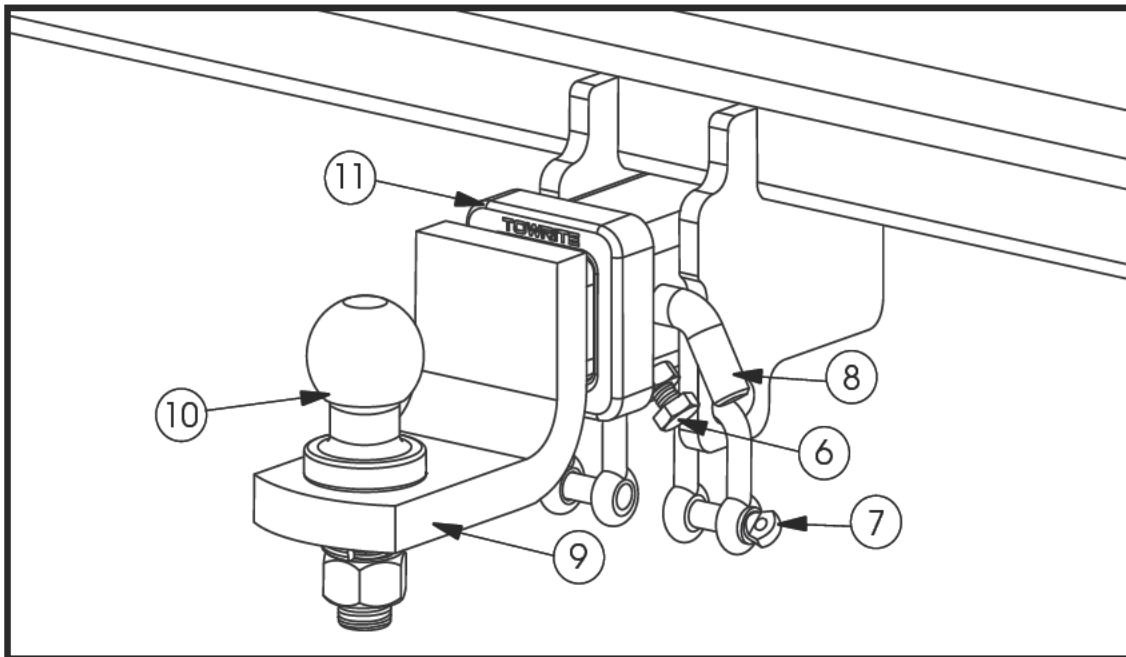



Please see below for Ballmount installation video.



LABEL INSTALLATION

CLEAN SURFACES

Attach 1 x compliance label on the towbar and the second on the driver's side door well.

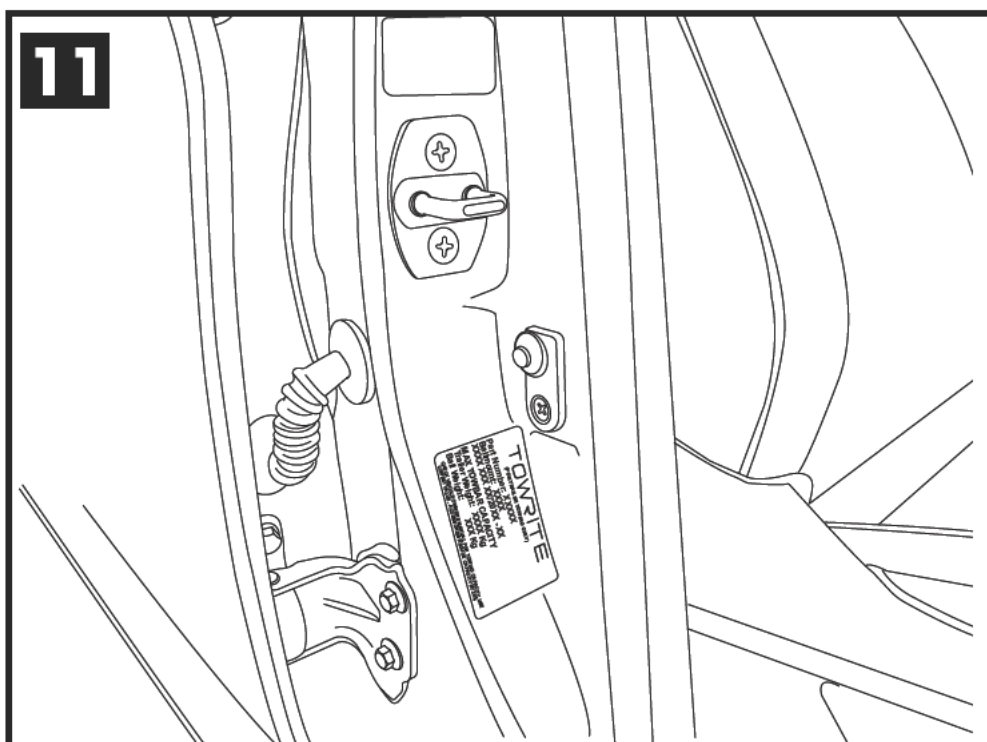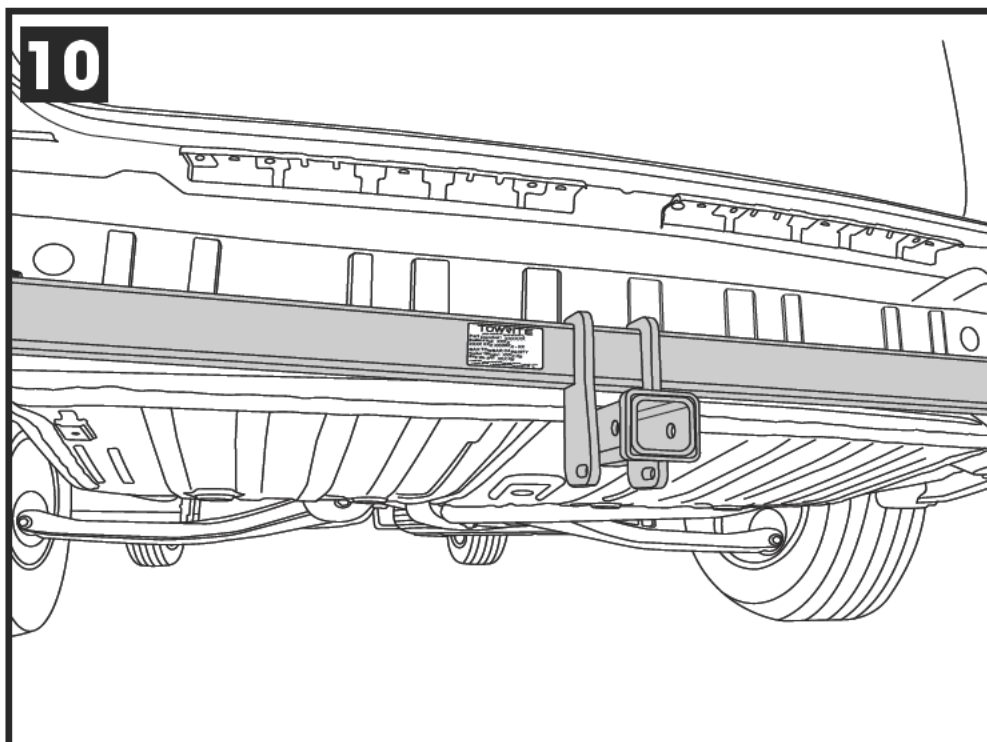

Maintenance and Care

Here are some maintenance and care tips to allow for trouble free operation of your towbar for years to come.

- A) TowRite recommend removal of the ball mount/tongue when not in use.
- B) Check all fasteners regularly and tighten if necessary. If any fasteners are worn or damaged use the same grade replacements.
- C) Ensure towing and down ball weights do not exceed manufacturer's specifications (this may differ between vehicles - check owners handbook). This is the driver's responsibility.
- D) Use a spray lubricant on contacts for wiring connections as well as removable and insert able parts regularly (ie. Trailer plug and ball mount and pin and clip).
- E) Check towball for wear and tear regularly, ensure towball is correctly fastened and torqued before towing.

WARRANTY INFORMATION

Your towbar comes with a limited lifetime warranty covered nationwide.
For warranty information please visit www.towritetowbars.com.au

Contact us at warranty@towritetowbars.com.au or call us on 1800 869 748

TOWRITE

TOWBARS AUSTRALIA

**TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748**

info@towritetowbars.com.au
www.towritetowbars.com.au