

**VEHICLE: Chery C5 and E5 SUV /
Jaecoo J5 Wagon
PART NUMBER: 119164**

TOWRITE
TOWBARS AUSTRALIA

TOWBAR FITTING INSTRUCTIONS

**PROFESSIONAL INSTALLATION RECOMMENDED
- BUMPER CUT REQUIRED**



- ▶ **Chery E5 (T34) FWD SUV (Electric)** 05/2025 - On
Max Towing Braked: 750 kg, Max Down Ball Weight: 75 kg
- ▶ **Chery E5 (T34) EV FWD SUV (Electric)** 05/2025 - On
Max Towing Braked: 750 kg, Max Down Ball Weight: 75 kg
- ▶ **Chery E5 (T34) 1.5 DHT FWD SUV (Hybrid)** 05/2025 - On
Max Towing Braked: 750 kg, Max Down Ball Weight: 75 kg
- ▶ **Chery C5 (T34) 1.5T CVT & 6DCT FWD SUV (Petrol)** 05/2025 - On
(Note: Petrol variants have no towing capacity and are suitable for bike rack use only. Maximum ball weight 50 kg.)
- ▶ **Jaecoo J5 (T36) 155 EV FWD Wagon (Electric)** 01/2026 - On
Max Towing Braked: 750 kg, Max Down Ball Weight: 75 kg
- ▶ **Jaecoo J5 (T36) 1.5 DHT FWD Wagon (Hybrid)** 01/2026 - On
Max Towing Braked: 750 kg, Max Down Ball Weight: 75 kg
- ▶ **Jaecoo J5 (T36) 1.5 CVT FWD Wagon (Petrol)** 01/2026 - On
Max Towing Braked: 750 kg, Max Down Ball Weight: 75 kg

For Trailer Towing Only

Approximate Installation Time: 1.5 hrs
Maximum Towing Capacity Braked: 750 kg
Maximum Down Ball Weight: 75 kg

Vehicles towing capacity may vary refer to owners handbook

**TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748**

WARNING



ELECTRIC, HYBRID AND PHEV VEHICLES



- Fitting of an EV electric car or HV hybrid vehicle must only be done by qualified personnel.
- The required qualifications may vary depending on the region. Please observe the local legislation and legal directives relating to service to electric vehicles.
- Disregarding these instructions may leave to serious injuries or death.

WARNING

- This product is designed solely for towing and must be loaded exactly as outlined in your vehicle's Owner's Manual.
- If used with a bike carrier there is a 25% reduction in the towbar or vehicle ball weight capacity whichever is lowest.
- Do NOT drill, cut, weld, or modify this towbar under any circumstances.
- You might need to drill into the vehicle to install the parts. Before you drill, take a quick look behind the chassis rail and body panels to make sure nothing is in the way.
- The stated load ratings apply only where the trailer is equipped with an appropriately rated and functioning braking system.
- If installed in any position other than what is shown in these instructions, the towball mount may interfere with or obstruct certain vehicle features (such as tailgate operation or chassis clearance).

GENERAL


- Before installing this towbar, read the fitting instructions thoroughly and ensure all installation hardware is correct.
- Confirm the towbar is compatible with your vehicle, and consider any modifications or accessories (tray, canopy, suspension, etc.) that may affect installation.
- After drilling, clear away all metal filings, remove burrs, and apply a rust inhibitor to any exposed metal surfaces.
- The supplied high-tensile fasteners are essential to achieving the specified rating. If replacements are needed, ensure they are of the same grade (refer parts table on Page 3) and quality.
- Routinely check towball is tight before towing.
- Check all fasteners routinely and regularly.
- Be aware of changes in vehicle shape and bumper designs as well as any accessories that may alter the installation of this product.
- Bumper cut instructions are a guide only, ensure correct area is marked out prior to cutting.
- TowRite advises the removal of the ball mount when not in use to provide a clear view of the vehicle's registration plate if obscured.
- These instructions are provided as a guide only. TowRite accepts no responsibility for any changes to vehicle or fitment.
- Check the towball is securely tightened before towing.
- The towbar comes with 2 x compliance labels - one goes on the towbar and one in the driver's side door well.
- A two-person lift is recommended for installation.
- It is recommended that installation is carried out by a trained professional.

Ensure that all lights and systems are functioning properly. Check the vehicle dash for any warning lights and visually inspect the vehicle for any damage before commencing work.

Torque Settings 8.8 Grade High Tensile Bolts

Bolt Size	Torque
M8	22 Nm $\pm$ 10%
M10	46 Nm $\pm$ 10%
M12	77 Nm $\pm$ 10%
M14	146 Nm $\pm$ 10%
M16	190 Nm $\pm$ 10%
Tow Ball	350 Nm $\pm$ 10%

CONTENTS

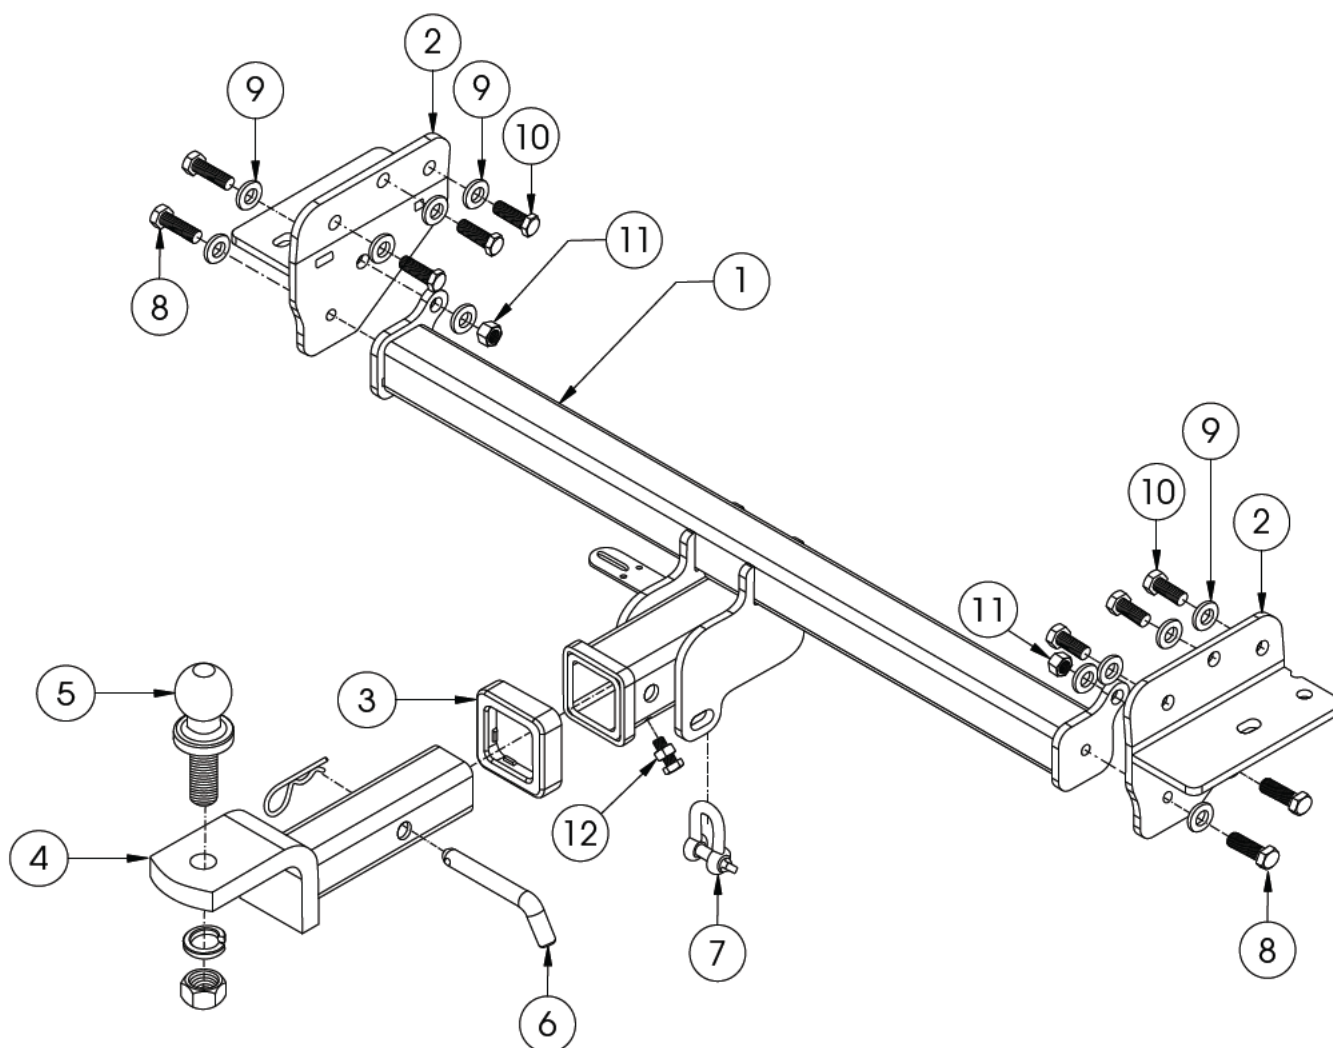


ITEM NO.	PART DESCRIPTION	QTY
1	TOWBAR ASSEMBLY	1
2	SIDE PLATE ASSEMBLY	2
3	PLASTIC SHROUD	1
4	TB02 BALLMOUNT	1
5	50 mm TOWBALL	1
6	HITCH PIN AND CLIP	1
7	D SHACKLE	1
8	M12 X 1.75 X 40 mm BOLT	4
9	M12 WASHER	12
10	M12 X 1.25 X 35 mm BOLT	6
11	M12 X 1.75 NUT	2
12	ANTI RATTLE BOLT WITH LOCKING NUT	1

TOWBAR INSTALLATION

For Chery E5 and C5 Variants

1 Bumper removal is not required.


2 Remove the body deadener and tap out the mounting holes if required.

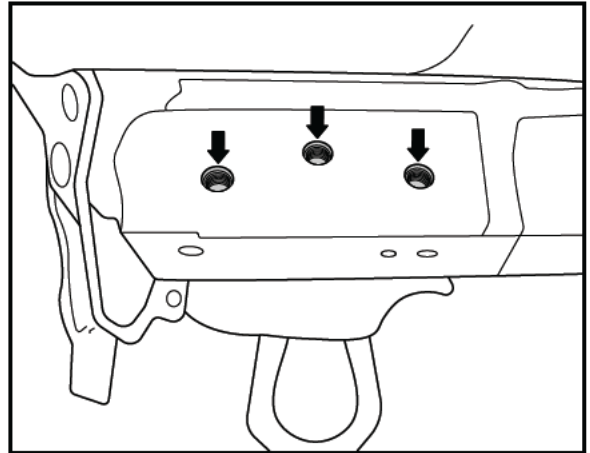


3 Attach the side plates ② to the chassis using 3 x bolts ⑩, and washers ⑨.

Repeat on the opposite side.

Note: The bottom holes in the side plates are not required.

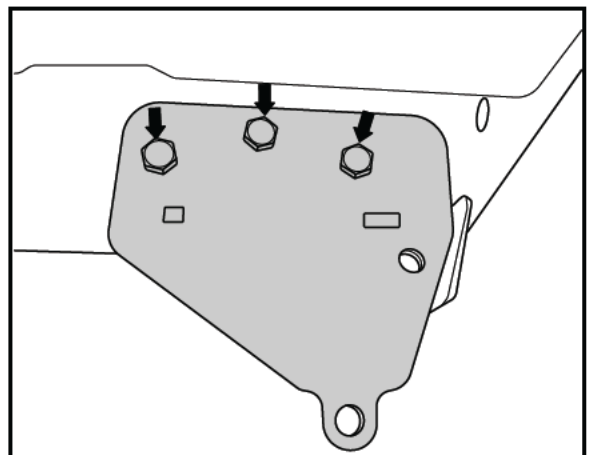

4 Lift the towbar assembly ① into position between the side plates ② and secure it using 4 x bolts ⑧, washers ⑨, and nuts ⑪ (2 x bolts per side).

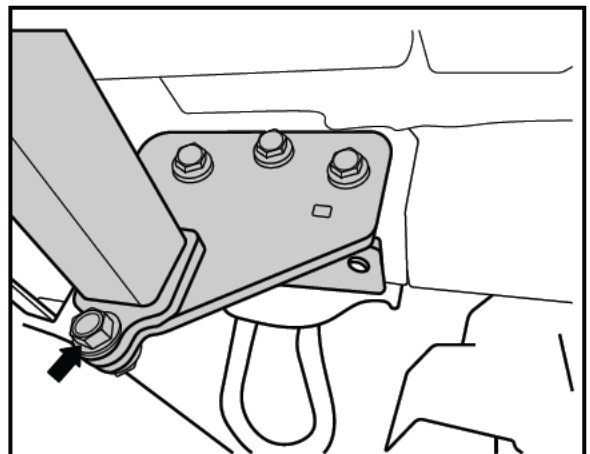


5 Ensure all fasteners are tightened according to the torque settings on Page 3.

For Jaecoo J5 EV Variants

1 Bumper removal is not required.


2 Remove the body deadening from the chassis to allow proper fitment of the side plates ②.

Repeat on the opposite side.

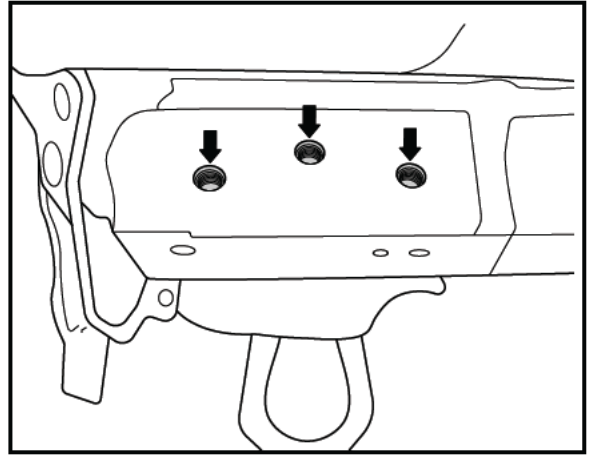


3 Attach the side plates ② to the chassis using 3 x bolts ⑧ and washers ⑨.

Repeat on the opposite side.

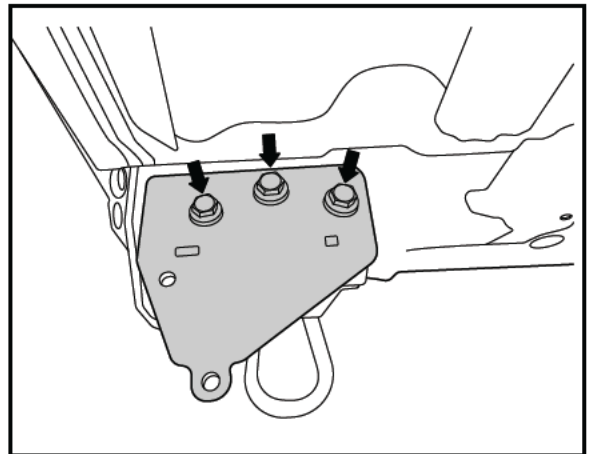


4 Remove the screw securing the bracket at the bottom centre of the bumper, then push the bracket rearwards into the inside of the bumper.

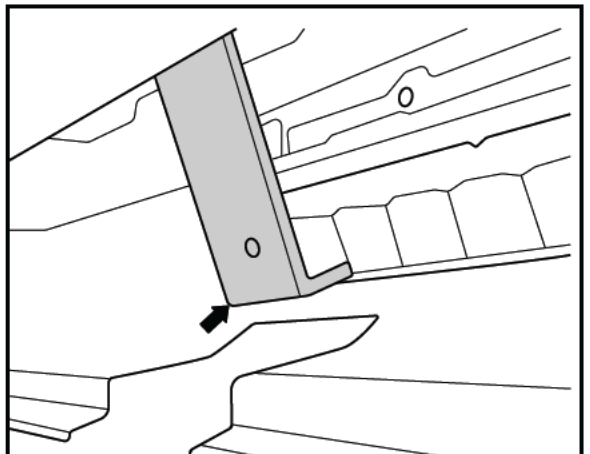

5**Bumper Cut - This is a guideline only**


Cut the bumper to the dimensions shown in the image.

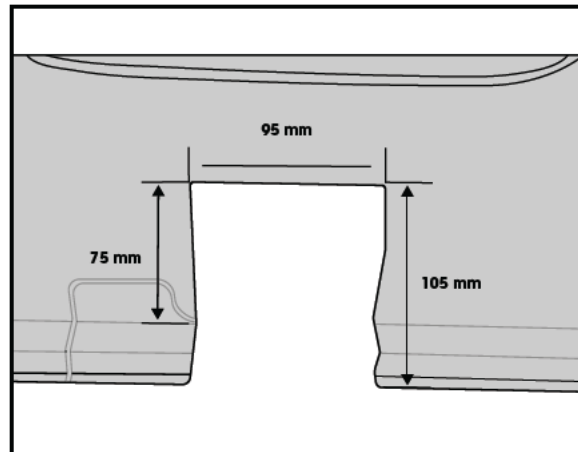**6**

File the edges of the bumper cut-out to remove any burrs.

7

Lift the towbar assembly ① into position between the side plates ② and secure it using 4 x bolts ⑧, washers ⑨, and nuts ⑪ (2 x bolts per side).

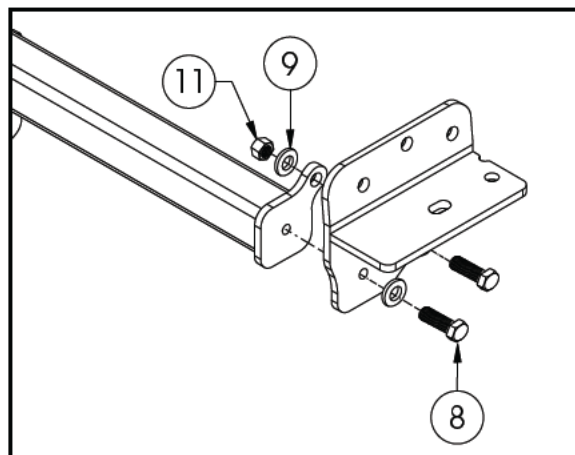**8**

Ensure all fasteners are tightened according to the torque settings on Page 3.

BALLMOUNT INSTALLATION


9

Fit the plastic shroud ③ and ballmount ④ into the receiver.
Fasten with hitch pin & clip ⑥.

Attach the anti rattle bolt with locking nut ⑫ and D shackle ⑦.

NOTE: This bolt is only to be tightened when not towing.

Fit the towball ⑤ to the ballmount ④.

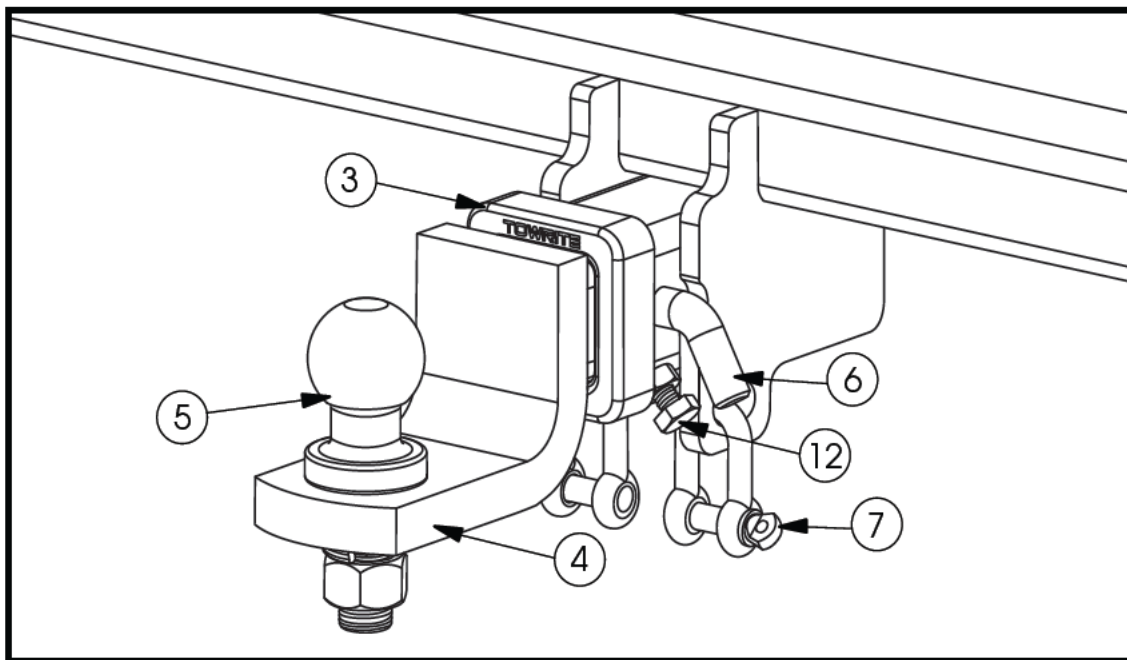



Please see below for Ballmount installation video.



LABEL INSTALLATION

CLEAN SURFACES

Attach 1 x compliance label on the towbar and the second on the drivers side door well.

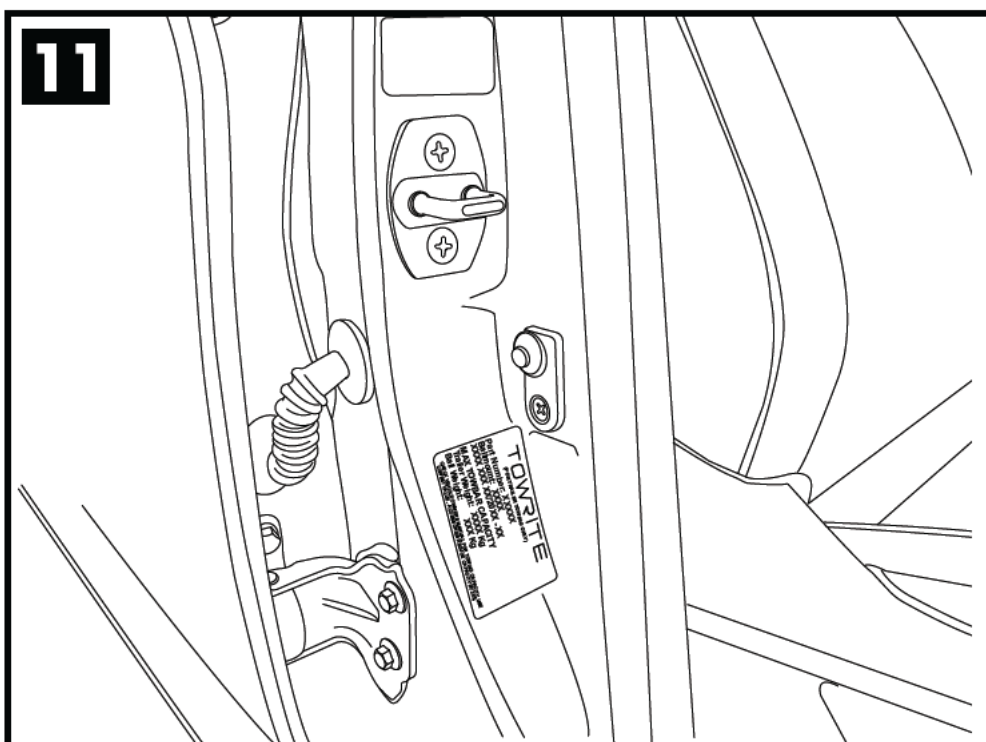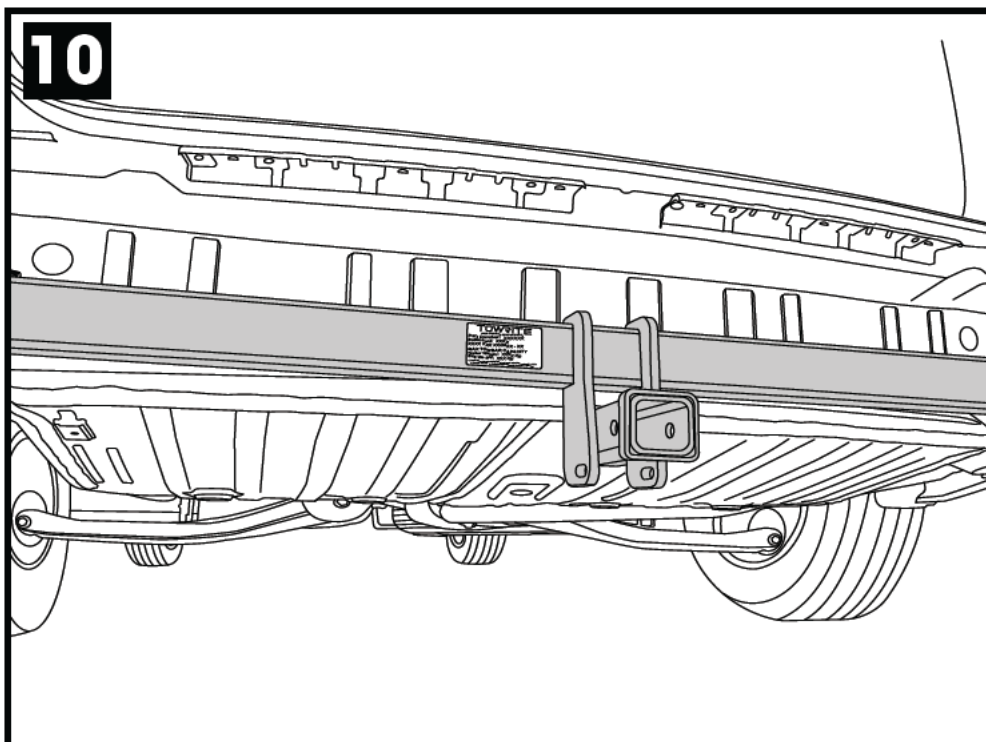

Maintenance and Care

Here are some maintenance and care tips to allow for trouble free operation of your towbar for years to come.

- A) TowRite recommend removal of the ball mount/tongue when not in use.
- B) Check all fasteners regularly and tighten if necessary. If any fasteners are worn or damaged use the same grade replacements.
- C) Ensure towing and down ball weights do not exceed manufacturers specifications (this may differ between vehicles - check owners handbook). This is the driver's responsibility.
- D) Use a spray lubricant on contacts for wiring connections as well as removable and insert able parts regularly (ie. Trailer plug and ball mount and pin and clip).
- E) Check towball for wear and tear regularly, ensure towball is correctly fastened and torqued before towing.

WARRANTY INFORMATION

Your towbar comes with a limited lifetime warranty covered nationwide.
For warranty information please visit www.towritetowbars.com.au

Contact us at warranty@towritetowbars.com.au or call us on 1800 869 748

TOWRITE

TOWBARS AUSTRALIA

**TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748**

info@towritetowbars.com.au
www.towritetowbars.com.au