

VEHICLE: Toyota Land Cruiser 78 & 79 Series
08/2012 - On
PART NUMBER: 141204

TOWRITE
TOWBARS AUSTRALIA

TOWBAR FITTING INSTRUCTIONS



- ▶ **Toyota Land Cruiser 78 Series** 08/2012 - On
- ▶ **Toyota Land Cruiser 79 Series** 08/2012 - On

For Trailer Towing Only

Approximate Installation Time: 1.5 hrs
Maximum Towing Capacity Braked: 3500 kg
Maximum Down Ball Weight: 350 kg

Vehicles towing capacity may vary refer to owners handbook

TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748

WARNING

- This product is designed solely for towing and must be loaded exactly as outlined in your vehicle's Owner's Manual.
- If used with a bike carrier there is a 25% reduction in the towbar or vehicle ball weight capacity whichever is lowest.
- Do NOT drill, cut, weld, or modify this towbar under any circumstances.
- You might need to drill into the vehicle to install the parts. Before you drill, take a quick look behind the chassis rail and body panels to make sure nothing is in the way.
- The stated load ratings apply only where the trailer is equipped with an appropriately rated and functioning braking system.
- If installed in any position other than what is shown in these instructions, the towball mount may interfere with or obstruct certain vehicle features (such as tailgate operation or chassis clearance).

GENERAL


- Before installing this towbar, read the fitting instructions thoroughly and ensure all installation hardware is correct.
- Confirm the towbar is compatible with your vehicle, and consider any modifications or accessories (tray, canopy, suspension, etc.) that may affect installation.
- After drilling, clear away all metal filings, remove burrs, and apply a rust inhibitor to any exposed metal surfaces.
- The supplied high-tensile fasteners are essential to achieving the specified rating. If replacements are needed, ensure they are of the same grade (refer to parts table on Page 3) and quality.
- Routinely check towball is tight before towing.
- Check all fasteners routinely and regularly.
- Be aware of changes in vehicle shape and bumper designs as well as any accessories that may alter the installation of this product.
- Bumper cut instructions are a guide only, ensure correct area is marked out prior to cutting.
- TowRite advises the removal of the ball mount when not in use to provide a clear view of the vehicle's registration plate if obscured.
- These instructions are provided as a guide only. TowRite accepts no responsibility for any changes to vehicle or fitment.
- Check the towball is securely tightened before towing.
- The towbar comes with 2 x compliance labels - one goes on the towbar and one in the driver's side door well
- A two-person lift is recommended for installation.
- It is recommended that installation is carried out by a trained professional.

Ensure that all lights and systems are functioning properly. Check the vehicle dash for any warning lights and visually inspect the vehicle for any damage before commencing work.

Torque Settings 8.8 Grade High Tensile Bolts

Bolt Size	Torque
M8	22 Nm $\pm$ 10%
M10	46 Nm $\pm$ 10%
M12	77 Nm $\pm$ 10%
M14	146 Nm $\pm$ 10%
M16	190 Nm $\pm$ 10%
Tow Ball	350 Nm $\pm$ 10%

CONTENTS

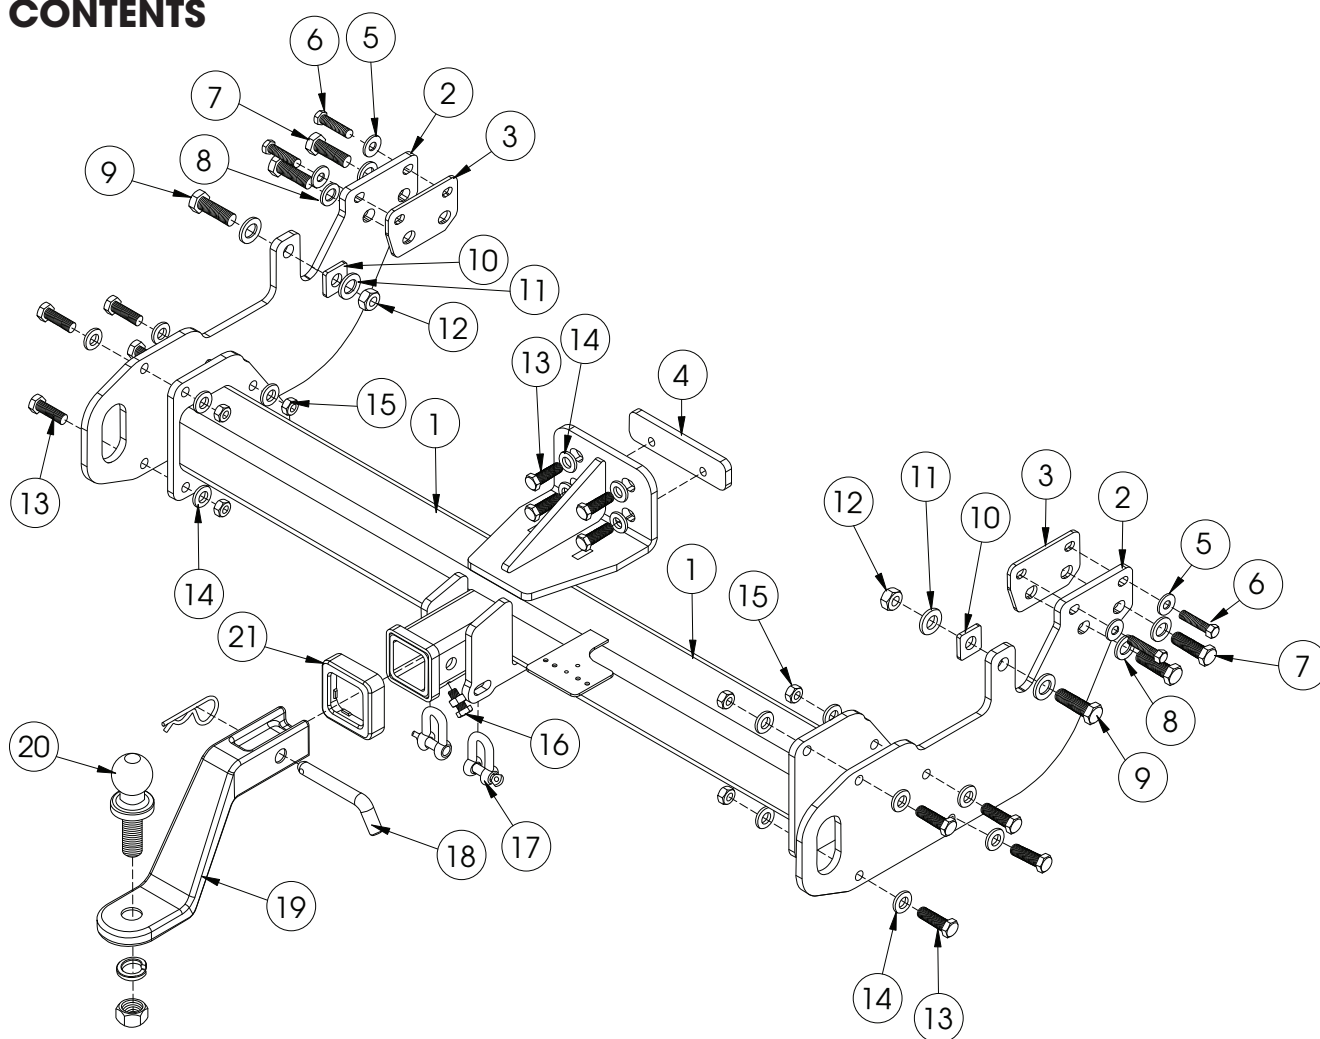


ITEM NO.	PART DESCRIPTION	QTY
1	TOWBAR ASSEMBLY	1
2	SIDE PLATE ASSEMBLY	2
3	4-HOLE SPACER PLATE	2
4	NUT PLATE	1
5	M10 WASHER	4
6	M10 X 1.25 X 45 mm BOLT	4
7	M14 X1.5 X 50 mm BOLT	4
8	M14 WASHER	4
9	M16 X 1.5 X 50 mm BOLT	2
10	SQUARE SPACER PLATE	2
11	M16 WASHER	4
12	M16 X 1.5 NUT	2
13	M12 X 1.25 X 45 mm BOLT	12
14	M12 WASHER	20
15	M12 X 1.75 NUT	8
16	ANTI RATTLE BOLT WITH LOCKING NUT	1
17	D SHACKLE	2
18	HITCH PIN & CLIP	1
19	TBF6	1
20	50 mm TOWBALL	1
21	PLASTIC SHROUD	1


TOWBAR INSTALLATION

- 1** Using the hole on the side plate as a guide, drill a 16 mm diameter hole into the chassis at the location indicated in the image.


Repeat for the other side.

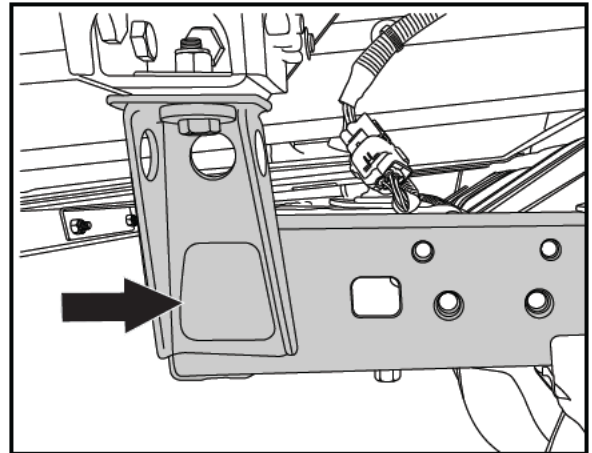

LHS

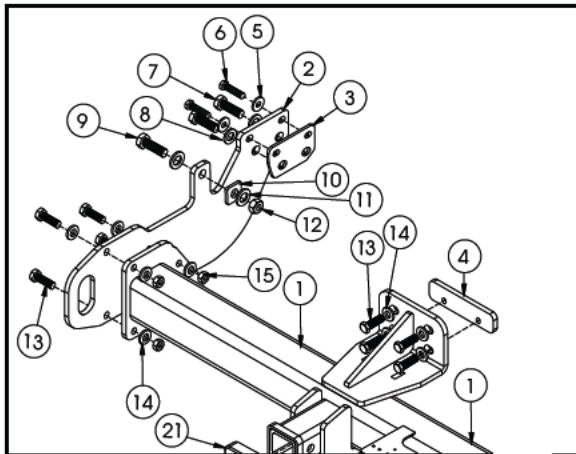


RHS

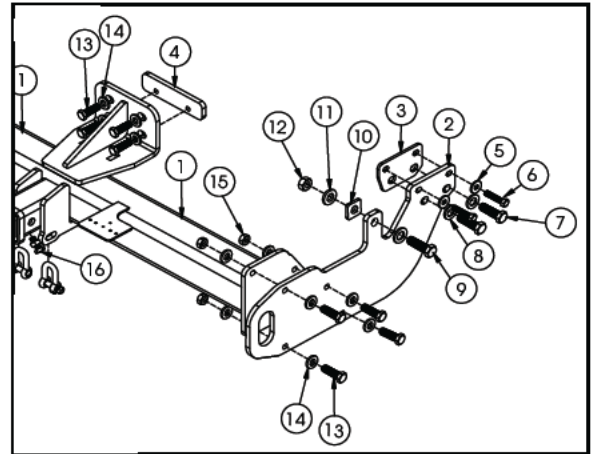

- 2** Loosely attach the side plate assembly ② to the outside of the chassis and 4-hole spacer plate ③ to the inside of the chassis. Secure using 2 x M10 bolts ⑥ and M10 washers ⑤ through the upper holes, and 2 x M14 bolts ⑦ and M14 washers ⑧ through the lower holes.

Install 1 x M16 bolt ⑨, 2 x M16 washers ⑪, square spacer plate ⑩, M16 nut ⑫ as shown in the image above.

Repeat for the other side.

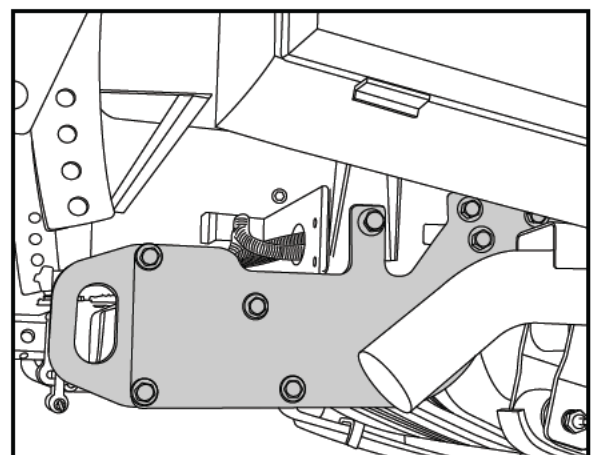

3

Lift the towbar assembly ① into position between side plate assemblies ② and loosely secure using 4 x M12 bolts ⑬, 8 x M12 washers ⑭ and 4 x M12 nuts ⑫, as shown in the images on Page 4.

Repeat for the other side.

4

Insert the nut plate ④ into the horizontal chassis section and secure it by fitting 2 x M12 bolts ⑬ and M12 washers ⑭ through the lower holes in the towbar assembly back plate and into the nut plate.

Attach additional 2 x M12 bolts ⑬ and M12 washers ⑭

5


Ensure all fasteners are tightened according to the torque settings on Page 2.

BALLMOUNT INSTALLATION


6

BALLMOUNT POSITIONING

4X2 Vehicles - Up Position

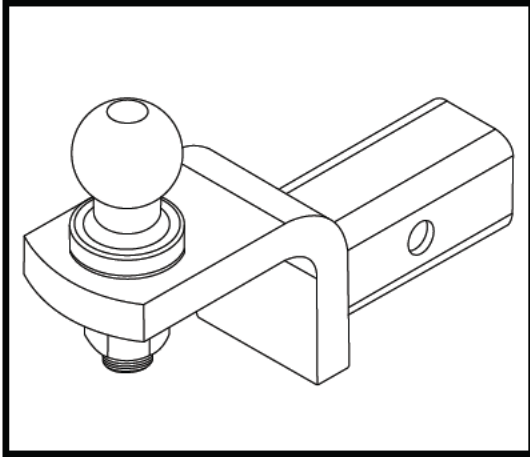

4X4 Vehicles - Down Position

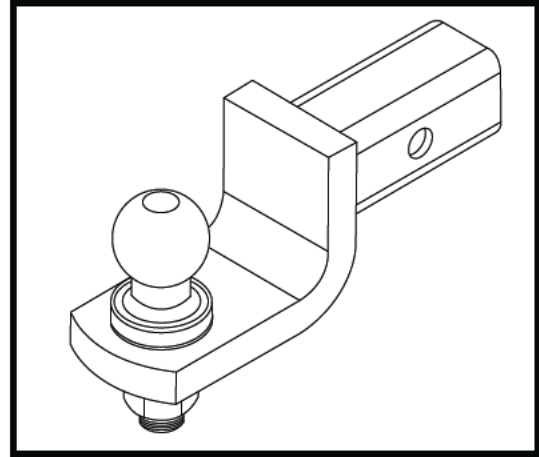


7

Fit the plastic shroud (11) and ballmount (9) into the receiver.
Fasten with hitch pin & clip (8).

Attach the anti rattle bolt with locking nut (6) and D shackles (7).

NOTE: This bolt is only to be tightened when not towing.

Fit the towball (10) to the ballmount (9).

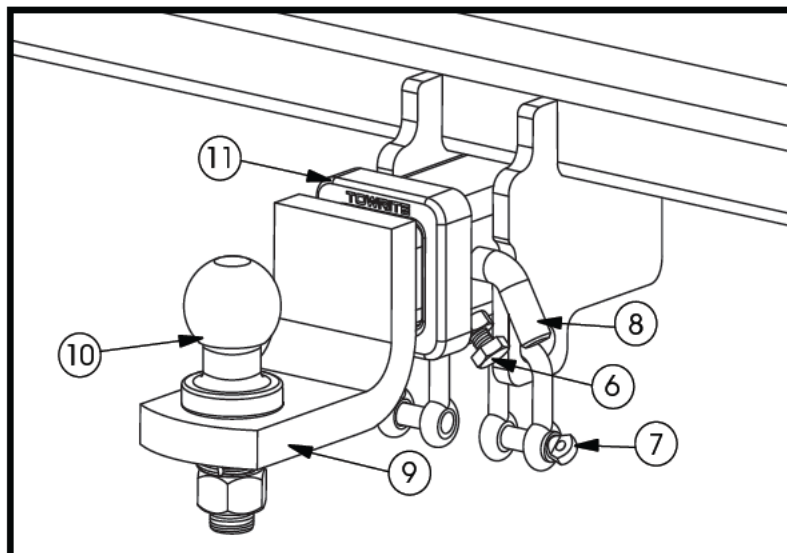



Please see below for Ballmount installation video.



LABEL INSTALLATION

CLEAN SURFACES

Attach 1 x compliance label on the towbar and the second on the driver's side door well.

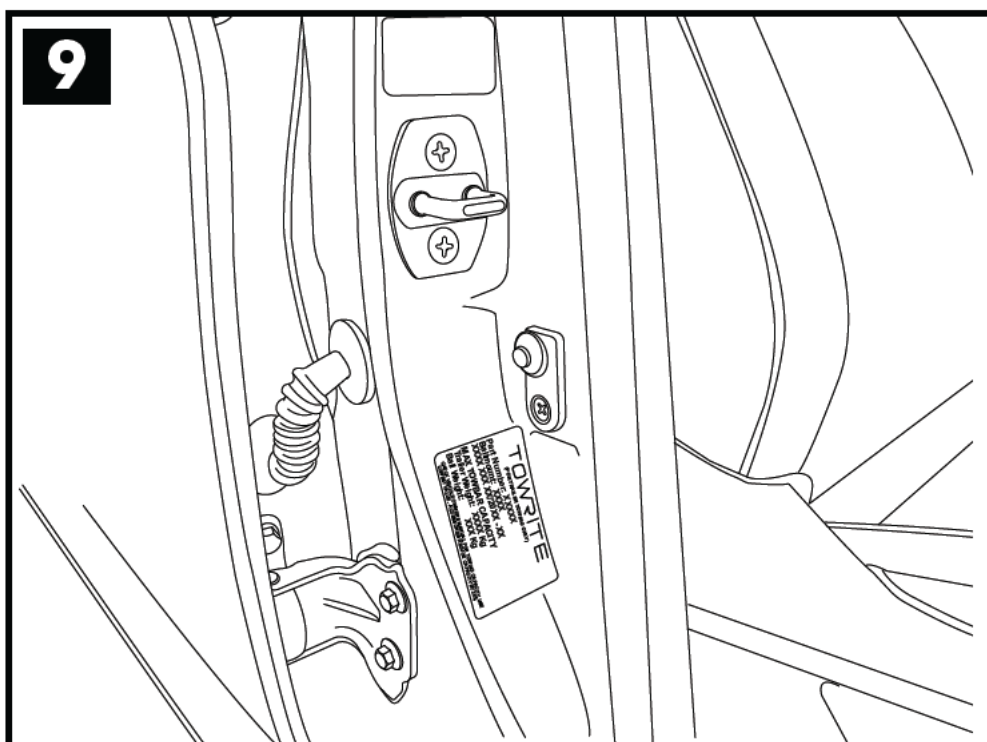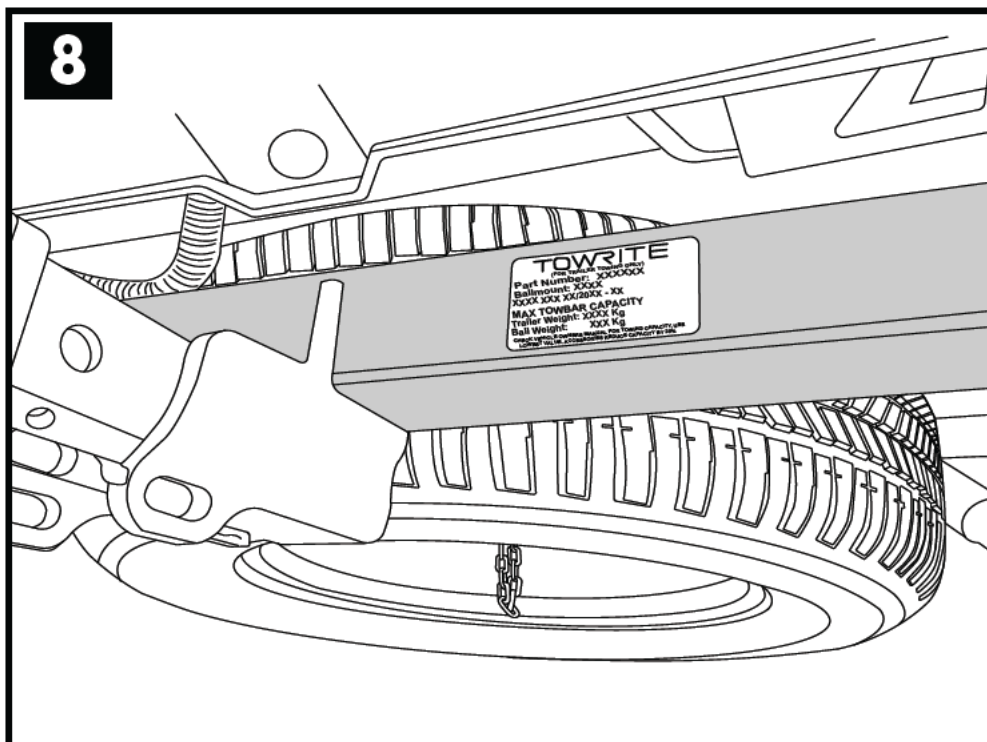

Maintenance and Care

Here are some maintenance and care tips to allow for trouble free operation of your towbar for years to come.

- A) TowRite recommend removal of the ball mount/tongue when not in use.
- B) Check all fasteners regularly and tighten if necessary. If any fasteners are worn or damaged use the same grade replacements.
- C) Ensure towing and down ball weights do not exceed manufacturer's specifications (this may differ between vehicles - check owners handbook). This is the driver's responsibility.
- D) Use a spray lubricant on contacts for wiring connections as well as removable and insert able parts regularly (ie. Trailer plug and ball mount and pin and clip).
- E) Check towball for wear and tear regularly, ensure towball is correctly fastened and torqued before towing.

WARRANTY INFORMATION

Your towbar comes with a limited lifetime warranty covered nationwide.
For warranty information please visit www.towritetowbars.com.au

Contact us at warranty@towritetowbars.com.au or call us on 1800 869 748

TOWRITE

TOWBARS AUSTRALIA

**TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748**

info@towritetowbars.com.au
www.towritetowbars.com.au