

**VEHICLE: Audi Q4 & Q5/Cupra Tavascan/
Skoda Elroq & Enyaq/Volkswagen ID.4 & ID.5
PART NUMBER: 145104**

TOWRITE
TOWBARS AUSTRALIA

TOWBAR FITTING INSTRUCTIONS



CUPRA



SKODA



- ▶ **Audi Q4 SUV** 12/2024 - On
Max Towing Braked: 1800 kg, Max Down Ball Weight: 75 kg
- ▶ **Audi Q5 SUV** 10/2025 - On
Max Towing Braked: 2400 kg, Max Down Ball Weight: 75 kg
- ▶ **Cupra Tavascan SUV** 02/2025 - On
Max Towing Braked: 1800 kg, Max Down Ball Weight: 75 kg
- ▶ **Skoda Elroq SUV** 09/2025 - On
Max Towing Braked: 1800 kg, Max Down Ball Weight: 75 kg
- ▶ **Skoda Enyaq SUV** 11/2024 - On
Max Towing Braked: 2200 kg, Max Down Ball Weight: 75 kg
- ▶ **Volkswagen ID.4 SUV** 03/2025 - On
Max Towing Braked: 1800 kg, Max Down Ball Weight: 75 kg
- ▶ **Volkswagen ID.5 SUV** 07/2025 - On
Max Towing Braked: 1800 kg, Max Down Ball Weight: 75 kg

For Trailer Towing Only

Approximate Installation Time: 1.5 hrs
Maximum Towing Capacity Braked: 2400 kg
Maximum Down Ball Weight: 75 kg

Vehicles towing capacity may vary refer to owners handbook

**TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748**

WARNING



ELECTRIC, HYBRID AND PHEV VEHICLES



- Fitting of an EV (electric vehicle) or HV (hybrid vehicle) must only be done by qualified personnel.
- The required qualifications may vary depending on the region. Please observe the local legislation and legal directives relating to service to electric vehicles.
- Disregarding these instructions may lead to serious injuries or death.

WARNING

- This product is designed solely for towing and must be loaded exactly as outlined in your vehicle's Owner's Manual.
- If used with a bike carrier there is a 25% reduction in the towbar or vehicle ball weight capacity whichever is lowest.
- Do NOT drill, cut, weld, or modify this towbar under any circumstances.
- You might need to drill into the vehicle to install the parts. Before you drill, take a quick look behind the chassis rail and body panels to make sure nothing is in the way.
- The stated load ratings apply only where the trailer is equipped with an appropriately rated and functioning braking system.
- If installed in any position other than what is shown in these instructions, the towball mount may interfere with or obstruct certain vehicle features (such as tailgate operation or chassis clearance).

GENERAL


- Before installing this towbar, read the fitting instructions thoroughly and ensure all installation hardware is correct.
- Confirm the towbar is compatible with your vehicle, and consider any modifications or accessories (tray, canopy, suspension, etc.) that may affect installation.
- After drilling, clear away all metal filings, remove burrs, and apply a rust inhibitor to any exposed metal surfaces.
- The supplied high-tensile fasteners are essential to achieving the specified rating. If replacements are needed, ensure they are of the same grade (refer to parts table on Page 3) and quality.
- Routinely check towball is tight before towing.
- Check all fasteners routinely and regularly.
- Be aware of changes in vehicle shape and bumper designs as well as any accessories that may alter the installation of this product.
- Bumper cut instructions are a guide only, ensure correct area is marked out prior to cutting.
- TowRite advises the removal of the ball mount when not in use to provide a clear view of the vehicle's registration plate if obscured.
- These instructions are provided as a guide only. TowRite accepts no responsibility for any changes to vehicle or fitment.
- Check the towball is securely tightened before towing.
- The towbar comes with 2 x compliance labels - one goes on the towbar and one in the driver's side door well.
- A two-person lift is recommended for installation.
- It is recommended that installation is carried out by a trained professional.

Ensure that all lights and systems are functioning properly. Check the vehicle dash for any warning lights and visually inspect the vehicle for any damage before commencing work.

Torque Settings 8.8 Grade High Tensile Bolts

Bolt Size	Torque
M8	22 Nm $\pm$ 10%
M10	46 Nm $\pm$ 10%
M12	77 Nm $\pm$ 10%
M14	146 Nm $\pm$ 10%
M16	190 Nm $\pm$ 10%
Tow Ball	350 Nm $\pm$ 10%

CONTENTS

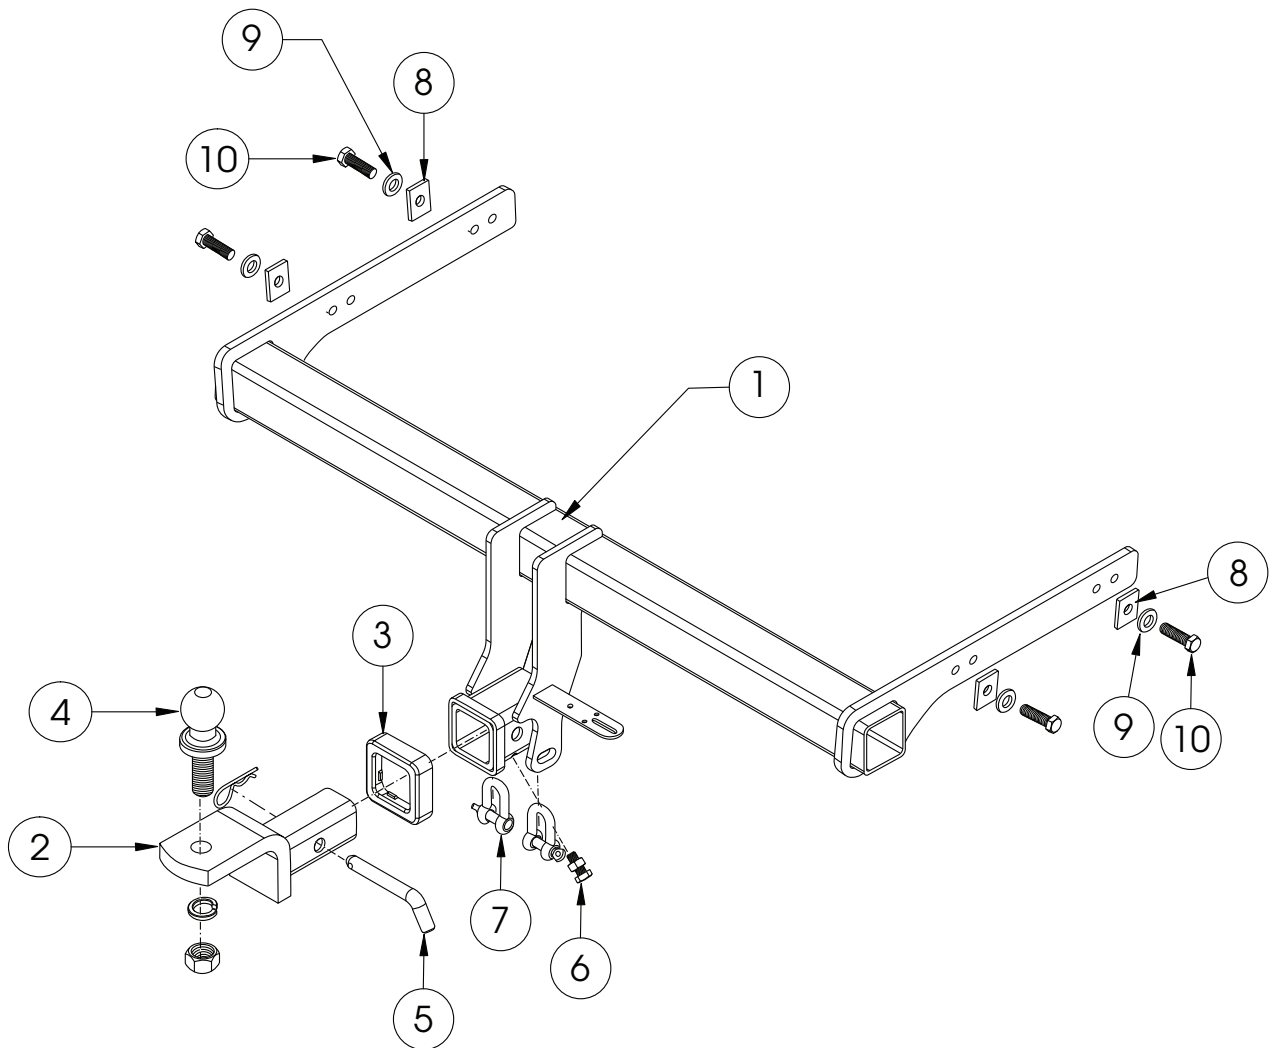

ITEM NO.	PART DESCRIPTION	QTY
1	TOWBAR ASSEMBLY	1
2	TB00 BALLMOUNT	1
3	PLASTIC SHROUD	1
4	50 mm TOWBALL	1
5	HITCH PIN AND CLIP	1
6	ANTI RATTLE BOLT WITH LOCKING NUT	1
7	D SHACKLE	2
8	5 mm PLATE	4
9	M12 WASHER	4
10	M12 X 1.75 X 40 mm BOLT	4


TOWBAR INSTALLATION

For Audi Q4 and Q5 SUV Variants

1 Apply masking tape around the edges of the tail lights.

2 Using a plastic trim tool, gently pry up the outer edge of the cover closest to the tail light, then lift and remove the cover.

Repeat on the opposite side.

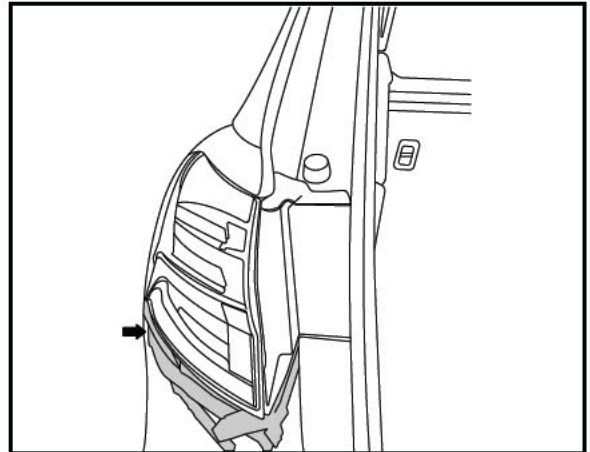

3 Remove the 2 x screws located beneath the cover. Repeat on the opposite side.


Repeat on the opposite side.



4 Carefully pull the tail light outward and disconnect the wiring harness. Repeat on the opposite side.

5 Remove the 3 x screws from the wheel arch.

Repeat on the opposite side.

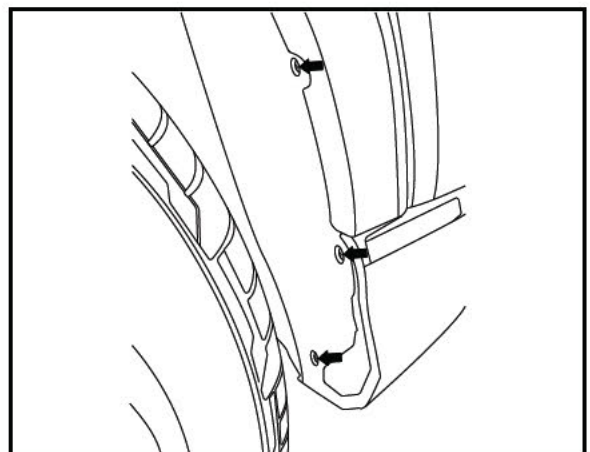


6


Carefully peel back the wheel arch flare to expose the screws.
Repeat on the opposite side.

7


Remove the 1 x screw located near the top of the wheel arch flare.
Repeat on the opposite side.

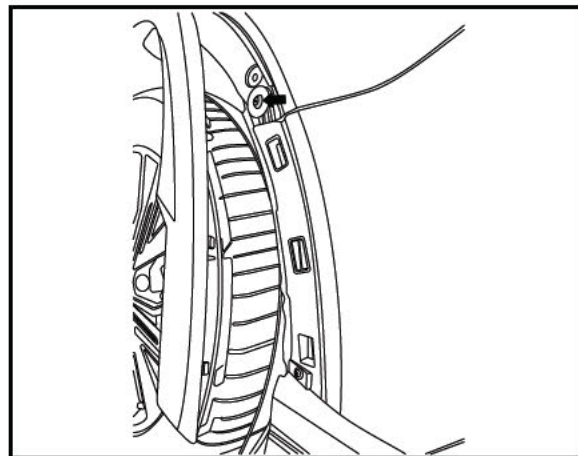**8**

Pull the felt liner aside inside the wheel arch to expose the screws.
Remove the 3 x screws located behind the felt liner.
Repeat on the opposite side.

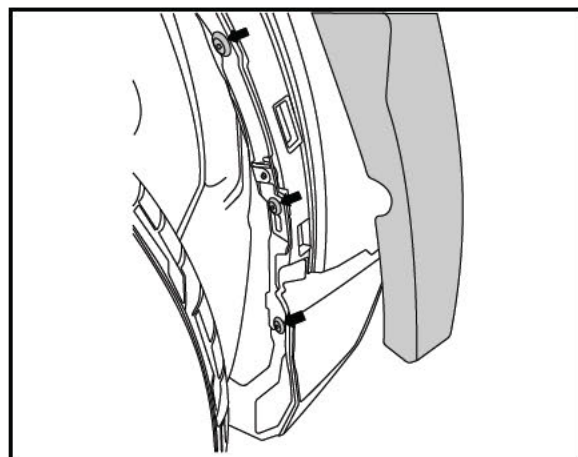**9**

Remove the 8 x screws from underneath the bumper. Remove the 2 x screws securing the clips and carefully remove the clips using a trim clip removal tool.

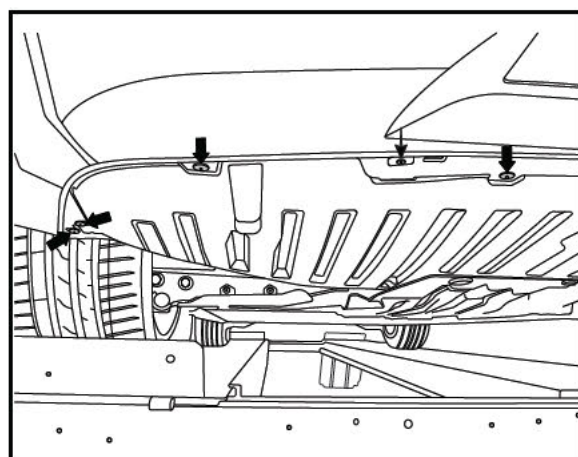**10**


Carefully unclip the bumper, starting at the outer edges near the wheel arches.

11


Disconnect the wiring harness inside the bumper.

- 12** Remove the 3 x bolts on the LHS and 4 x bolts on the RHS securing the impact beam. Remove and discard the impact beam and bolts.

LHS

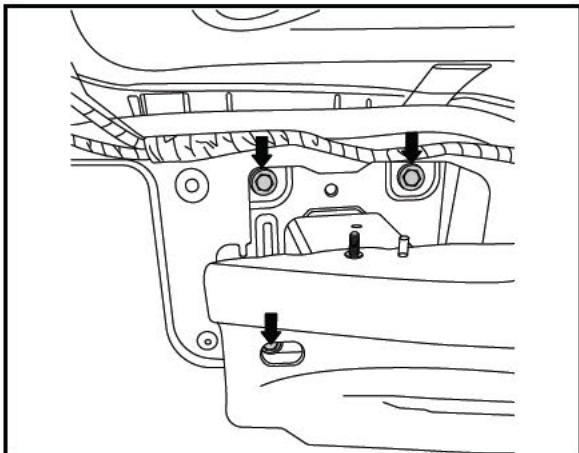


RHS

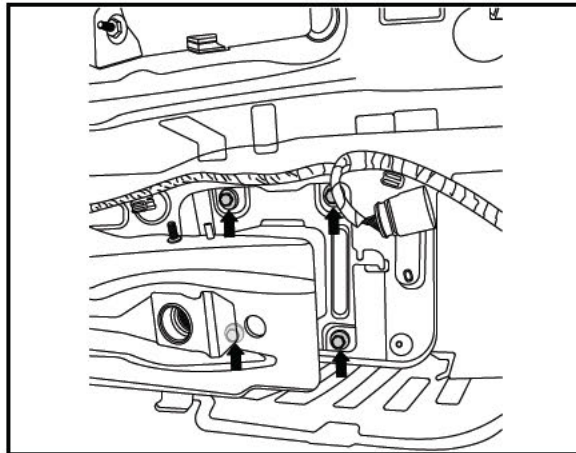


- 13** Feed the towbar side arms into the chassis rails.

- 14** Secure the towbar ① using 2 x bolts ⑩, washers ⑨, and 5 mm plates ⑧ on each side.
Repeat on the opposite side.

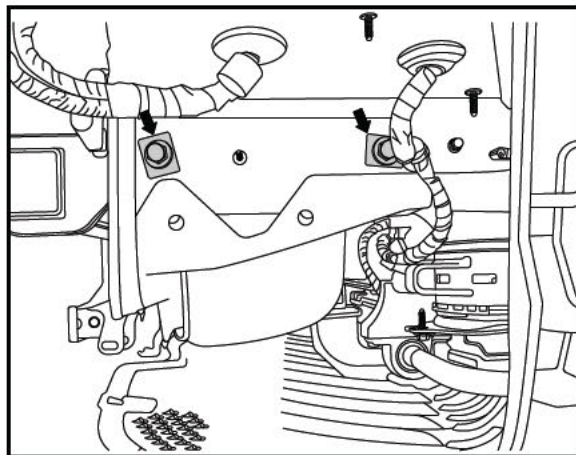

- 15** Ensure all fasteners are tightened according to the torque settings on Page 3.

- 16** Tape over the hole in the lower part of the bumper.

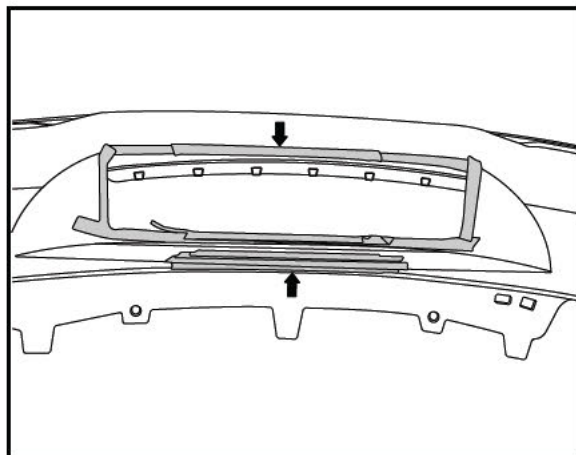


- 17** Carefully reinstall the bumper, ensuring the towbar passes through the opening in the bumper.

- 18** Reinstall all screws and clips in the reverse order of removal.


For Volkswagen ID.4 and ID.5 / Cupra Tavascan SUV Variants

1 Apply masking tape beneath the tail lights to protect the bumper and tail lights from damage.


2 Remove the tail light covers.

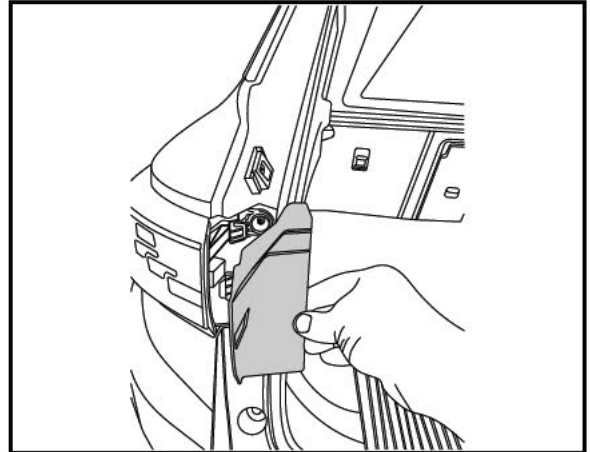

3 Remove the 2 x Torx screws securing the tail light, then carefully pull the tail light outward to remove it.

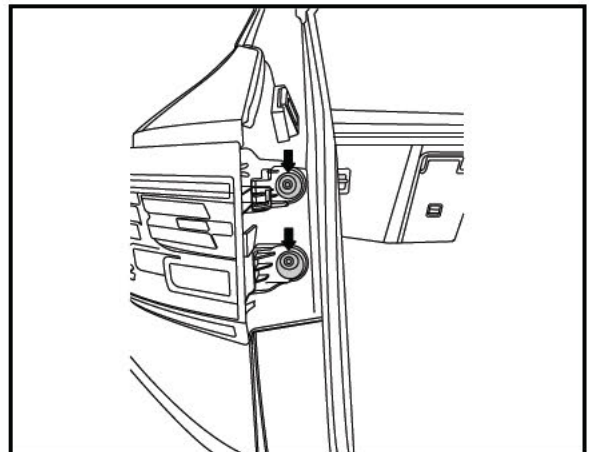


4 Remove the 2 x Torx screws securing the bumper.
Repeat on the opposite side.

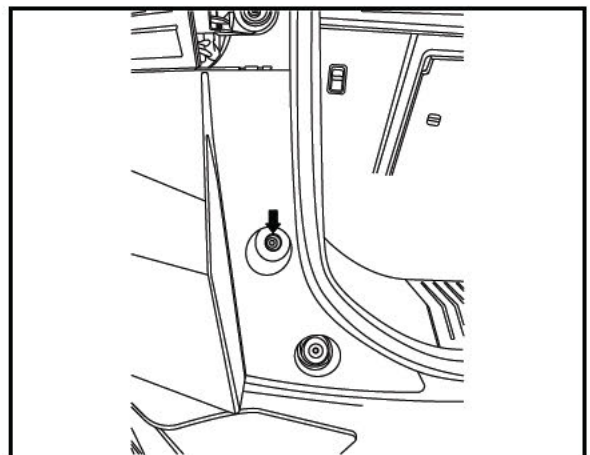


5


Remove the number plate, then remove the 2 x screws located behind it.

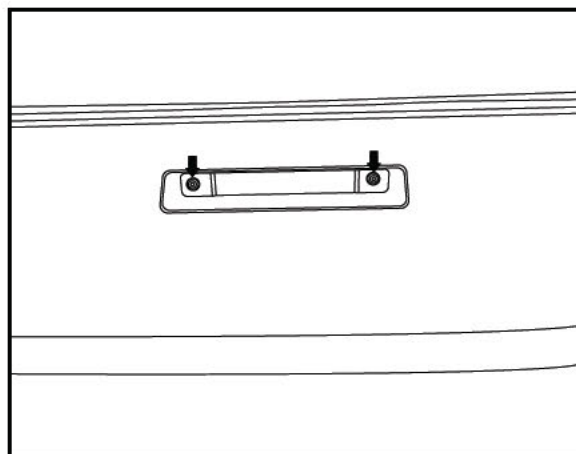**6**


Remove the 3 x Torx screws from each wheel arch.

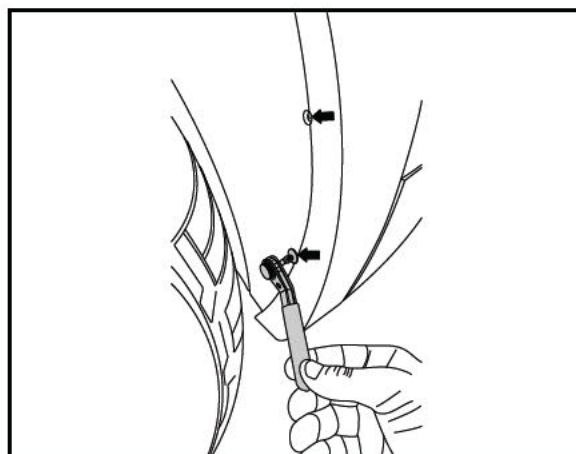**7**

Carefully peel back the wheel arch flare and remove the exposed Torx screw.

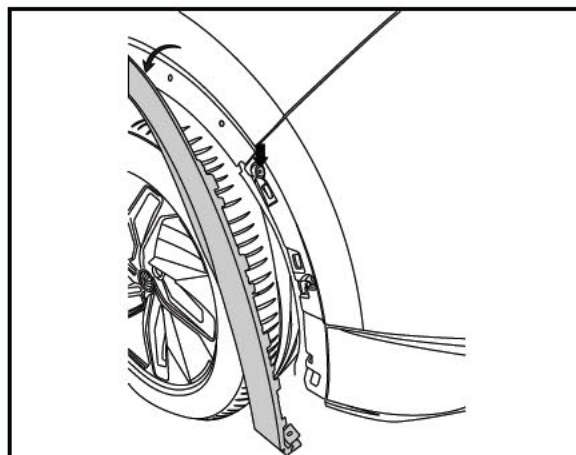
**8**

Remove all Torx screws and plastic clips from underneath the bumper bar.

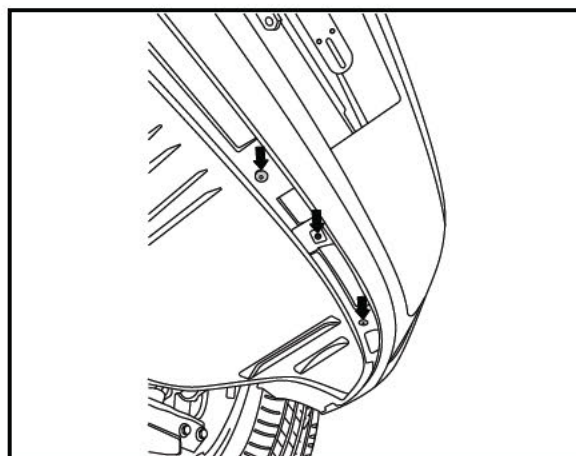


- 9** Carefully unclip the bumper from the sides, then pull it straight rearward to remove it.
- 10** Disconnect the reverse sensor wiring (if applicable) and place the bumper in a safe location.
- 11** Remove the bolts securing the impact beam, then remove and discard the impact beam.
- 12** Insert the towbar side arms **1** into the chassis rails and secure each side 2 x bolts **10**, washers **9**, and 5 mm plates **8**.

LHS

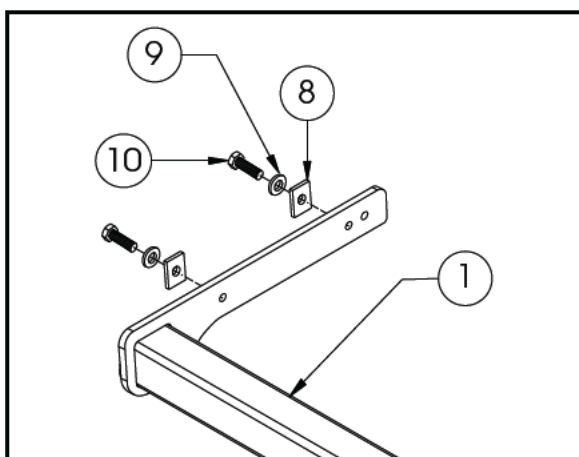


RHS

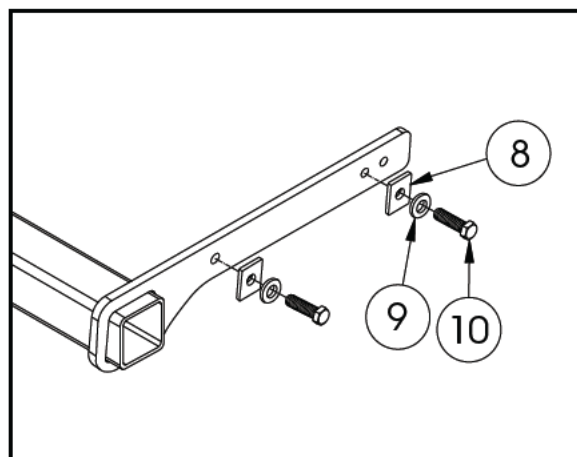

- 13** Ensure all fasteners are tightened according to the torque settings on Page 3.

For Skoda Enyaq and Elroq SUV Variants


- 1** Apply masking tape around the edges of the tail lights.
- 2** Carefully pry up the outer edge of the cover closest to the tail light, then lift and remove the cover.

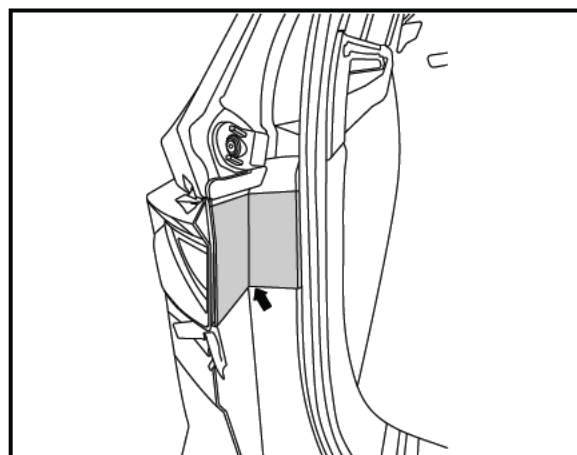


3

Remove the 2x screws located beneath the cover.

Repeat on the opposite side.

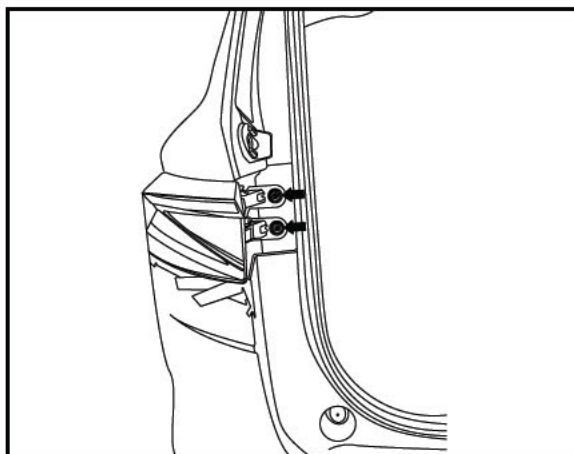
**4**

Pull the tail light straight rearward and disconnect the wiring harness.

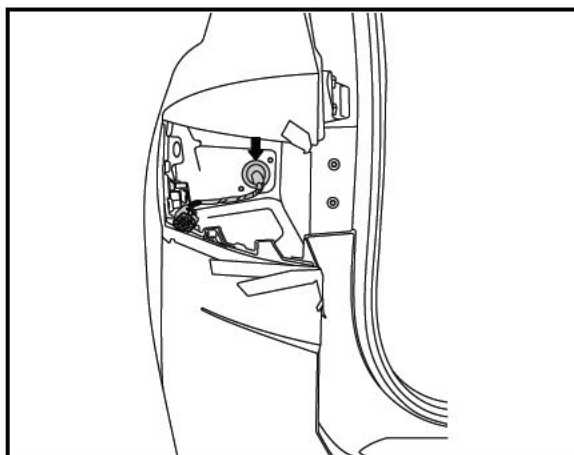**5**



Remove the 3 x Torx screws from the wheel arch.

Repeat on the opposite side.

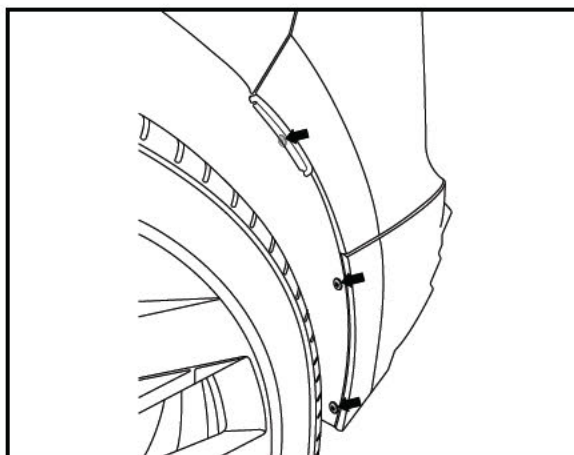
**6**

Carefully peel back the wheel arch cover and remove the 2 x screws.

Repeat on the opposite side.

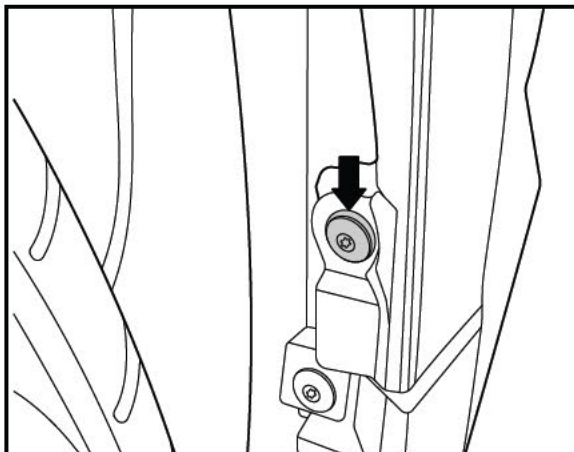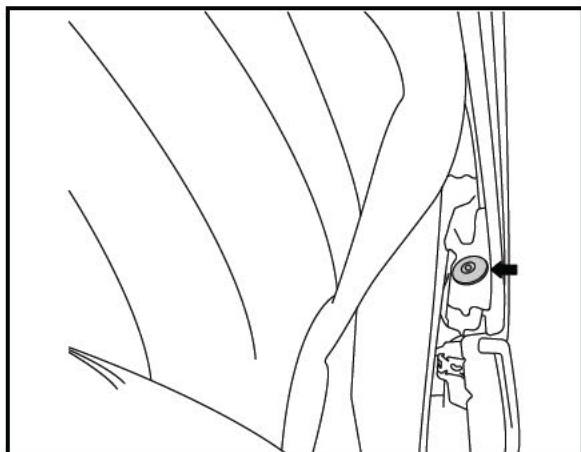


- 7** Remove the 8 x screws from underneath the edges of the bumper and the centre screw. Lower the rear of the undertray to expose the 3 x plastic clips, then remove the clips.

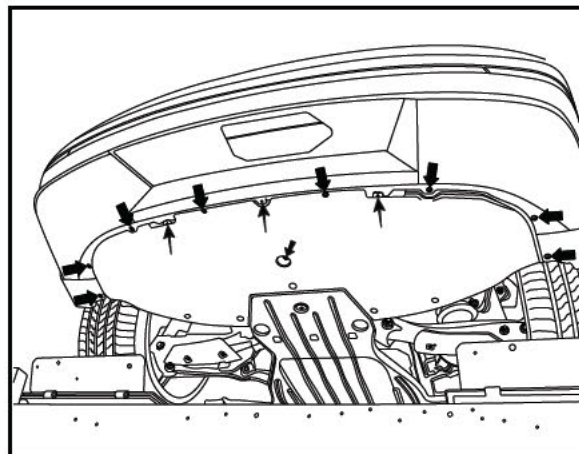


- 8** Carefully unclip the bumper, starting at the wheel arches, then set it aside for later reinstallation.

- 9** Remove the 7 x bolts securing the impact beam (3 x on the LHS and 4 x on the RHS).

LHS

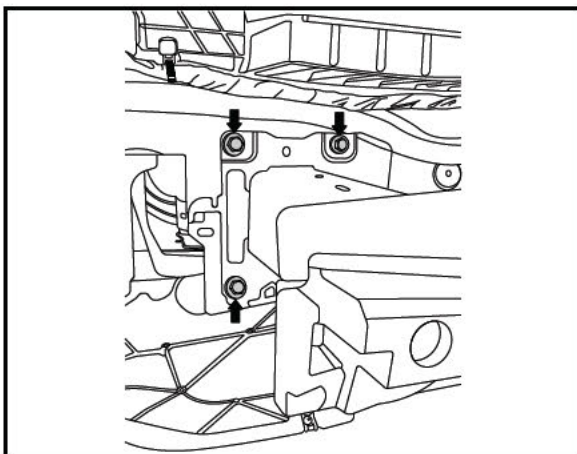


RHS

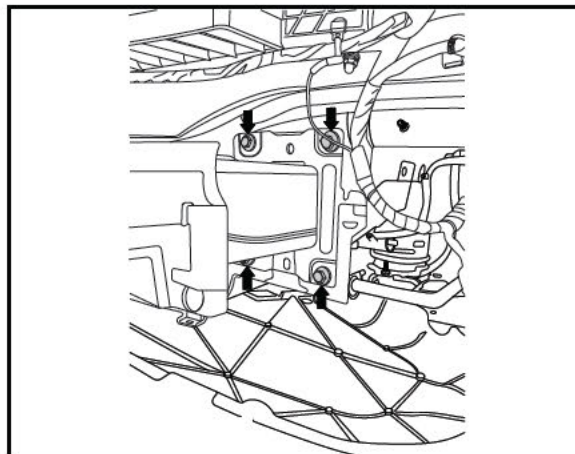


- 10** Remove and discard the impact beam.
(Note: The impact beam is bonded in place and may require additional force to remove.

- 11** Lift the towbar assembly ① into position and feed the side arms into the chassis rails.

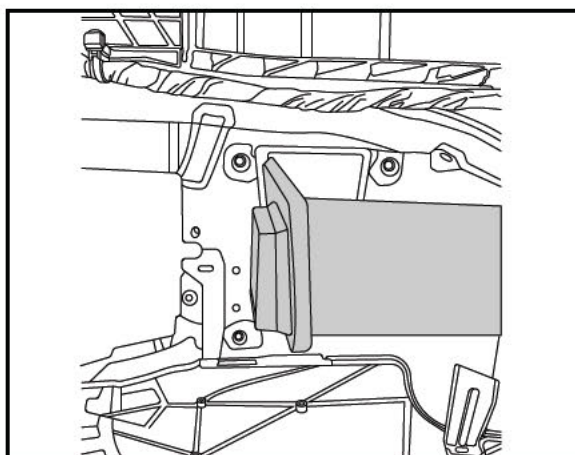


- 12** Secure the towbar ① to the side of the chassis using 2 x bolts ⑩, washers ⑨, and 5 mm plates ⑧.
Repeat on the opposite side.

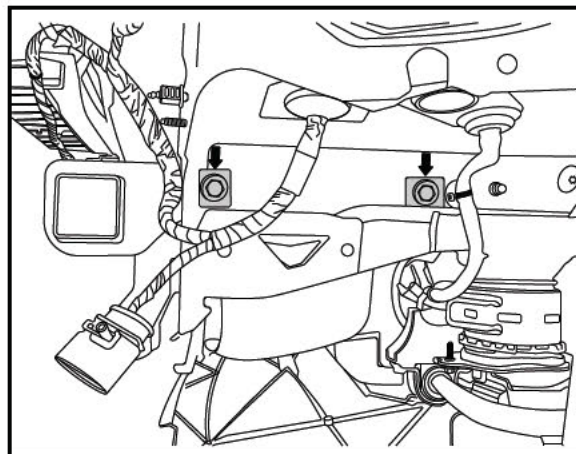

- 13** Ensure all fasteners are tightened according to the torque settings on Page 3.

- 14** Apply masking tape over the opening in the bumper to protect the paint when refitting the bumper over the installed towbar.

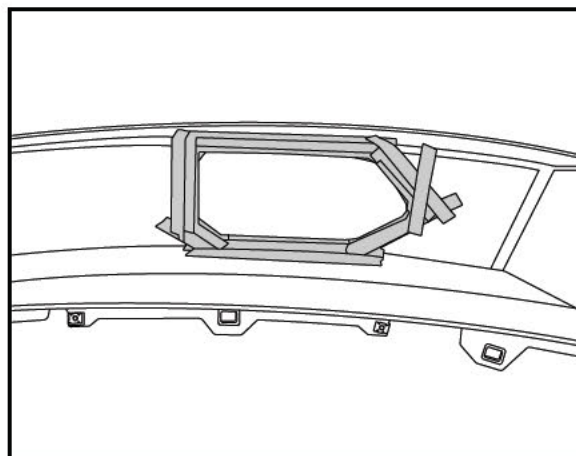

- 15** Refit the bumper in the reverse order of removal.


BALLMOUNT INSTALLATION

16 Fit the plastic shroud ③ and ballmount ② into the receiver.
Fasten with hitch pin & clip ⑤.

Attach the anti rattle bolt with locking nut ⑥ and D shackles ⑦.

NOTE: This bolt is only to be tightened when not towing.

Fit the towball ④ to the ballmount ②.

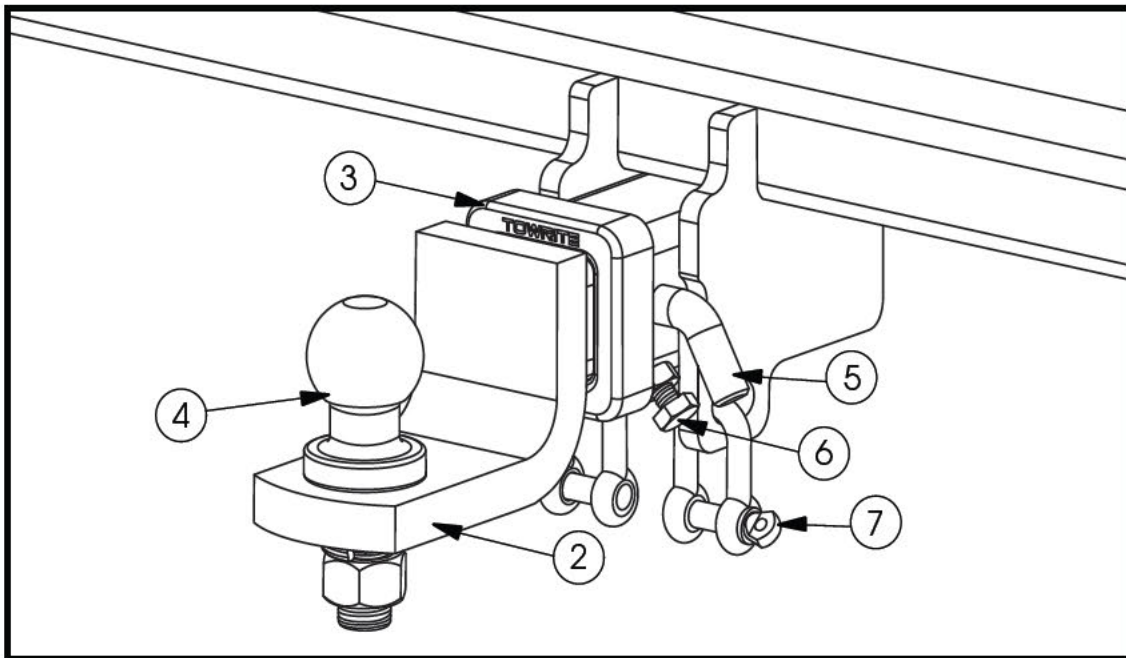



Please see below for Ballmount installation video.



LABEL INSTALLATION

CLEAN SURFACES

Attach 1 x compliance label on the towbar and the second on the driver's side door well.

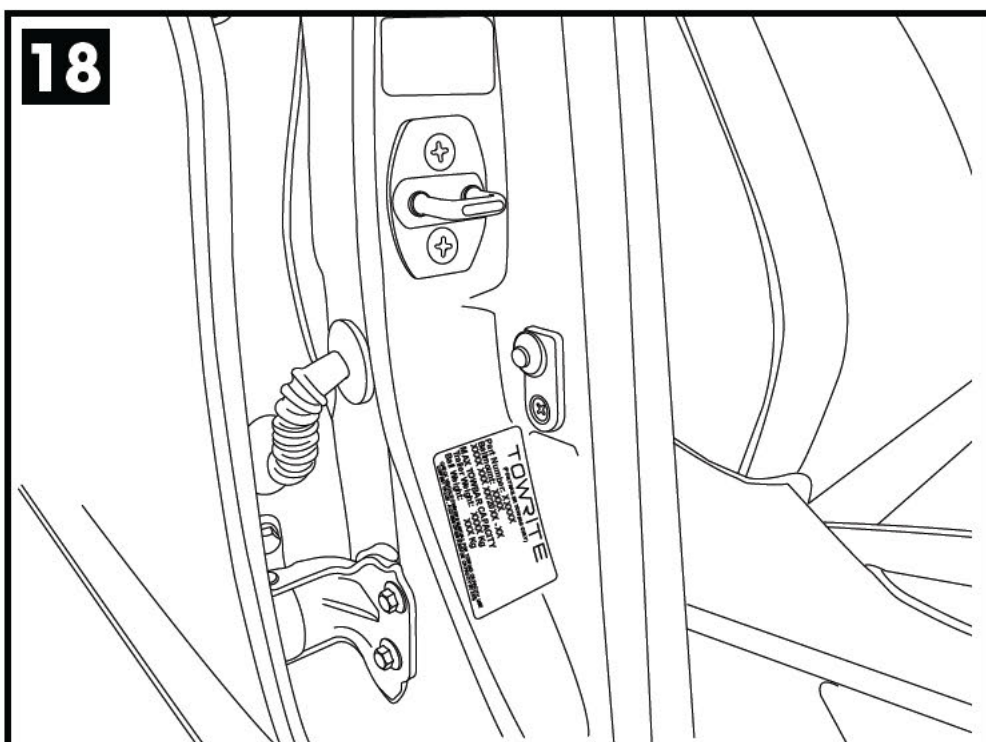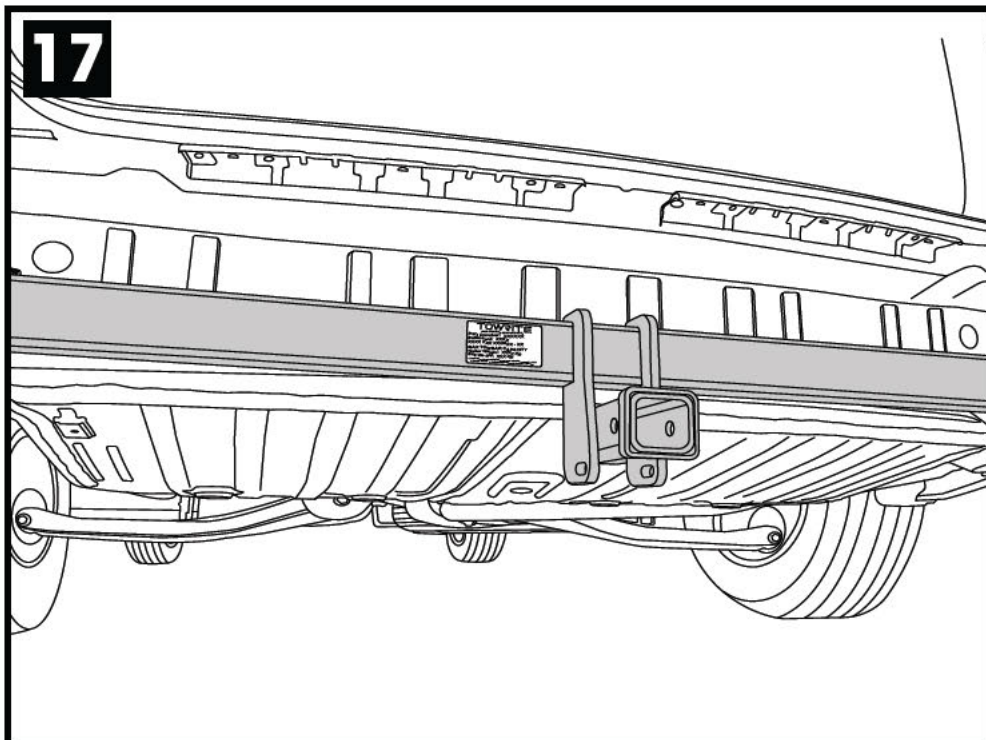

Maintenance and Care

Here are some maintenance and care tips to allow for trouble free operation of your towbar for years to come.

- A) TowRite recommend removal of the ball mount/tongue when not in use.
- B) Check all fasteners regularly and tighten if necessary. If any fasteners are worn or damaged use the same grade replacements.
- C) Ensure towing and down ball weights do not exceed manufacturer's specifications (this may differ between vehicles - check owners handbook). This is the driver's responsibility.
- D) Use a spray lubricant on contacts for wiring connections as well as removable and insert able parts regularly (ie. Trailer plug and ball mount and pin and clip).
- E) Check towball for wear and tear regularly, ensure towball is correctly fastened and torqued before towing.

WARRANTY INFORMATION

Your towbar comes with a limited lifetime warranty covered nationwide.
For warranty information please visit www.towritetowbars.com.au

Contact us at warranty@towritetowbars.com.au or call us on 1800 869 748

TOWRITE

TOWBARS AUSTRALIA

**TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748**

info@towritetowbars.com.au
www.towritetowbars.com.au