



Installation instructions

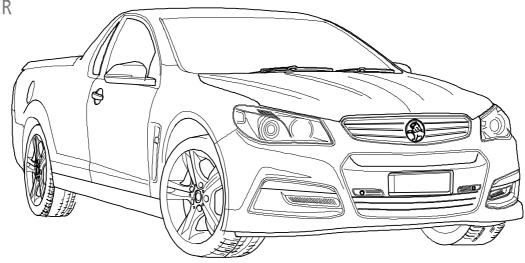

750042

HOLDEN VF UTE

07/13 >>

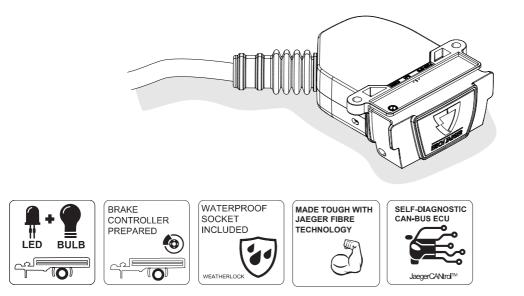


Reference:

The following information must be reviewed before beginning the assembly:


The installation instructions are to be thoroughly read.

The installation should be carried out by qualified personnel with the relevant technical knowledge. The vehicle manufacturers' current technical notices and information on retrofitting must be followed. The removal and replacement instructions found in the current repair manuals must be followed. It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


OVERVIEW

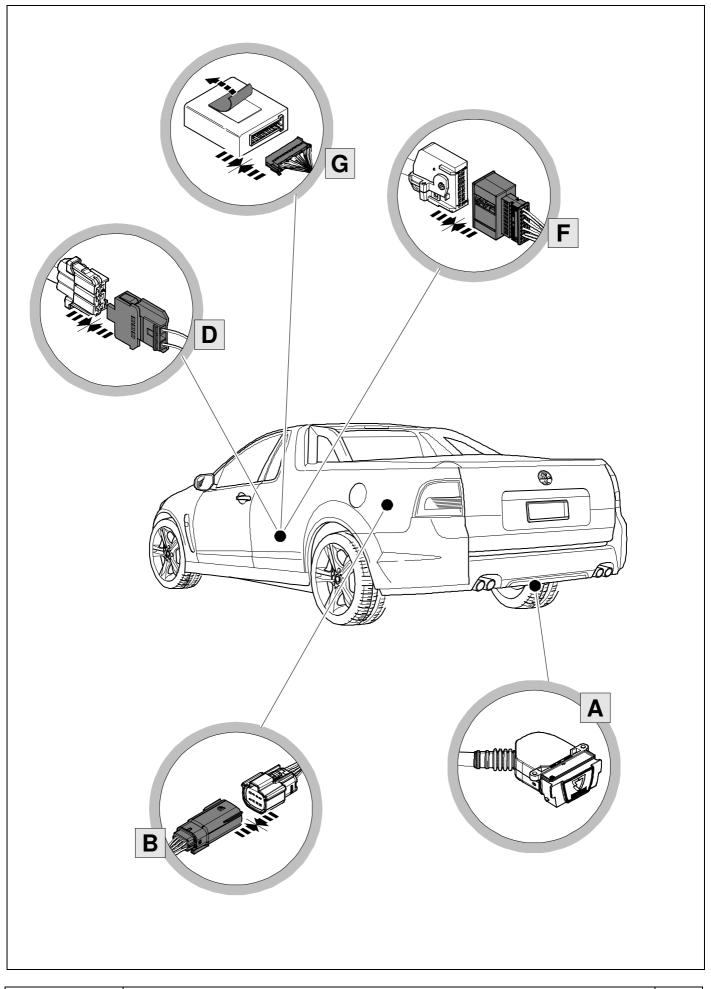



KIT

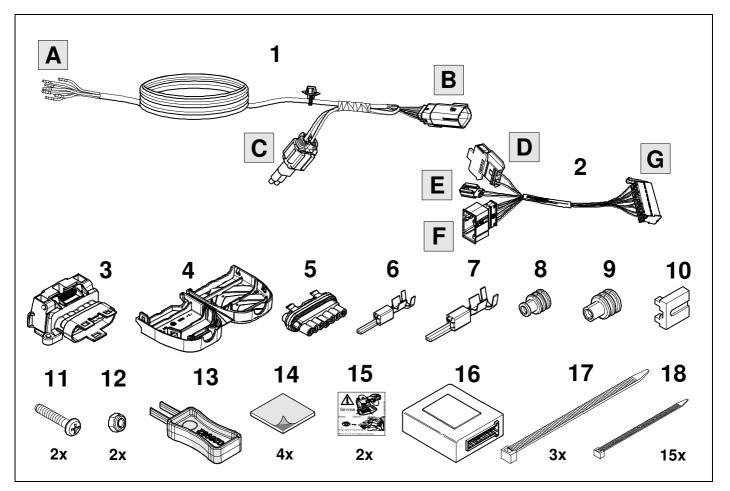



TOOLS

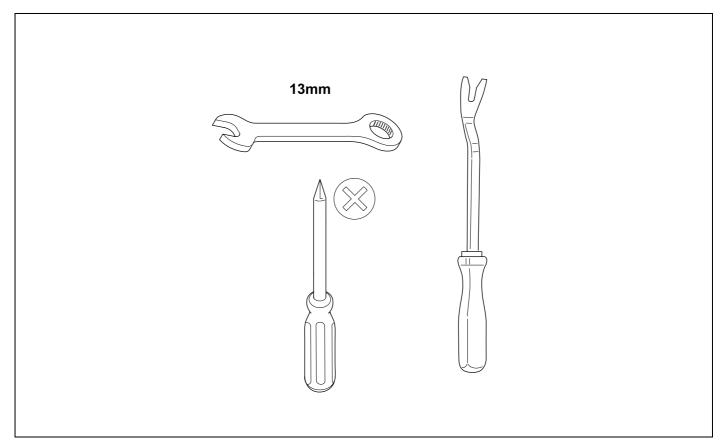

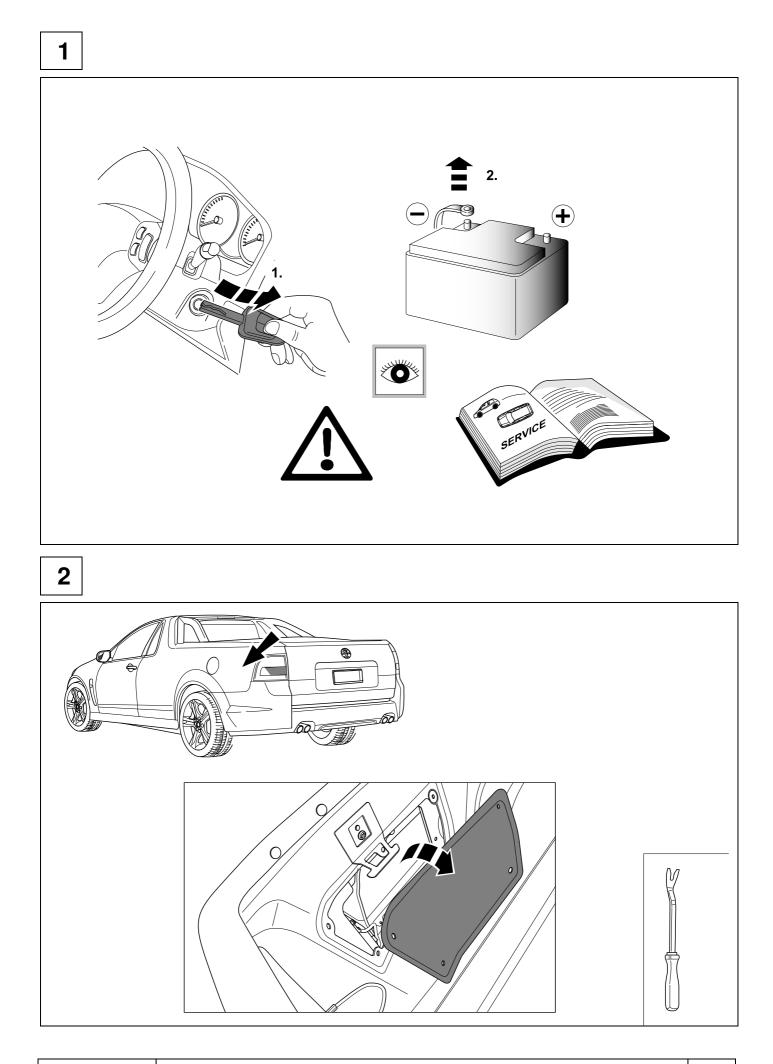

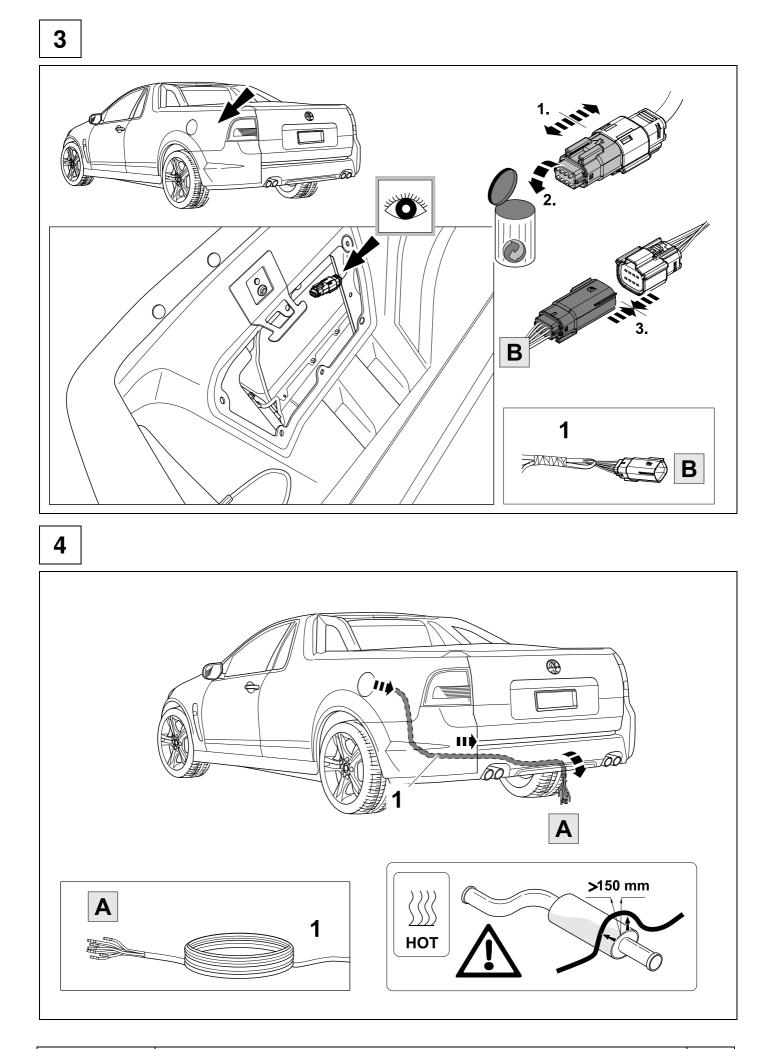


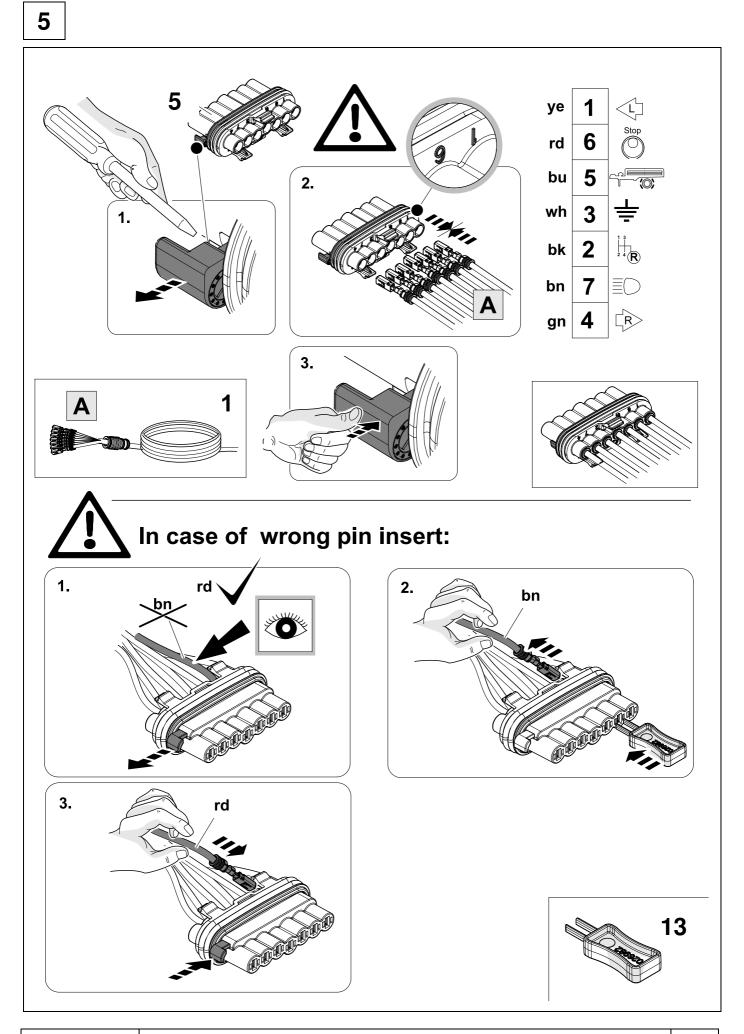


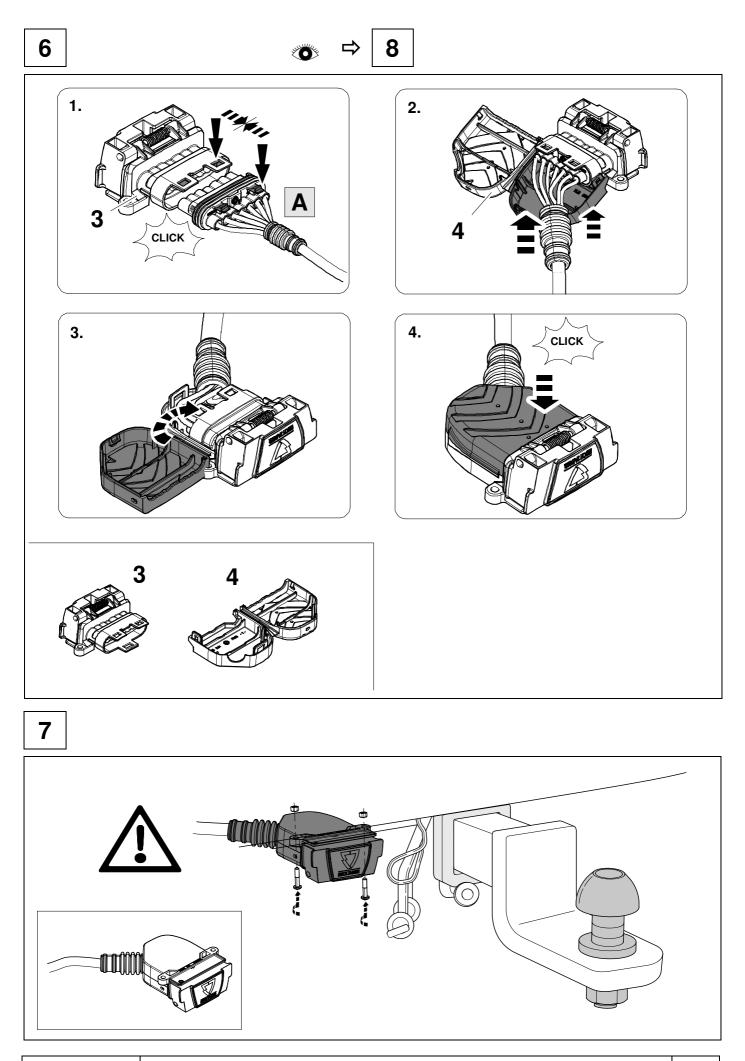

8				ž	o -	⇒ 9						
1					уе				\bigcirc			
2					bk				13 2 4 R			
3					wh				÷			
4					gn				$\langle \rangle$			
5					bu				~ ~~~~			
6					rd				Stop			
7					bn				ĒO			
9	bk	wh	gу	gn	rd	bu	ye	bn	pu	or	no	
GB	black	white	grey	green	red	blue	yellow	browr	purple	orange	not occupied	


10

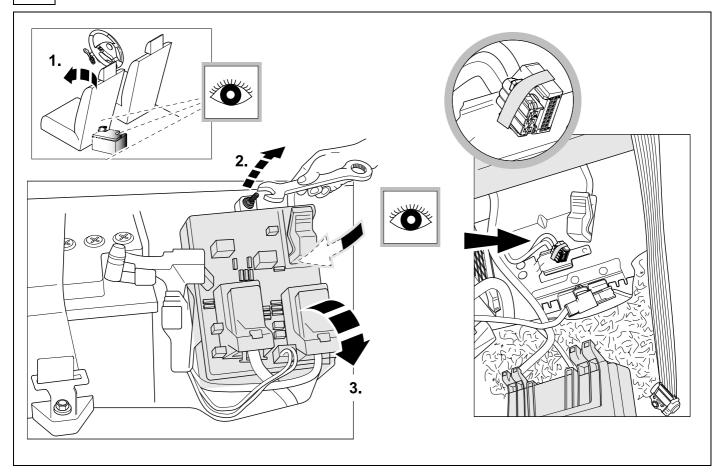


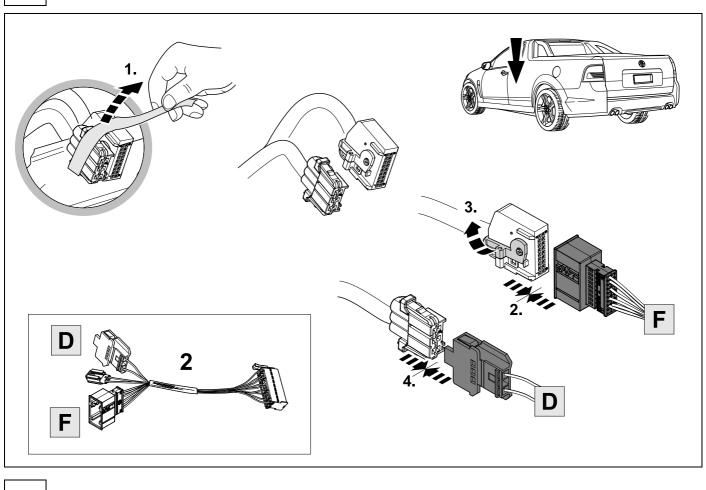



12

11

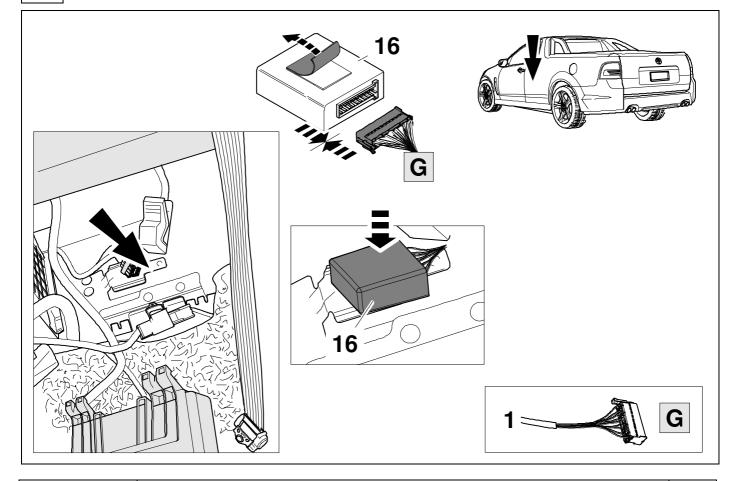


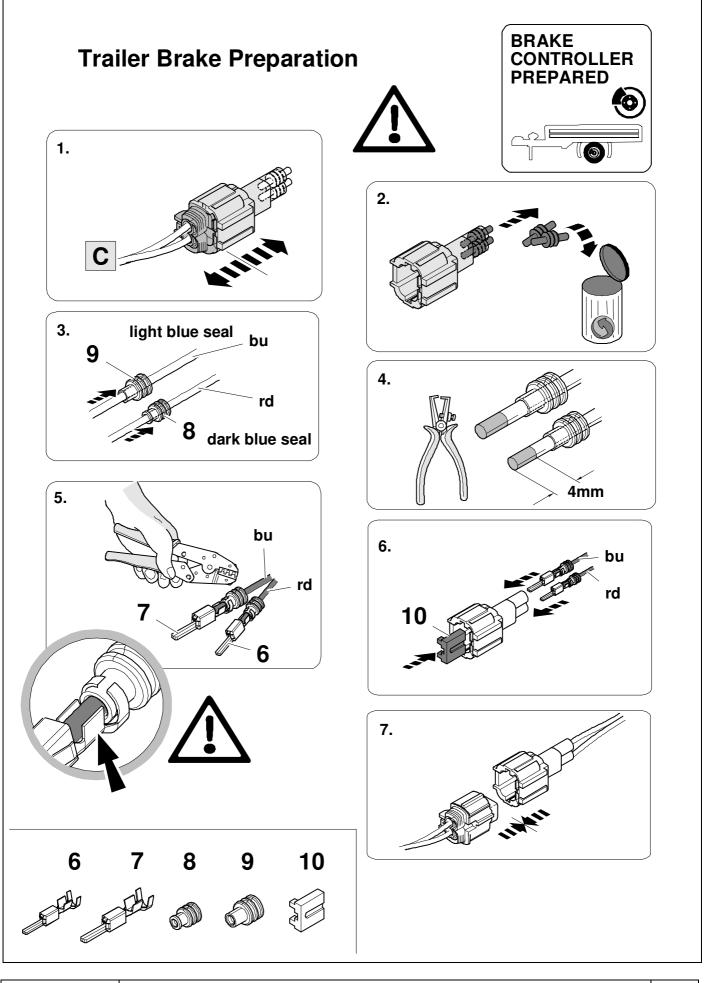

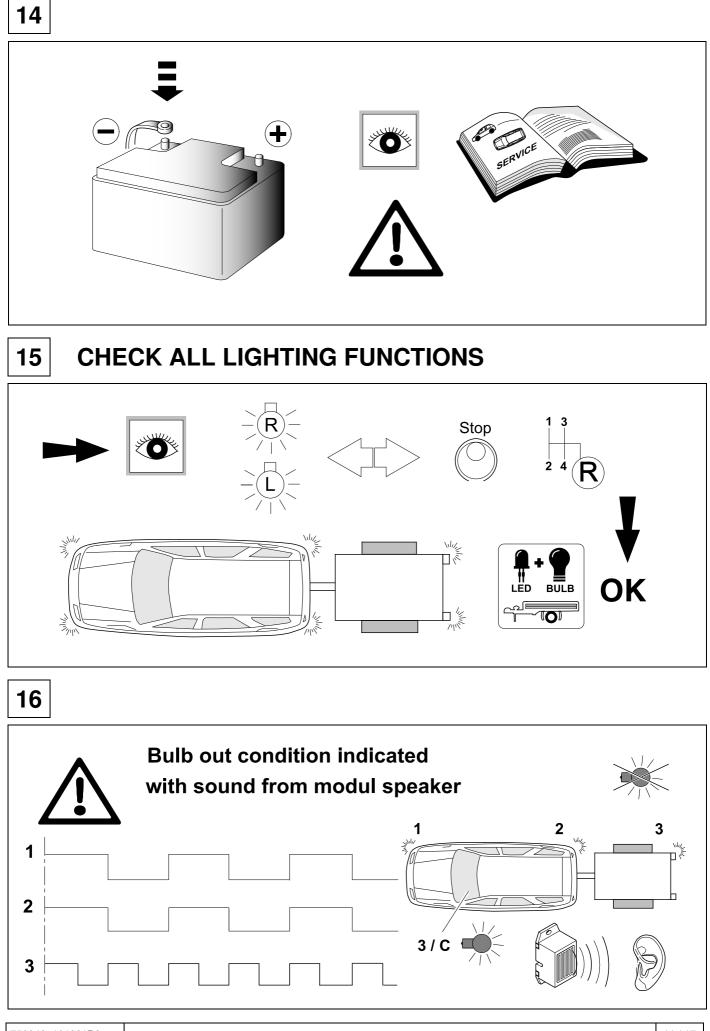


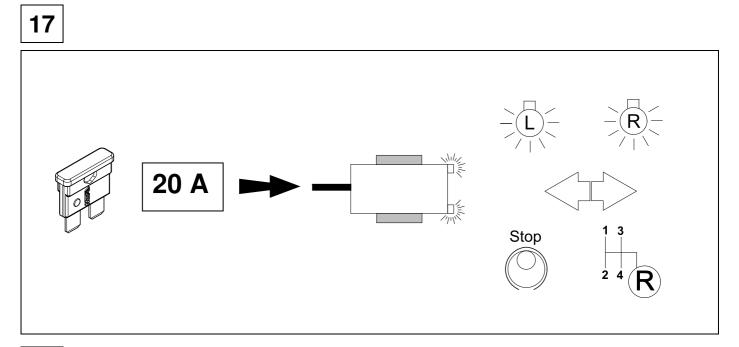


18 CHECK BULB OUT DETECTION

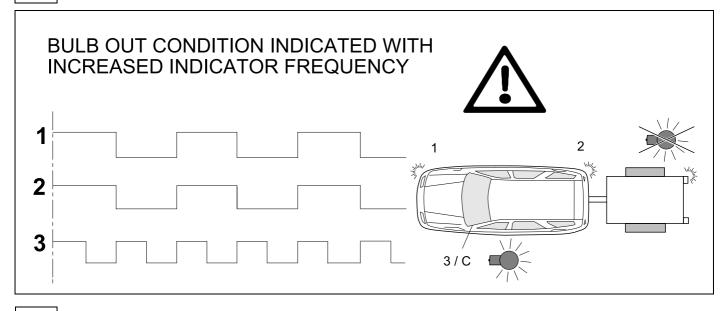


19

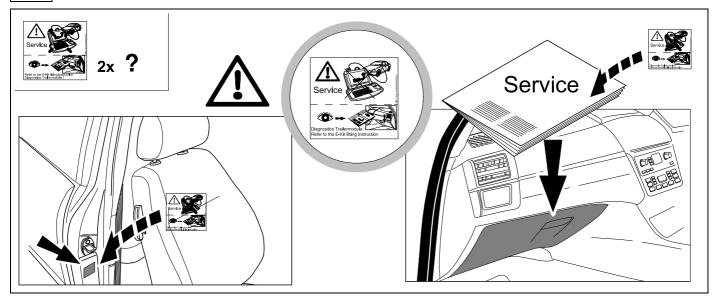

Status LED for self-diagnosis

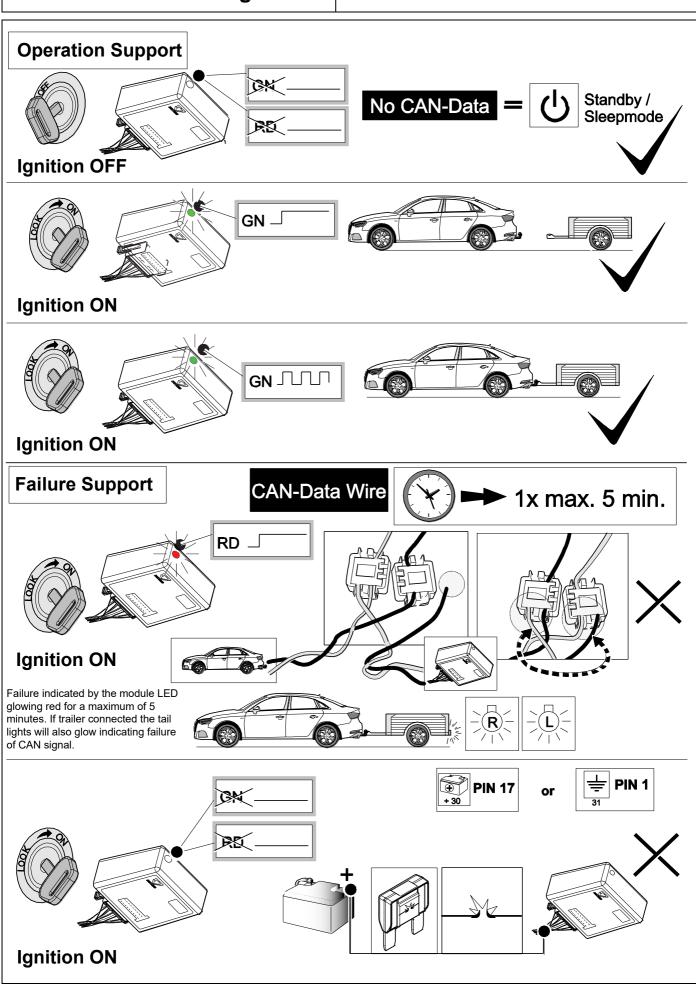

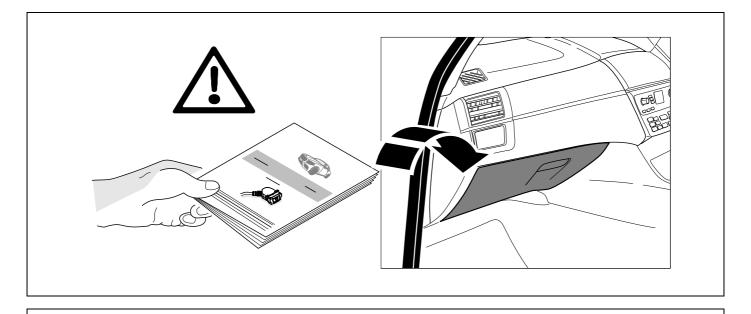



Subject to change in terms of construction, equipment and colour, and may contain errors. The information and illustrations are non-binding.