
ERICH JAEGER

Installation instructions

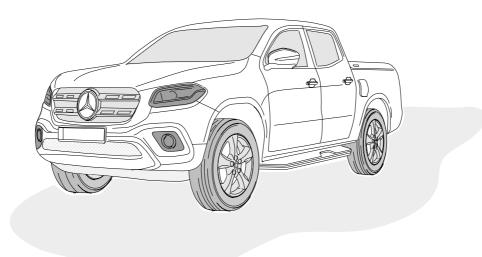


750088EJ

MERCEDES BENZ X-Klasse

11/17 >>



SCAN FOR LATEST INSTRUCTIONS

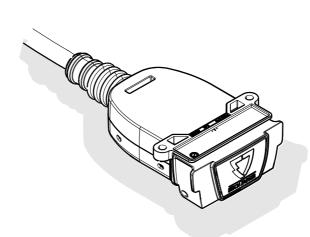












Reference:


The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge. The vehicle manufacturers' current technical notices and information on retrofitting must be followed. The removal and replacement instructions found in the current repair manuals must be followed.


It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.

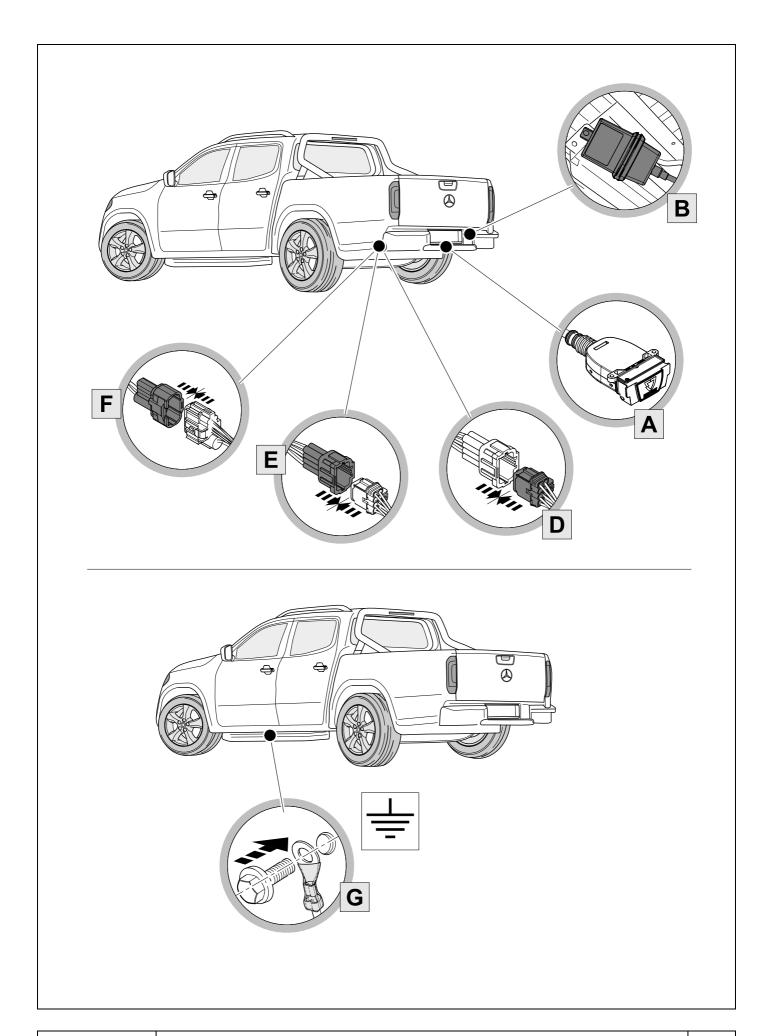


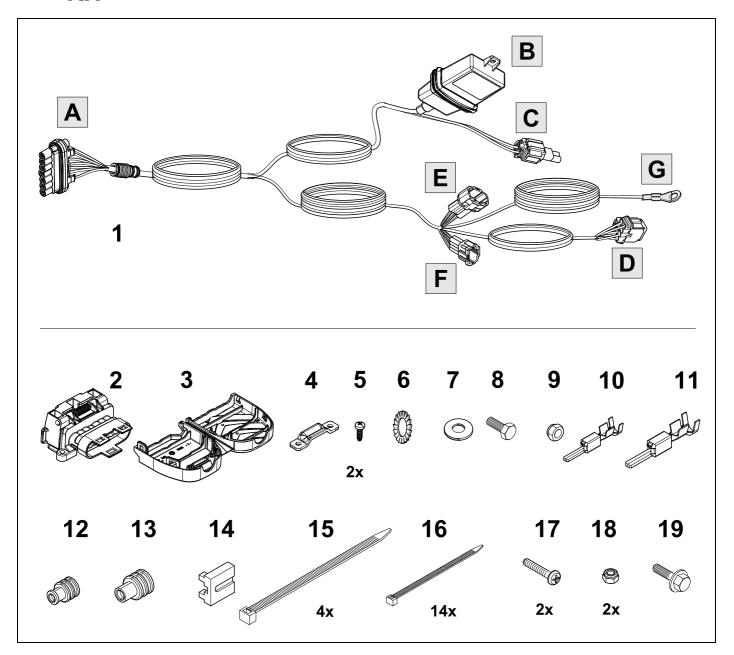


TOOLS

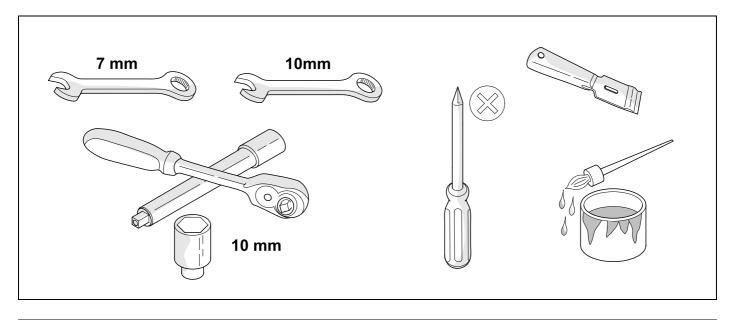

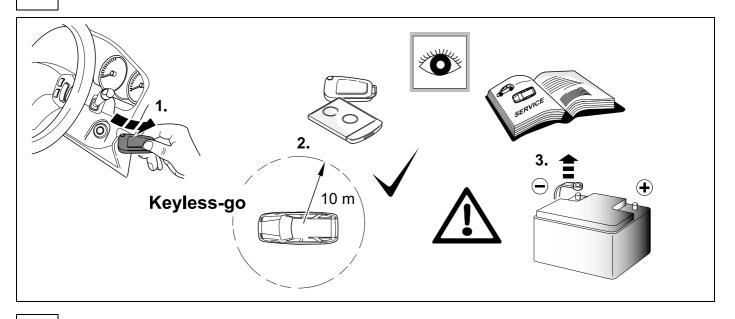

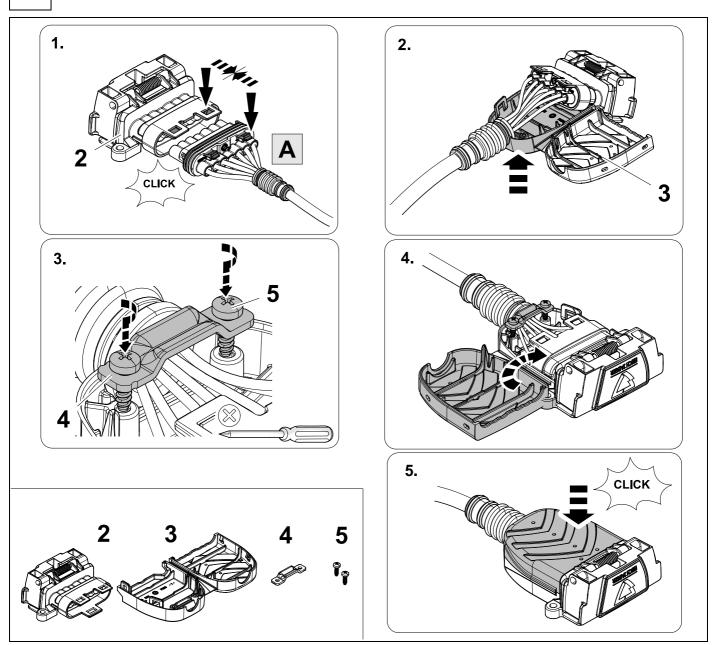


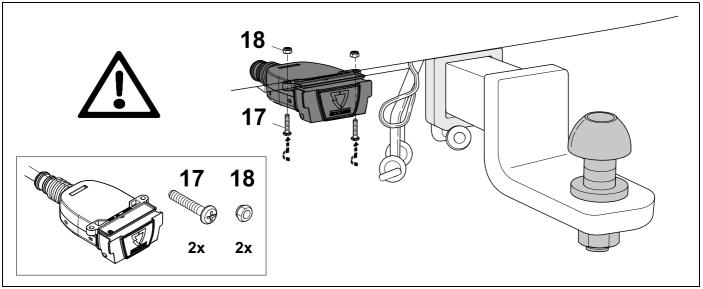



|--|


1	ye	\triangleleft
2	bk	1 3 2 4 (R)
3	wh	÷
4	gn	ightharpoonup
5	bu	
6	rd	Stop
7	bn	

5	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
(GB)	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied

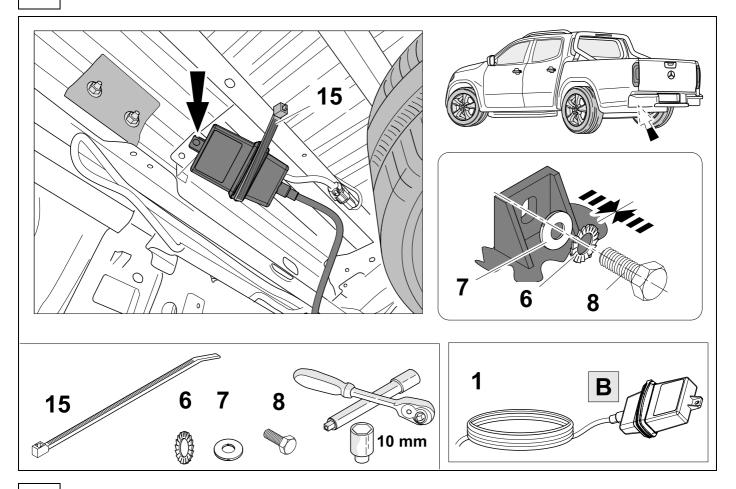


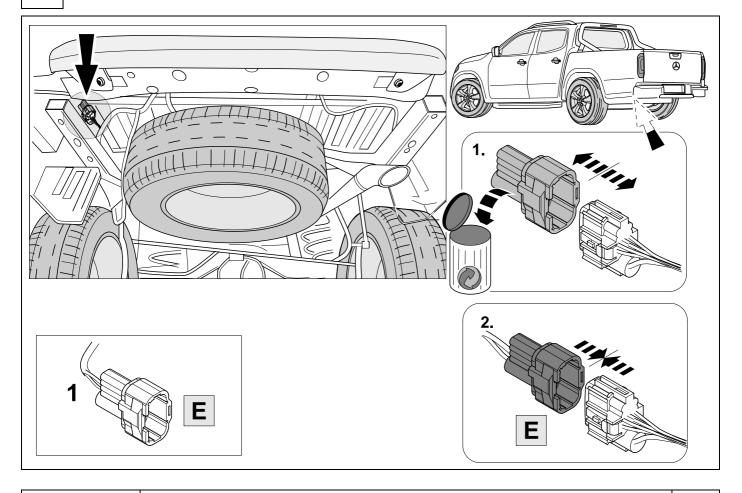

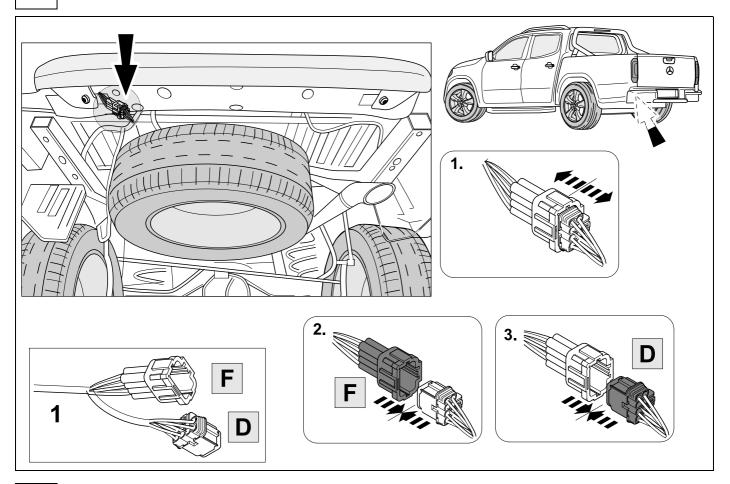


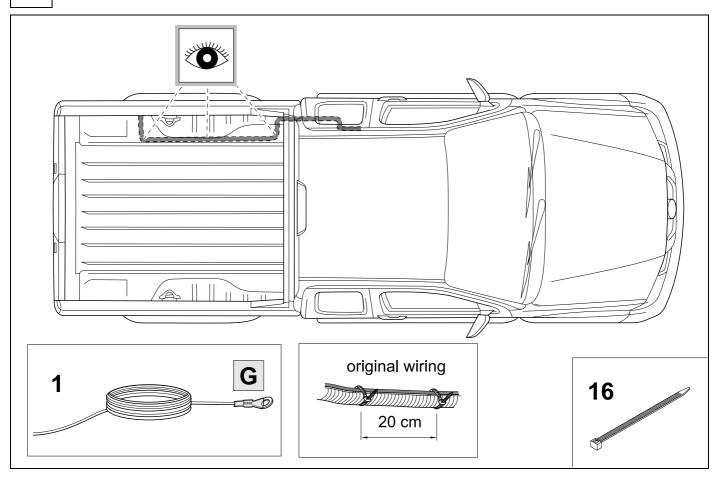


10 OPTION 1

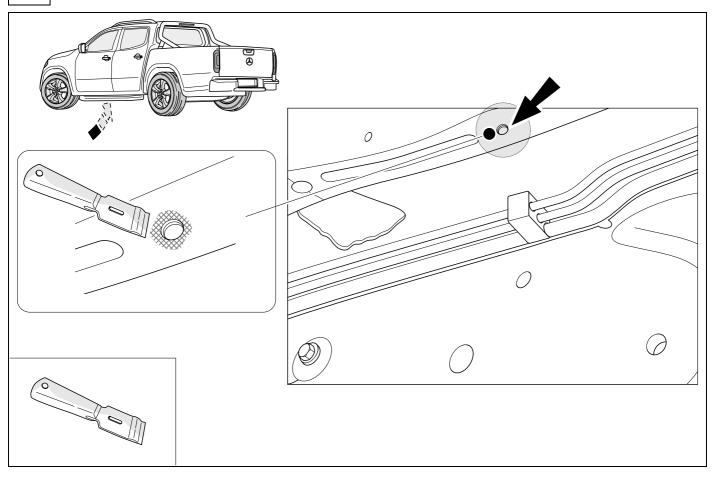

11 OPTION 2

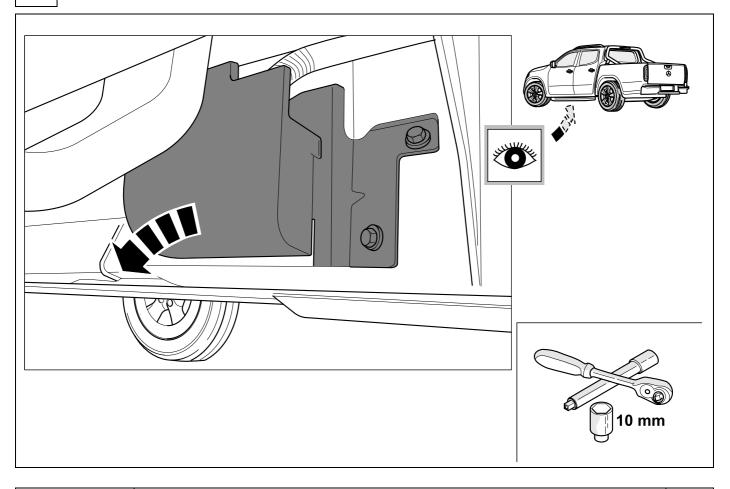

OPTION 2

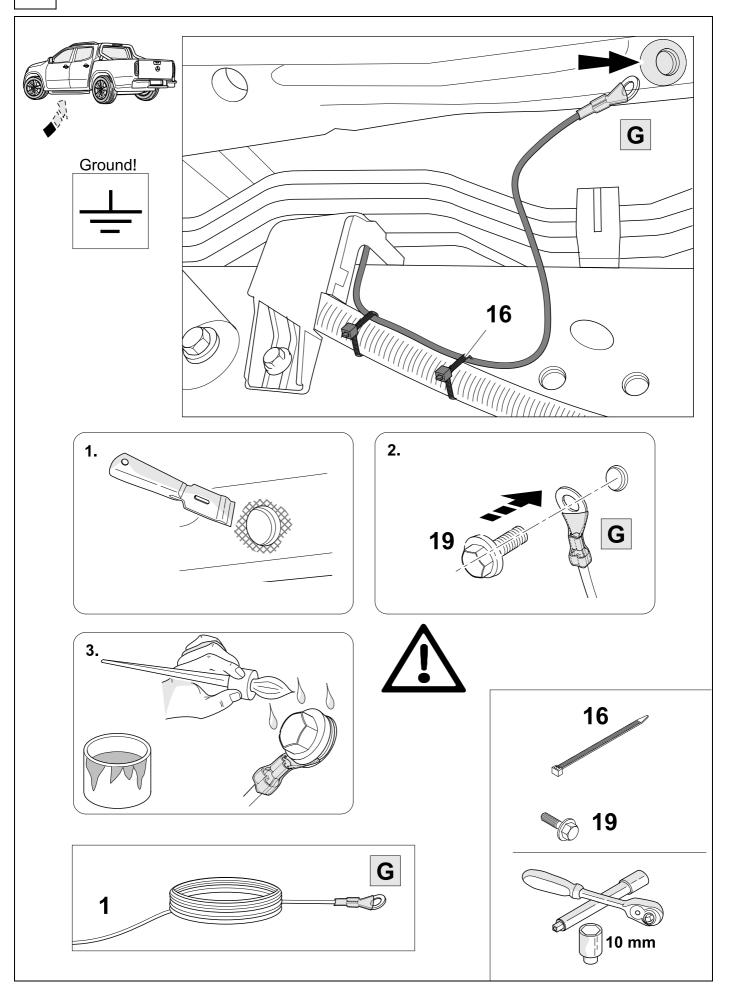


13 OPTIONAL





OPTIONAL





Trailer Brake Preparation

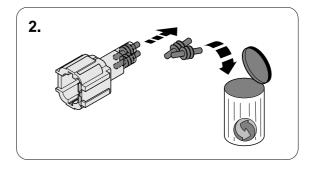


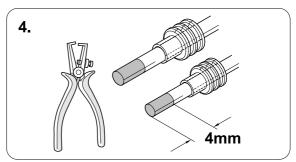


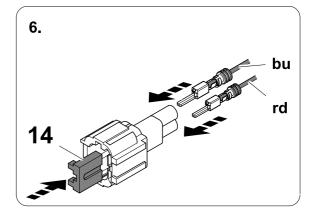


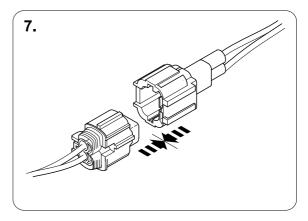

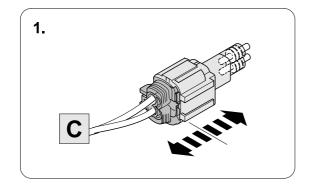


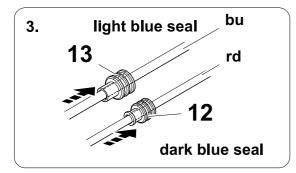

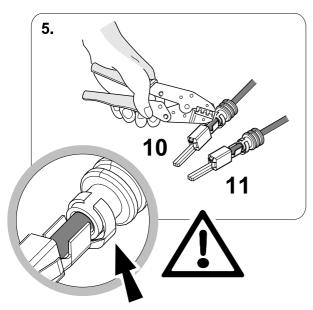


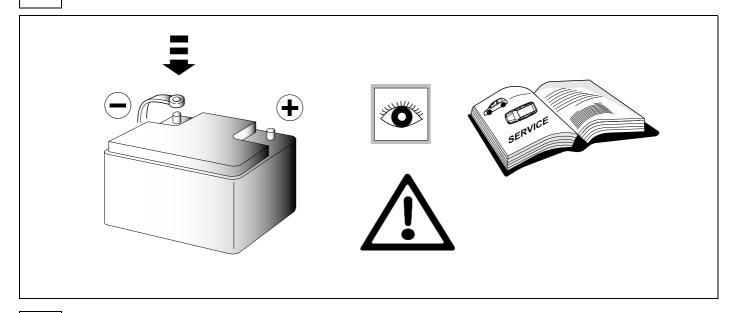

15 CHECK ALL LIGHTING FUNCTIONS

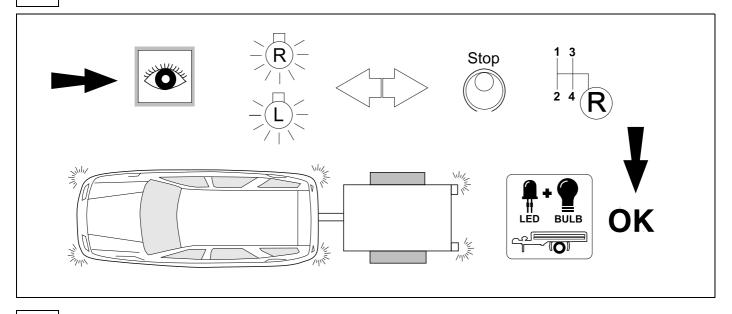


16 CHECK ALL LIGHTING FUNCTIONS

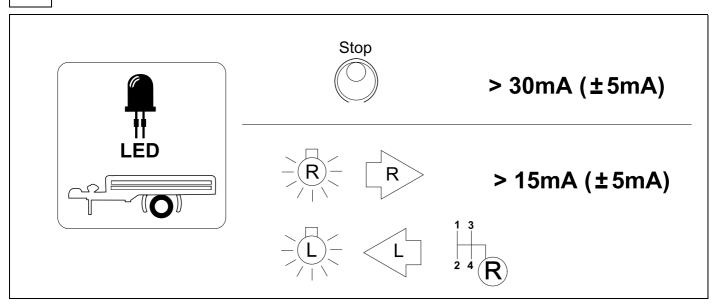



750088b090919B8 11 / 12

17 CHECK BULB OUT DETECTION

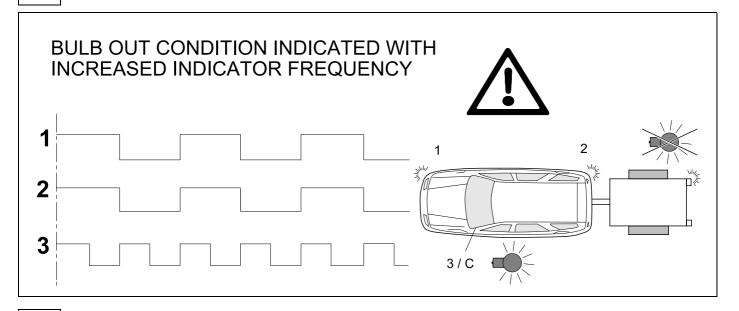

18

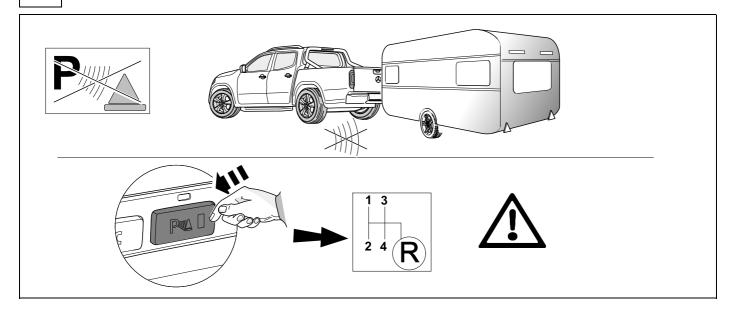

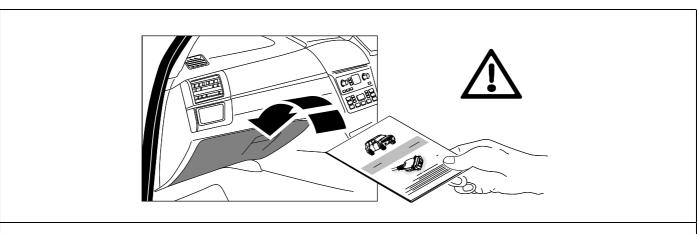

GB

Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.

750088b090919B8 12 / 12