


Towbar Fitting Instructions To Suit NISSAN MAXIMA J31 Part Number DS98 Rating 1200Kg

- 1. Ensure all hardware items have been included
- 2. Fold forward rear-quarter interior trim
- 3. Remove tail lights via removal of the following items
 - a) 3 nuts
 - b) 1 Plastic push-in clip
 - c) Remove tail light
- 4. Remove bumper bar via removal of the following items.
 - a) 1 self-tapping screw from each wheel arch
 - b) 4 Plastic trim buttons from lower bumper lip
 - c) 2 M6 bolts from inside rear quarter
 - d) 1 plastic trim button from underneath each tail light
 - e) Remove bumper bar
- 5. Remove foam support and impact beam
- 6. Remove mounting hats from impact beam and retain 2 nuts and beam
- 7. Lift towbar to back of vehicle and align holes of towbar with back of vehicle
- 8. Fit all bolts as per diagram, fitting nuts on wire through large access holes in towbar
- 9. Tighten all bolts to torque listing
- 10. **NOTE: CUT-OUT** may be required for the bumper bar (100 wide x 60 high) and the centre section of the impact-foam, due to model variances.
- 11. Refit impact beam using 2 M8 bolts and flat washers supplied and 2 nuts retained in step 6
- 12. Refit foam to impact beam
- 13. Refit bumper and taillight in reverse steps 4 through to 2

RECOMMENDED ASSEMBLY

TORQUE LISTING		<u>ISTING</u>
	Diameter	Grade 8.8 Bolt
		Nm
	M6	9.5
	M8	21.7
	M10	43.4
	M12	77.3
	M14	121.0
	M16	189.8

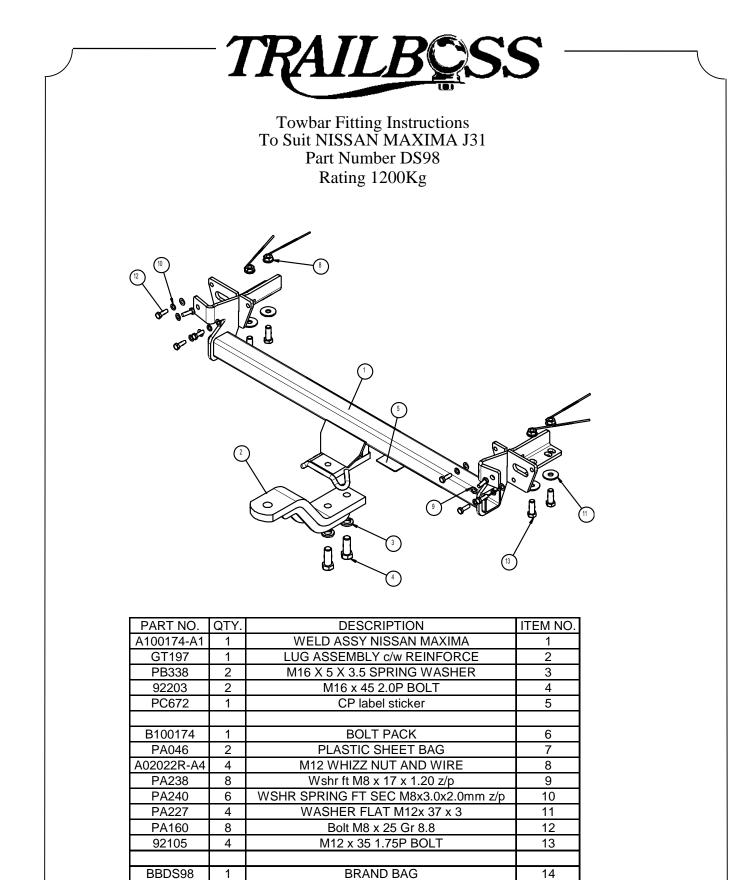

 PC673
 1
 LRL LABEL STICKER

 DS98-FI
 1
 FITTING INSTRUCTION

Page 2 of 1

THE WORKHORSE OF AUSTRALIA'S TOWBARS

Issue Date 28-01-11

15

16