

# TRAILBOSS


Towbar Fitting Instructions  
To Suit HONDA JAZZ AUG 2008-on  
Part Number HN62L  
Rating 1000 kg  
Ball load 70kg

**WARNING:**

1. Do not, drill, cut, weld or otherwise modify the tow bar.
2. If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard computers. If in doubt, check with the vehicle's manufacturer.

**General:**

1. Ensure all hardware items have been included refer to assembly diagram.
2. It is recommended that the instructions are read through and completely understood before making any attempt to fit this product.
3. Be wary of any changes to vehicle designs or other accessories that may conflict with the installation of this product.
4. Before drilling ensure that the area is clear of fuel, electrical & other components.
5. All holes drilled into the body panels shall have all burrs & swarf removed then coated with a suitable rust preventative paint.
6. The high tensile fasteners supplied with this product were used to achieve the specified rating. If replacement is required ensure that fasteners of the same rating & quality are used. Contact an authorized **Trailboss** dealer if further information is required.
7. Ensure that all hardware is fastened to torque list below check fasteners on regular basis.
8. Tow bar load rating sticker provided with this product shall be conspicuously located on inside rear end of the driver's door. **(See diagram below).**
9. Trailboss recommends that you check your tow ball to ensure that it complies with the Australian standards **AS 4177.2**.
10. **PLEASE NOTE:** It is advised to remove your lug or tbn when not actually towing so as to produce a clear view of the vehicles registration plate if obscured, and to also provide maximum available departure angle

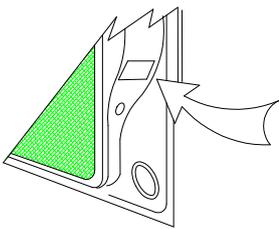

Place load rating sticker  
inside driver's door here

**FOR TOWING PURPOSES ONLY**

For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.

**RECOMMENDED ASSEMBLY TORQUE LISTING**

Diameter    Grade 8.8 Bolt

M6	9.5 Nm
M8	21.7 Nm
M10	43.4 Nm
M12	77.3Nm
M14	146 Nm
M16	189.8 Nm

**Tow bar Maintenance and Care.**

Trailboss recommends that bolt torque's, as listed below, are routinely and regularly inspected and checked for correct tension. Replace any worn or defective parts.

We recommended to remove Tow Ball Mounts (TBM's, tongues or lugs) when not being used for any considerable length of time.

So as to avoid injury, when not towing it is suggested that the tongue, Pull Pin and R-clip are removed then stored in a safe, clean and dry place, away from excessive moisture.

Hitch Pull Pins and spring "R" clips are regularly checked for proper installation. Replace any worn or defective parts.




# TRAILBOSS

## Towbar Fitting Instructions To Suit HONDA JAZZ AUG 2008-on Part Number HN62L

Rating 1000 kg

Ball load 70kg

- 1) Remove Screw from inside rear wheel well on both side.
- 2) Remove 4 Scrivets underneath the bumper skin
- 3) Remove 2 hexagon Screws inside rear boot cavity on both sides. The bumper skin is now ready to be separate from the vehicle.
- 4) On passenger side rear panel, cut out the panel to access chassis rail.
- 5) Remove two M8 Screws and discard.
- 6) Use 10mm drill, enlarge 2 existing holes above drive side towing hook mount.
- 7) Use 13mm drill, enlarge forward existing hole below drive side towing hook mount.
- 8) Offer Towbar to the vehicle, loosely secure passenger side using M8x25 Bolt, M8 Spring Washer, and M8 flat Washer.
- 9) Loosely secure Towbar to chassis rail using M10x30 Bolt, M10 Spring Washer, and M10 flat Washer. Note, you may enlarge the hole to suit if required.
- 10) Using M10x90 Bolts, Flat Washers, and spacer tube, insert from under side and loosely secure driver side arm to towing hook mount with M10 Nuts, M10 Spring Washer, and M10 Washer.
- 11) Using M10x40 Bolt and 3mm spacer plate, insert via the front of centre mounting panel. Align 5mm spacer plate between Towbar and rear panel. Secure M10x40 Bolt using 3mm spacer plate and M10 whiz Nut.
- 12) Tighten all nuts and bolts to specific torque recommended on page 1.
- 13) From inside Bumper skin locate the centre point, cut 90mm wide section up to the original bumper indent mark shown inside the bumper skin. Refit bumper in reverse steps.

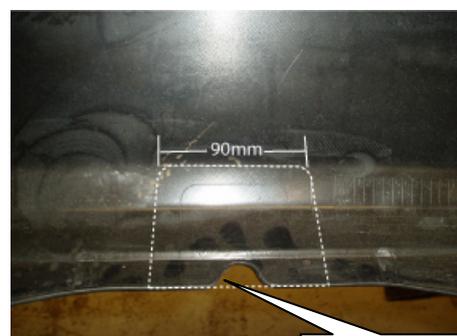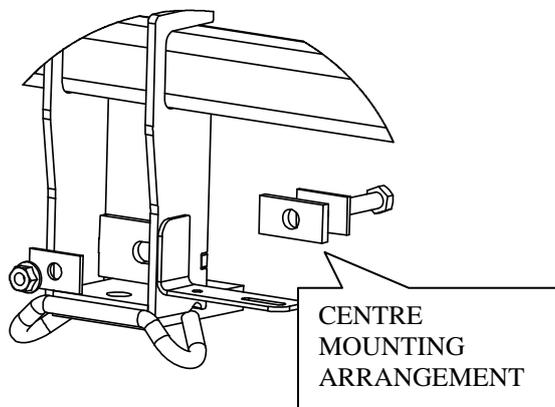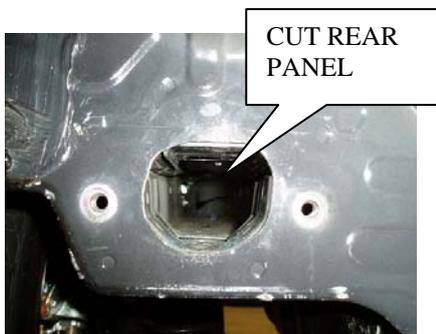



Wiring Loom Fitting Instructions  
To Suit Honda GE Jazz  
(2008 – Onwards)  
Part Number: 100653-WL

## Wiring Loom Installation Instructions

Honda GE Jazz  
(2008 – Onwards)  
Part No: 100653-WL

Tail Harness Length Required: 1200mm  
RPA Override Switch Part No: 04848 (If Fitted)

Wiring Loom Installation Time: Approx 60 Mins

Wiring Loom Fitting Instructions  
To Suit Honda GE Jazz  
(2008 – Onwards)  
Part Number: 100653-WL

1. In the luggage compartment, remove the parcel shelf and fold the rear seats forward.
2. Remove the floor cover carpet.
3. Remove the rear luggage compartment trim.
4. Remove the RHS luggage compartment trim by first removing the fastener.
5. Remove the LHS access panel cover.
6. Remove the RHS grommet (1) located on the rear of the luggage compartment, as shown in the image below.



7. Drill out the grommet hole to Ø31mm.
8. File any rough or sharp edges and spray on rust inhibitor.
9. Route the Trailer Harness (P/No: 100653-WL) up towards the LHS tail light connectors.
10. Disconnect the LHS tail light 3-way connectors and patch in the Trailer Harness mating 3-way connectors.
11. Following the path of the existing vehicle harness, route the Trailer Harness along the rear of the luggage compartment and towards the RHS of the vehicle.
12. Route the Trailer Harness up towards the RHS tail light connectors.
13. Disconnect the RHS tail light 2-way connectors and patch the Trailer Harness mating 2-way connectors in between.
14. Disconnect the RHS tail light 3-way connectors and patch the Trailer Harness mating 3-way connectors in between.



Wiring Loom Fitting Instructions  
To Suit Honda GE Jazz  
(2008 – Onwards)  
Part Number: 100653-WL

15. Disconnect the RHS tail light 4-way connectors and patch the Trailer Harness mating 4-way connectors in between.
16. Mount the trailer socket to the towbar mounting bracket using M4 fasteners (not supplied).
17. Route the Tail Harness (tail length 1200mm) across the towbar, towards the RHS of the vehicle and up through the previously drilled out hole.
18. Ensure the Tail Harness grommet is seated correctly and secure in place using a cable tie (not supplied).
19. In the luggage compartment, connect the Tail Harness 8-way connector to the Trailer Harness mating 8-way connector.
20. Test the Trailer Harness function using a Light Board or multi-meter.
21. Secure all Harnesses using cables ties (not supplied).
22. Re-fit all removed parts and secure all fasteners, ensuring there are no squeaks or rattles.
23. Place the instructions in the glove box after fitment.