



Towbar Fitting Instructions
To Suit **HYUNDAI SONATA NF SEDAN 01-06-05-ON**
Part Number HY21
Rating 1700Kg

WARNING:

1. Do not, drill, cut, weld or otherwise modify the tow bar.
2. If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard computers. If in doubt, check with the vehicle's manufacturer.

- 1 Ensure all hardware items have been included.
- 2 Four cylinder models only, remove plastic panel from underside of passenger rear floor pan.
- 3 Remove rear bumper bar via;
 - a) Remove boot latch trim panel & fold quarter panel trim forward.
 - b) Remove 2 bolts from each quarter panel & tail light assembly on each side.
 - c) Remove 2 bolts per side from boot floor area holding bumper irons.
 - d) Remove 4 self tapping screws & 8 plastic trim buttons from top edge of bumper behind boot lid & taillights.
 - e) Remove 3 self trappers at each wheel arch & mud flaps where fitted.
 - f) Remove 4 nuts from spare wheel well then remove bumper.
- 4 Remove muffler from 2 rears most rubber hangers.
- 5 Remove 3 rears most nuts holding the heat shield.
- 6 Lift tow bar into position as to align with holes tapped holes in the side of sub frames.
- 7 Fit hardware supplied as per diagram loosely, and then fasten to torque listing below.
- 8 Cut bumper as per instructions see figs 1, 2 & 3.
- 9 Remove then discard support arms as instructions see fig 4.
- 10 Refit bumper in the reverse of steps 5 to 3.

RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>
	Nm
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M14	121.0
M16	189.8

FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.

Towbar Fitting Instructions
To Suit **HYUNDAI SONATA NF SEDAN 01-06-05-ON**
Part Number HY21
Rating 1700Kg

FIG 1

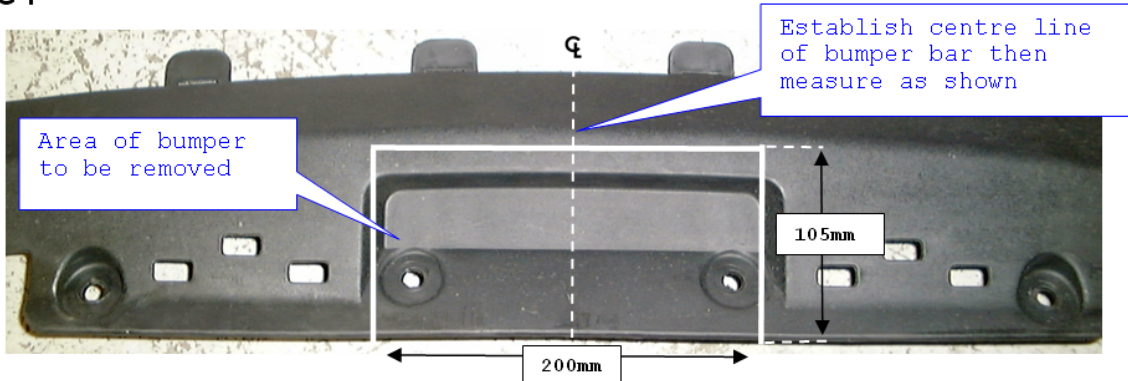


FIG 2

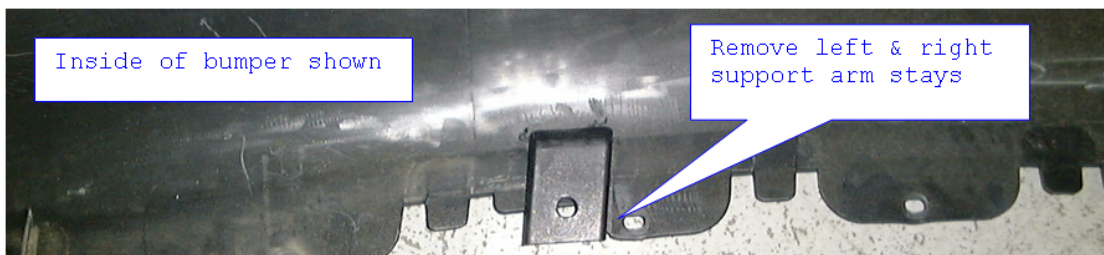


FIG 3


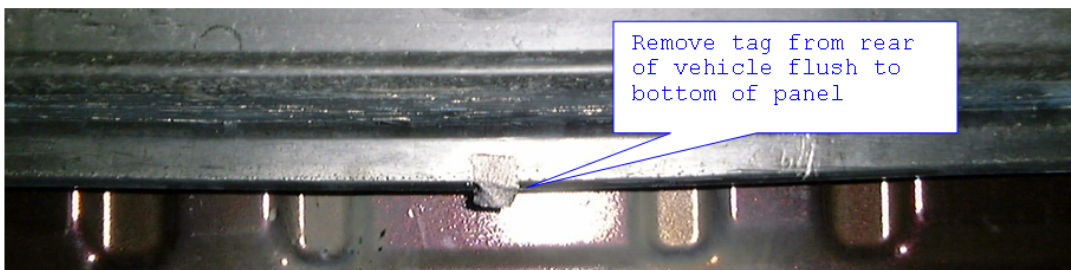


FIG 4





Towbar Fitting Instructions
To Suit **HYUNDAI SONATA NF SEDAN 01-06-05-ON**
Part Number HY21
Rating 1700Kg

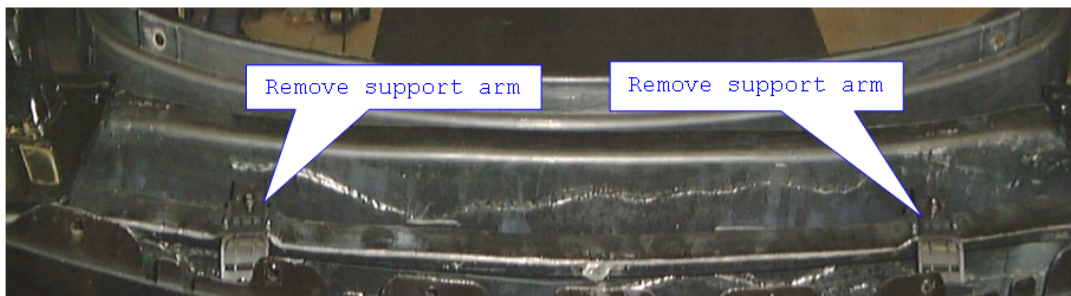