



Tow bar Fitting Instructions
To Suit Chrysler Jeep Grand Cherokee 06-05-ON
& JEEP COMMANDER XH 06/2006-ON
Part Number QTJP9
Rating 3500kg

WARNING:

1. Do not, drill, cut, weld or otherwise modify the tow bar.
2. If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard computers if in doubt, check with the vehicle's manufacturer.

- 1 Ensure all hardware items have been included
- 2 Remove spare wheel.
- 3 Remove four plastic trim buttons from underside of bumper.
- 4 Remove seven 6mm bolts & one plastic trim button from metal trim behind bumper.
- 5 Flex bumper rear ward & remove metal trim.
 - a) NOTE: No bumper cutout is required.
- 6 Offer tow bar to vehicle by flexing bumper rearward.
- 7 Insert 4x Spacer tubes through existing holes in chassis wall, place towbar (mounting plate) over chassis wall aligning holes in chassis wall with mounting plate holes.
- 8 Insert four M12 x 100 bolts, flat & spring washers through spacer tubes as per diagram on next page.
- 9 Cut metal trim as per Figure 1, on page 2.
- 10 Refit four plastic trim buttons to underside of vehicle.
- 11 Refit spare tyre.
- 12 Tighten all bolts to torque listing below.

FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicles owners' manual or to the manufacturer. Overloading can void your warranties.

RECOMMENDED ASSEMBLY TORQUE LISTING

Diameter Grade 8.8 Bolt

	Nm
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M16	189.8

TRAILBOSS

Tow bar Fitting Instructions To Suit Chrysler Jeep Grand Cherokee 06-05-ON & JEEP COMMANDER XH 06/2006-ON Part Number QTJP9 Rating 3500kg

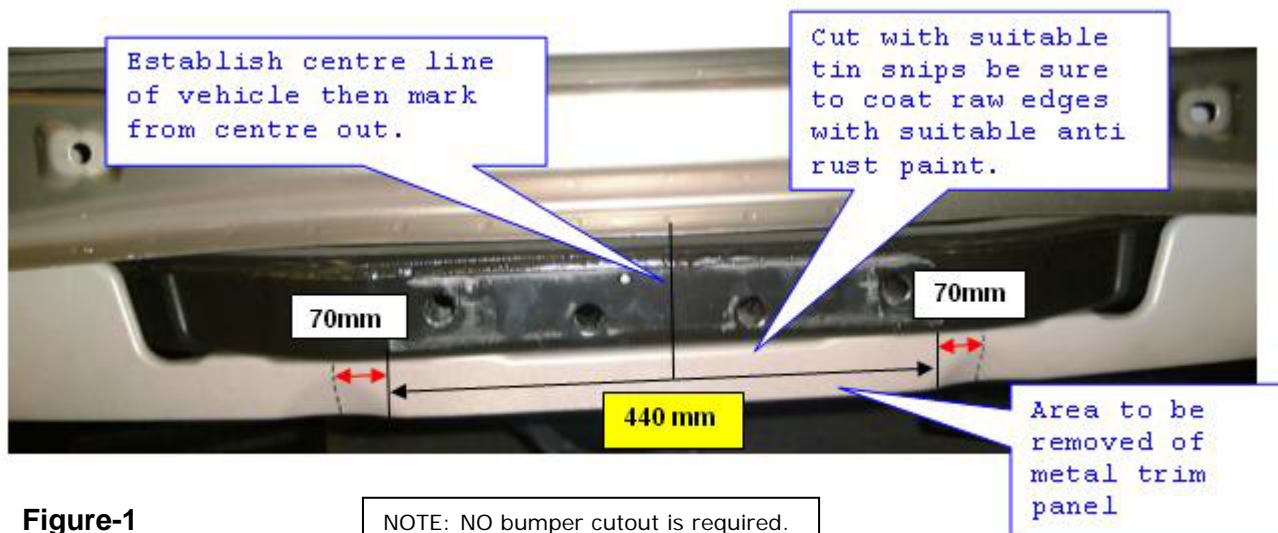


Figure-1

