



Towbar Fitting Instructions
To Suit TO SUIT HOLDEN EPICA
Part Number HD86
Rating 1200kg

WARNING:

Do not, drill, cut, weld or otherwise modify the Towbar.

If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard **computers**. If in doubt, check with the vehicle's manufacturer.




CAUTION TWO PERSON LIFT REQUIRED TO FIT THIS PRODUCT

General:

1. Ensure all hardware items have been included
2. It is recommended that the instructions are read through and completely understood before making any attempt to fit this product.
3. Be wary of any changes to vehicle designs or other accessories that may conflict with the installation of this product.
4. Follow steps below to remove the bumper:
 - a). Remove 4 tabs on the rear bottom of the bumper bar.
 - b). Unscrew 6 bolts, 3 each on both sides of the vehicle from the mud flaps as shown in figures 1, 2 & 3.
 - c). Remove 2 screws as shown in Figure 4, from the side of the tail lamp on both sides.
 - d). Remove tail lamp, after unplugging the light globes as shown in figure 5.
 - e). Remove 1 tab below the tail lamp on both sides as shown in figure 5.
 - f). Remove two tabs from the inside of the boot, as shown in figure 6, so as to remove the top panel.
 - g). Remove rear bumper.
5. Follow steps below to remove the impact beam & discard it.
 - a). Remove the two rubber plugs on both sides as shown in figure 7, in-order to gain access to the panel below.
 - b). Remove the four bolts as shown in figure 8 & discard them.
 - c). Remove the wiring, attached to the impact beam as shown in figure 9 & use the cable ties provided to attach the wiring on to the towbar after installation.
 - d). Remove impact beam shown in figure 10 & discard.
6. Remove the bolt as shown in figure 11, in-order to remove the charcoal canister on the driver side.
7. Lower the exhaust from the two rearmost rubber mounts.
8. Remove the 2nd rearmost bolt from the towing hook as shown in figure 12 & 2nd rearmost bolt from the exhaust hanger.
9. Lower the exhaust from the two rearmost rubber mounts.
10. Lift the towbar into position & insert the side arms of the towbar into the chassis as shown in figure 13.
11. Line up the holes on the towbar to the holes of the vehicles, as seen from the inside of the boot. Line up the packer assembly & the loose plates as shown in figure 14 & 15, and insert the M10 x 65 bolts provided with the boltpack.
12. Use the smaller loose plate to insert the third bolt from the bottom of the chassis as shown in figure 16.
13. Tighten all nuts & bolts to the specified torque listing.
14. Refit the bumper as in reverse of step 4.
15. Use bumper brackets provided on the towbar to put the bumper tags back on.
16. The high tensile fasteners supplied with this product were used to achieve the specified rating. If replacement is required ensure that fasteners of the same rating & quality are used.
17. Ensure that all hardware is fastened to torque list below check fasteners on regular basis.
18. **PLEASE NOTE:** It is advised to remove your lug or TBM when not actually towing so as to produce a clear view of the vehicles registration plate if obscured, and to also provide maximum available departure angle.
19. Towbar load rating sticker provided with this product shall be conspicuously located on inside rear end of the driver's door. **(See diagram below).**

TRAILBOSS

Towbar Fitting Instructions To Suit TO SUIT HOLDEN EPICA Part Number HD86 Rating 1200kg

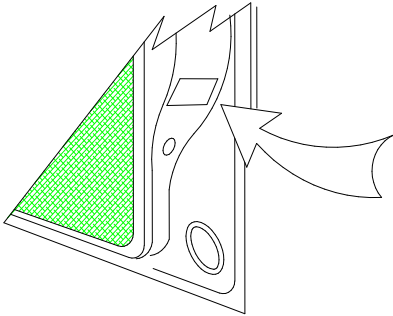

Place load rating sticker
inside driver's door here

RECOMMENDED ASSEMBLY TORQUE LISTING Diameter Grade 8.8 Bolt

M6	9.5 Nm
M8	21.7 Nm
M10	43.4 Nm
M12	77.3 Nm
M16	189.8 Nm

FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicle
owner's manual or to the manufacturer. Overloading
can void your warranties.


Fig 1, 2 & 3: Shows bolts that need to be removed from the side mudflaps of the vehicle



Fig 4: Two screws beside tail lamp shown.



Fig 5: Remove tab shown below.

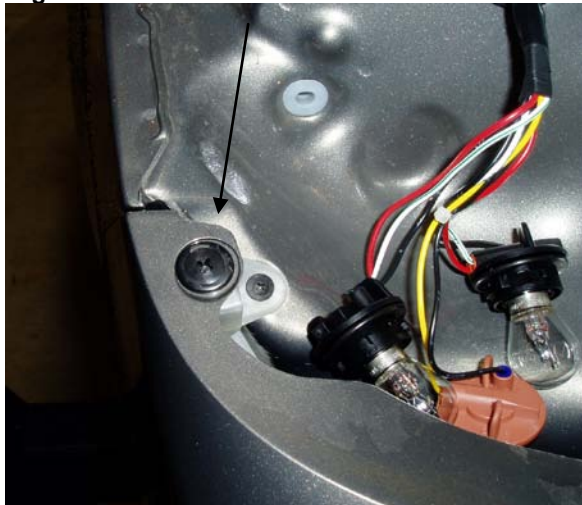

TRAILBOSS

Towbar Fitting Instructions To Suit TO SUIT HOLDEN EPICA Part Number HD86 Rating 1200kg

Fig 6: Remove 2 tabs from inside of boot.



Fig 7: Remove rubber plugs shown below.



Fig 8: Remove 4 bolts as shown from inside of boot.



Fig 9: Remove wiring & wrap it around towbar using cable ties provided if necessary.



Fig 10: Remove & discard impact beam shown.

Fig 11: Remove charcoal canister, by removing bolt at the bottom of the figure shown.



TRAILBOSS

Towbar Fitting Instructions To Suit TO SUIT HOLDEN EPICA Part Number HD86 Rating 1200kg

Fig 12: Remove bolt shown on both sides.



Fig 13: shows towbar being fitted on.



Fig 14: Line up the packer assembly as shown below.



Fig 15: shows towbar mounted from inside of boot.

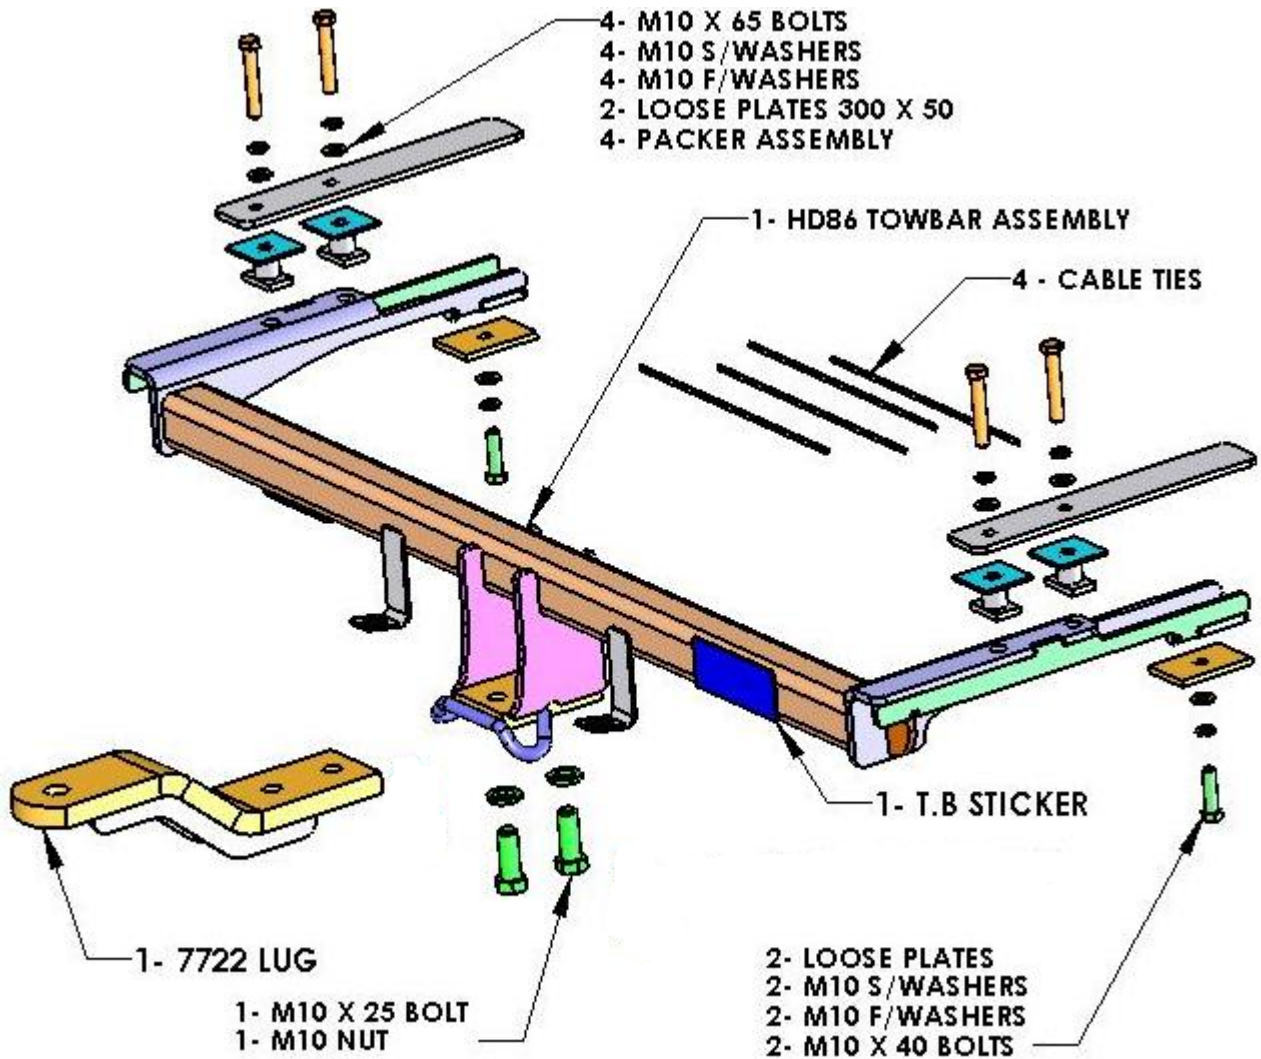


Fig 16: Shows towbar being mounted up from bottom of chassis.



Towbar Fitting Instructions
 To Suit TO SUIT HOLDEN EPICA
 Part Number HD86
 Rating 1200kg

HD86 TOWBAR ASSEMBLY



Tow bar Maintenance and Care.

Trailboss recommends that bolt torque's, as listed below, are routinely and regularly inspected and checked for correct tension. Replace any worn or defective parts.

We recommended to remove Tow Ball Mounts (TBM's, tongues or lugs) when not being used for any considerable length of time.

So as to avoid injury, when not towing it is suggested that the tongue, Pull Pin and R-clip are removed then stored in a safe, clean and dry place, away from excessive moisture.

Hitch Pull Pins and spring "R" clips are regularly checked for proper installation. Replace any worn or defective parts.